

EazyRF V4.76

Intermodulation calculation

User Guide

Table of contents

1 - Presentation	9
1.1 Launching.....	10
1.2 Devices List	14
1.3 Device Group	16
1.4 Mode of calculation	17
1.5 Group - Section - Device	21
1.6 Television Channels.....	24
1.7 Digital Audio Broadcasting	25
1.8 Interferences.....	25
2 - Global View	27
2.1 Devices	28
2.1.1 Export / Import / Delete Devices	32
2.1.1.1 Export Devices	32
2.1.1.2 Import Devices	33
2.1.1.3 Delete Devices	34
2.1.2 Devices indicators.....	36
2.2 Devices Groups	37
2.2.1 Devices Groups V1.....	37
2.2.2 Devices Groups V2.....	38
2.2.2.1 Import Devices Groups V2	41
2.2.2.2 Export Devices Groups V2	43
2.3 Details.....	45
2.4 Evaluation parameters	48
2.4.1 Tolerance 2 TX	48
2.4.2 Tolerance 3 TX	48
2.4.3 Separation	48
2.4.4 Image Frequency	49

2.4.5 Filter	49
2.4.6 Start, Stop and Increment	49
2.5 Selection	50
2.6 Toolbar	51
2.6.1 File management.....	51
2.6.2 Printing.....	54
2.6.3 Document TV channels	55
2.6.3.1 Video Standard.....	56
2.6.3.2 North America Frequency Rejection Zone.....	56
2.6.3.3 Frequency rejection zone in Europe.....	58
2.6.3.4 Channels name.....	60
2.6.3.5 Clear, Read and Save Channels.....	60
2.6.3.6 Channels Import.....	60
2.6.3.7 Import scans.....	62
2.6.3.8 Management of TV channels on groups.....	63
2.6.4 Modified video standard country.....	67
2.6.5 Document Options	69
2.6.6 DAB – Digital Audio Broadcasting.....	71
2.6.7 Available Frequencies	74
2.6.8 Clipboard.....	75
2.6.9 Off function	75
2.6.10 Blocked / Released Frequencies.....	76
2.6.11 Undo / Redo	76
2.6.12 Notes / Changes	77
2.7 Notes	77
2.7.1 Notes – Global View	77
2.7.2 Note editor.....	80
2.7.3 Notes – Detailed View.....	82
2.7.4 Notes – Document	82
2.7.5 Notes – Frequencies Plan	83

2.7.6 Notes – Multi-Scenes.....	83
2.8 Edition of a Device	84
2.8.1 Device scans	86
2.8.1.1 Device Scans – Results analysis.....	90
2.8.1.2 Device Scans – Threshold detection	92
2.9 Client Report creation	95
2.9.1 Print Details	96
2.9.2 Client Informations.....	97
2.9.3 Header	98
2.10 Creating WinRadio or Shure WWB7 marker list	98
2.11 Creation of Wisycom frequency list	100
2.12 Sennheiser – Shure – Wisycom – Lectrosonics Equipment	104
2.12.1 Sennheiser Equipment	105
2.12.2 Shure Equipment.....	110
2.12.3 Wisycom Equipment.....	113
2.12.4 Lectrosonics Equipment	115
2.12.5 List Devices and Names	118
2.13 Background color – Group/Section/Device/Frequencies.....	119
2.13.1 Frequency Background Color - Global and Detailed View	120
2.13.2 Background Color Frequencies - Device Editor	121
2.13.3 Frequency Background Color - Document List.....	123
2.14 Group / Section menu	123
2.14.1 Collapse / expand	123
2.14.2 Search Device, Section or Group	124
2.14.3 Classification of section names in alphabetical order	125
2.15 Evaluate commands	126
2.15.1 Evaluate Frequencies list	126
2.15.2 Evaluate Devices.....	126
2.15.3 Manual Evaluation.....	126
2.15.4 Recalculate (frequencies)	127

2.15.5 Clear (data).....	131
2.16 Shortcuts.....	133
3 - Detailed View	135
4 - Frequencies Plan.....	137
4.1 Transfer to Excel.....	139
4.2 Transfer to Wisycom Manager.....	140
4.3 Create list of markers for WinRadio.....	140
4.4 Create list of markers for Shure WWB7	141
4.5 View detachment to a window (2 nd screen)	141
5 - Intermodulations.....	143
5.1 Toolbar	143
5.2 Devices.....	144
5.3 Global Frequencies.....	146
5.4 Detailed Frequencies.....	147
5.5 Scale and Spread	150
5.6 Interferences.....	150
5.6.1 Sampling edition	155
5.6.2 RF Explorer	160
5.7 Scans File Manager.....	164
5.8 Print	167
5.9 View detachment to a window (2 nd screen)	167
5.10 Frequencies spectrum manager.....	168
5.10.1 Module detachment to a window (2 nd screen)	173
6 - Spectrum View	175
6.1 View detachment to a window (2 nd screen)	177
7 - On Tour	179
7.1 View detachment to a window (2 nd screen)	185
8 - Multi-Scenes.....	187

8.1 Presentation	187
8.2 Multi-scenes construction	191
8.3 Partial Evaluation	194
8.4 Group, Section and Devices – Background color	196
8.5 Display of intermodulations	197
8.6 Devices and section On Hold	198
8.7 Notes	199
8.8 Global Spectrum	200
8.9 Interferences.....	201
8.10 Auto-Interferences between Scenes Editor.....	206
8.11 Device Edition	209
8.11.1 Frequencies used.....	211
8.12 Printing	212
8.13 Frequencies Plan view	215
8.14 Intermodulations view	216
8.15 Spectrum view	217
8.16 Changes in schedule	218
8.17 Day Completed.....	221
8.18 Day in Solo	222
8.19 Recalculate frequencies.....	223
8.20 Delete data	226
9 - Classification.....	229
10 - Options	231
10.1 TV Channels	231
10.1.1 Reject zone	234
10.1.2 Channels importation	235
10.1.3 Video standard	237
10.2 Frequencies Type	241
10.3 Options Startup/Global	242

10.4 Devices.....	246
10.5 Devices Update	251
10.6 Additional Devices.....	254
10.7 Devices group.....	255
10.8 Devices group – Update.....	259
10.9 Additional Devices Groups.....	260
10.10 TX Power – Adjust Influence	261
10.11 License Management.....	264
10.11.1 Purchase of a new license	265
10.11.2 Renewal of a license	268
10.11.3 Reactivating a license	269
11 - Automatic Update EazyRF.....	271
11.1 Renewal of Technical support.....	272
Appendix 1 – Reading IAS files.....	275
Appendix 2 – WMAS Devices	277
Shure ADPSM.....	277
Definition of an ADPSM device	277
Using an ADPSM device	279
Equipment Module	281
Devices List.....	281
Sennheiser Spectera	281
Definition of a Spectera device	282
Using a Spectera device	284
Transmit frequencies	285
Using a Spectera device	287
Devices list	289

1 - Presentation

Version 4 of EazyRF is the continuation of version 3 with all its facilities and new features.

The presentation was first improved, the views have more color to put the sections more in evidence.

The list of Variable Frequencies devices and Fixed Frequencies devices have been merged for greater flexibility.

A new Device Group list is added to EazyRF. It is thus possible to group together devices and assign frequencies simultaneously.

Here are some examples: a BTR-800 A2 group contains the BTR-800 A2-TX and the BTR-800 A2-RX, an ABC Theater group contains all the devices in this theater, and the assigned frequencies can be included for each device.

There is no limit on the number of devices in a group.

Searching for a device in the device list can now be done more easily. For example, a search can be done for a microphone type device whose starting frequency is greater than one value, or less than another, or between two values.

EazyRF can transfer data to Wisycom Manager software (Frequency Table), either by the clipboard, by saving a file (.xwdf), or directly in the "Frequency Table" window.

Finally, other tools have been added: automatic start frequency of devices, the frequencies are not necessarily assigned consecutively from one type of device to another, as far as possible; two versions of a document can now be compared.

EazyRF now uses the .NET Framework 4.5.

We find of course all the features of version 3 without having messed up the layout of commands, no need to relearn where are the functions of EazyRF, no loss of efficiency.

So we always have the same facilities: ATSC video standard, PAL and SECAM, reading files created by frequency samplers (scanner) from several manufacturers, with this data we can create interferences list or TV channels; modules Global View, Detailed View, Frequency Plan, Spectral View, On Tour.

EazyRF always requires a USB key to validate the username and its activation code. The key must remain in place during program execution. A license file can also be used but it is linked to a hardware configuration (one and only one system). More information on the eazyrf.com website.

The USB key is available in two formats, USB-A (standard) and USB-C:




To install EazyRF, download the application on the site : <http://eazyrf.com/english/windows.html>. It is necessary to install the version adequate to your operating system Windows (32 or 64 bits), otherwise the drivers of the USB key will not work.

A new directory is created when you install version 4, which is C:\Program Files (x86)\EazyRF V4. Versions 3 and 4 can be installed on the same computer (version 3 is installed in the C:\Program Files (x86)\EazyRF V3.2 directory).

Now look at this environment.


1.1 Launching

At starting up the following screen appears:

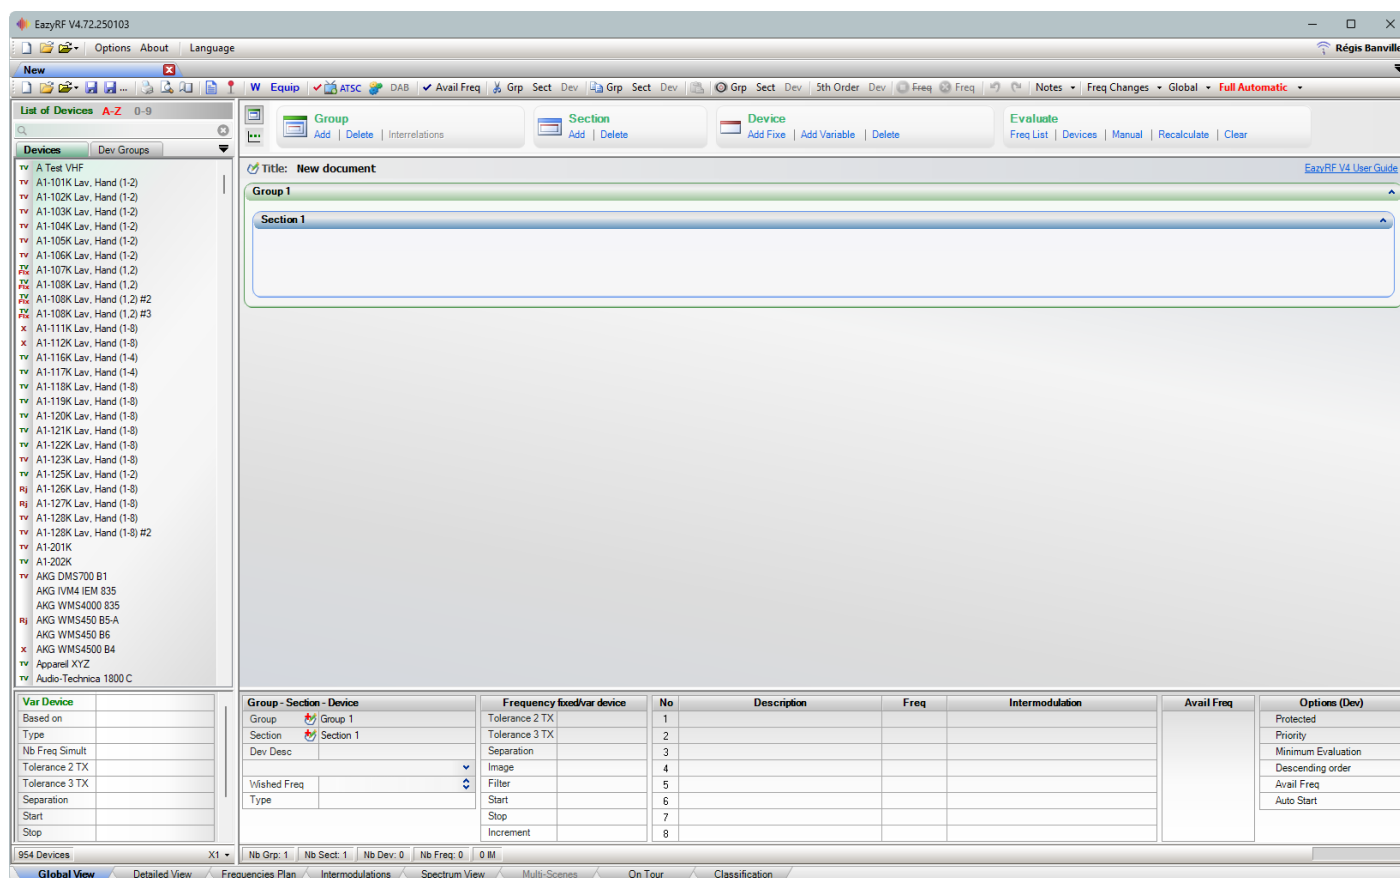


By default, EasyRF uses the maximum available screen space. The reduction of the image in this guide does not allow to see adequately the contents. EasyRF fits automatically with the available screen size (the minimal resolution is 1366 x 768).

According to the width of the screen, the buttons of the toolbar adapt themselves. With the minimal resolution, it takes this shape:

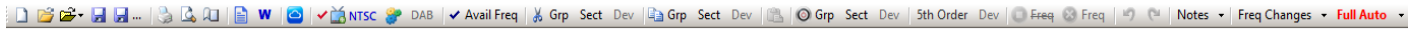

Or if the resolution is higher:

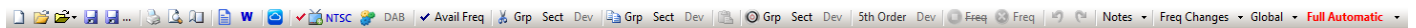

According to the available width, the least used controls are removed (more details in Global View).

The detail zone of a device (Global View) also varies with the height of the screen. In its simplest form:

Group - Section - Device	Frequency fixed/var device	No	Description	Freq	Intermodulation	Avail Freq	Options (Dev)
Group	Tolerance 2 TX	1					Protected
Section	Tolerance 3 TX	2					Priority
Dev Desc	Separation	3					Minimum Evaluation
	Image	4					Descending order
Wished Freq	Filter	5					Avail Freq

Or in its most detailed form:

Group - Section - Device	Frequency fixed/var device	No	Description	Freq	Intermodulation	Avail Freq	Options (Dev)
Group	Tolerance 2 TX	1					Protected
Section	Tolerance 3 TX	2					Priority
Dev Desc	Separation	3					Minimum Evaluation
	Image	4					Descending order
Wished Freq	Filter	5					Avail Freq
Type	Start	6					Auto Start
	Stop	7					
	Increment	8					

At starting up, the "Global View" is activated. The View Bar components (bottom completely) allow to change views:



The "Global View" component is the overview of all devices in the document. The chapter 2 explains it in detail. The "Detailed View" display the frequencies of all devices, see chapter 3.

The component "Frequencies Plan" display the details of all devices continuously (like an Excel spreadsheet) and allow changes to the display (text size, color, etc..). See chapter 4.

The "Intermodulations" pane shows the frequency spectrum occupied by all devices. It consists of an overview and a detailed view. The detailed view shows the intermodulation between the frequencies. Moreover, this view allows you to edit the frequency by moving them with the mouse. This component also allows for editing of devices of the document (adding, deleting). More detail in chapter 5.

The "Spectral View" pane visualize the spectral space occupied by all devices and TV channels. More details in chapter 6.

The component "On Tour" is responsible for the preparation of a compatible frequency plan on tour, i.e. in several cities. More details in chapter 7.

Finally, the component "Classification" shows the order of evaluation of devices, details in chapter 8.

EazyRF is a software that allows you to edit multiple documents simultaneously. Control bar at the top part of the application is used to manage the creation of additional documents (new or opening):



These commands always add a new tab to the documents bar.

In addition, the only system commands are found in this area: "Options", "About" and "Language".

The "Options" command will be explained in chapter 8.

The "About" command displays the Welcome window:



The "History" command displays the history of EazyRF updates:

EazyRF V4 update history




EazyRF V4

Update history

Date	Version	Detail
04/08/25	4.76.250408	WMAS Devices Management Sennheiser Spectera and variable spacing between independent groups
02/16/25	4.75.250216	WMAS Devices Management Shure ADPSM
01/20/25	4.73.250120	Technical support renewal, list of markers with group, section or device colors
12/04/23	4.72.231204	Modified video standard country: Australia and New Zealand
08/14/23	4.71.230814	Group interferences
07/10/23	4.70.230710	New group interrelations, group scans, section or group search, new device list
04/19/23	4.68.230419	Managing TV Channels on Groups
03/01/23	4.67.230301	Reading IAS files, search devices, Band 941-960 MHz
02/17/23	4.66.230217	Export/Import/Delete devices, Save expand/collapse document liste, Band 71 ATSC support
02/01/23	4.65.230201	Automation of license file creation
12/12/22	4.63.221212	Changes to Video Standard Nomenclature
12/05/22	4.62.221205	Frequencies spectrum manager
11/16/22	4.61.221116	Create marker list for WinRadio
09/09/22	4.61.220909	Multi-Scenes: Day Completed, Day in Solo
08/05/22	4.61.220805	Simplified TV channels (SECAM), Background color appearance, Multi-Scenes: Devices on hold, background color display,...
05/23/22	4.60.220523	Import/Export Devices Groups. Partial Evaluation in section in Multi-Scenes
03/28/22	4.57.220328	Sampling files edition
01/04/22	4.56.220104	Recalculation of the frequencies of a standard or multi-scenes document
12/01/21	4.55.211201	Device group V2, On Tour scanning management for each city
09/05/21	4.50.210905	Reading data files Shure AXT600 .sd3, .sdb2 and .sdb
08/22/21	4.50.210822	Device, section, group and document notes. Multi-Scenes: used frequencies.
05/31/21	4.42.210531	Compressed data files
05/27/21	4.41.210527	RF Explorer PLUS SLIM compatibility, reading .rfe V5 file
04/26/21	4.41.210426	On Tour: modifications cities list editor
03/25/21	4.40.210325	Device editor: Next/Previous, analysis according to samples. Calculation of frequencies in function of sampling data. Updat...
02/15/21	4.32.210215	ATSC TV channels: reject 600 MHz band with two duplex zones
12/01/20	4.31.201201	Delete data from a Multi-Scene document
11/24/20	4.31.201124	Delete data from a document
06/02/20	4.30.200602	Scans file manager
04/02/20	4.25.200402	View detachment to a window or second screen, Auto-Interferences between Scenes
02/15/20	4.22.200215	Electronic signature of files
01/30/20	4.22.200120	Dev and Gp dev from internet sorted by default in descending order of date
12/11/19	4.22.191211	Read update files of devices and device groups via the internet
11/04/19	4.21.191104	Read RF Explorer directly
10/23/19	4.20.191023	Read sample data from Shure shw files
10/06/19	4.20.191006	Change device type on protected device, tv channels print in report
10/04/19	4.20.191004	Sennheiser - Shure - Wisycom - Lectrosonics equipments
08/13/19	4.12.190813	Multi-Scenes: editable Auto-Interferences, Device editor: complete intermodulation detail
07/29/19	4.11.190729	Allocation TV channels frequencies in France, DAB import of channels according to geolocation
07/25/19	4.10.190725	DAB, Multi-Scenes Header print
02/11/19	4.01.190211	Device editor Undo/Redo
12/18/18	4.00.181218	Extended background color
12/10/18	4.00.181210	Background color
12/05/18	4.00.181205	EazyRF V4 launch

OK

The "Language" command :

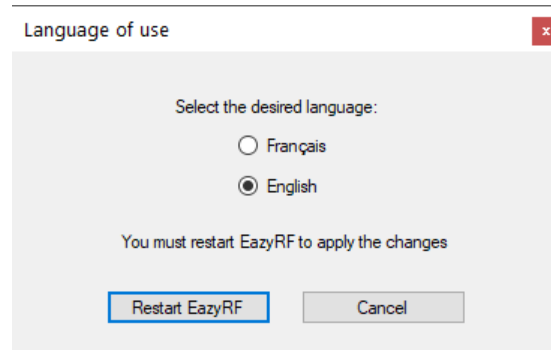


It allows you to change the language of the application. Note that you must restart EazyRF to apply the change.

1.2 Devices List

An EazyRF device is equivalent (or almost) of an existing device on the market. The only difference is when a device has a TX and RX as a BTR-800. In these cases it is necessary to define a device for the TX and another for RX because the frequency range is not the same.

There are two types of EazyRF devices: Variables Frequencies and Fixed Frequencies. In version 4 these lists are merged:

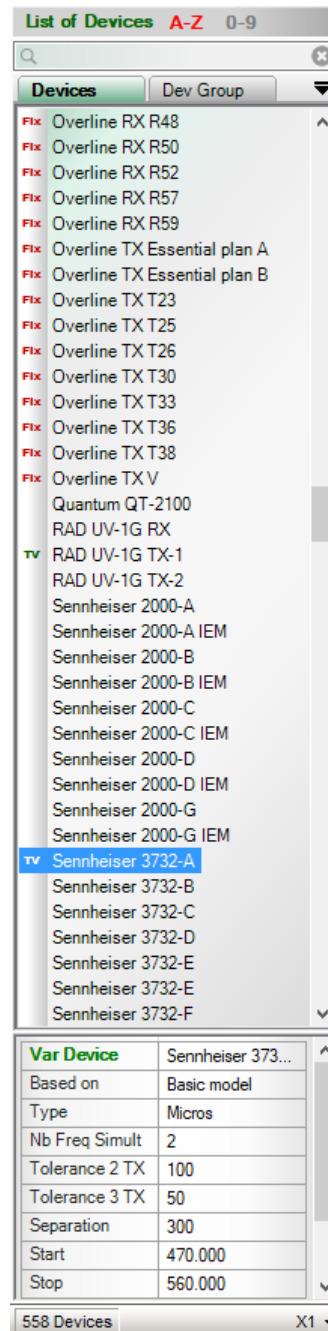

A device is said of variable type when the frequency can be set between a Start and a Stop value with a predetermined increment value. A fixed device is when the frequencies are predetermined (a choice of frequencies X) often adjustable from a rotary switch (identify with **Fix**).

EazyRF a device has a set of characteristics:


- Intermodulations Tolerance 2 TX (2nd order), 3 TX (3th order) and 5th order (2 TX to 5 TX)
- Separation between frequencies
- Type of Frequencies (Micros, BTR-800, In-Ear, etc.)
- RF Filter (width)

- Image Frequency (optional)
- Transmit power level
- If Variable : Start - Stop Frequencies and Increment value
- If Fixed : Fixed Frequencies list

Chapter 9 on "Options" explains all these parameters and the method to define them.

1.3 Device Group

A group of devices can contain a multitude of devices with variable or fixed frequencies. here are some examples:

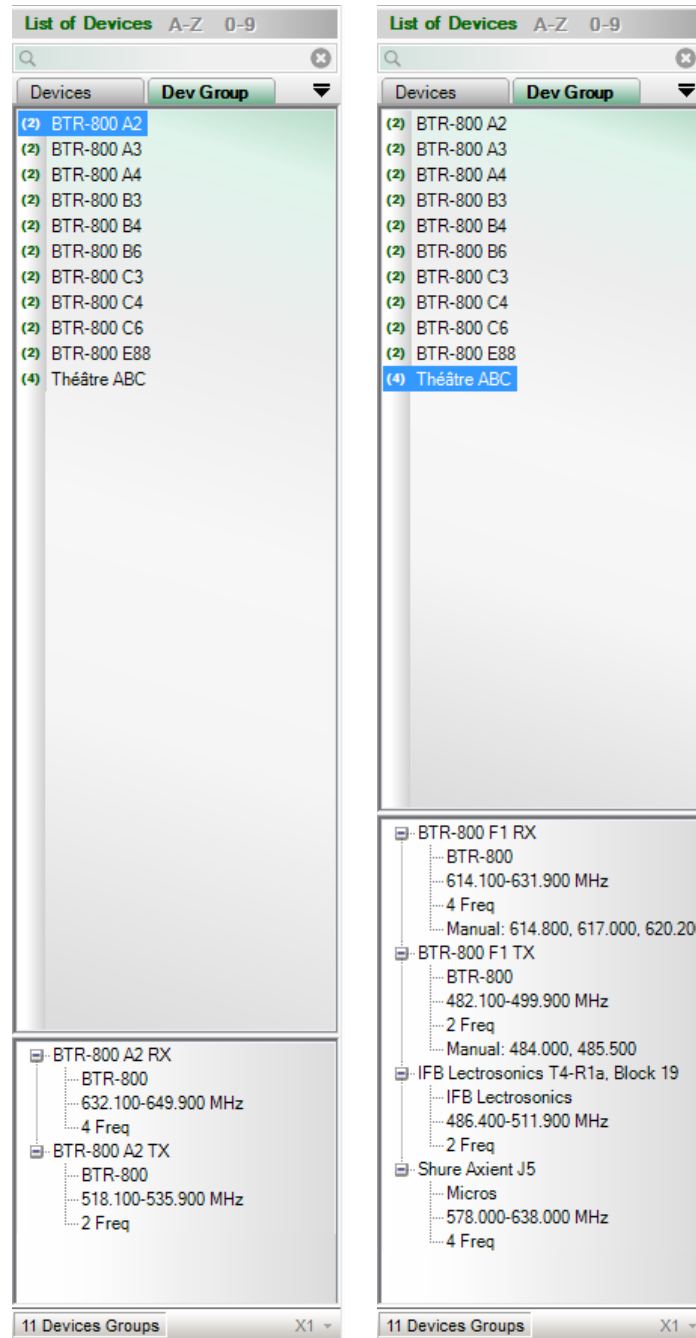


The number of a device in a group can be changed and its frequencies can be set manually or automatically. There is no restriction.

Chapter 9 on "Options" explains all these parameters and the method of defining them.

1.4 Mode of calculation

EazyRF uses three operation modes selectable with the command:

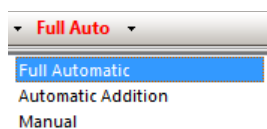

First of all, every device can be "protected", the frequencies allocated can only be changed by the user. This option is enabled by:

Options (Dev)
<input checked="" type="checkbox"/> Protected
Priority
Minimum Evaluation
Descending order
<input checked="" type="checkbox"/> Avail Freq
<input checked="" type="checkbox"/> Auto Start

In Full Automatic mode, all non-"Protected" devices are classified by Start frequency (Fixed frequency devices are classified before Variables if the frequencies are close to one another). Thereafter, depending on the operation requested (which concerned device), EazyRF retains only devices influenced by this command. Example: If a BTR-800 A2-RX is added (Start - 632.100, Stop - 649.900), devices included in this frequency range more or less the width of the "Filter" will be subject to an evaluation; a Shure UHF-as R L3 as example (Start - 638.000, Stop - 698.000).

In addition, EazyRF V4 offers automatic start, i.e. if two devices overlap in their frequency assignment areas, EazyRF will calculate a separation margin between the two devices. A small example, with version 3:


Group 1 - Section 1			Group 1 - Section 1		
#1 - BTR-800 E88 RX	4 Fr 470.100 - 471.300	470.100 - 487.900	471.300	487.900	#1 - BTR-800 E88 RX
#1 - beyerdynamic TG 1000 A	2 Fr 471.900 - 472.650	470.100 - 788.900	472.650		

And with version 4:

Group 1 - Section 1			Group 1 - Section 1		
#1 - BTR-800 E88 RX	4 Fr 470.100 - 471.300	470.100 - 487.900	471.300	487.900	#1 - BTR-800 E88 RX
#1 - beyerdynamic TG 1000 A	2 Fr 536.400 - 536.900	470.100 - 788.900		536.900	

It can be seen that in the case of version 3, the beyerdynamic immediately follows the allocation of frequencies allocated to the BTR-800. In version 4, the first allocated frequency is 536,400 instead of 471,900. It all depends on the frequencies available in an area. This new option can be enabled globally for the document, or for each device.

Finally, EazyRF tries to find the largest possible number of frequencies by making permutations automatically. If the choice proves difficult, the "Advanced Search" window appears:

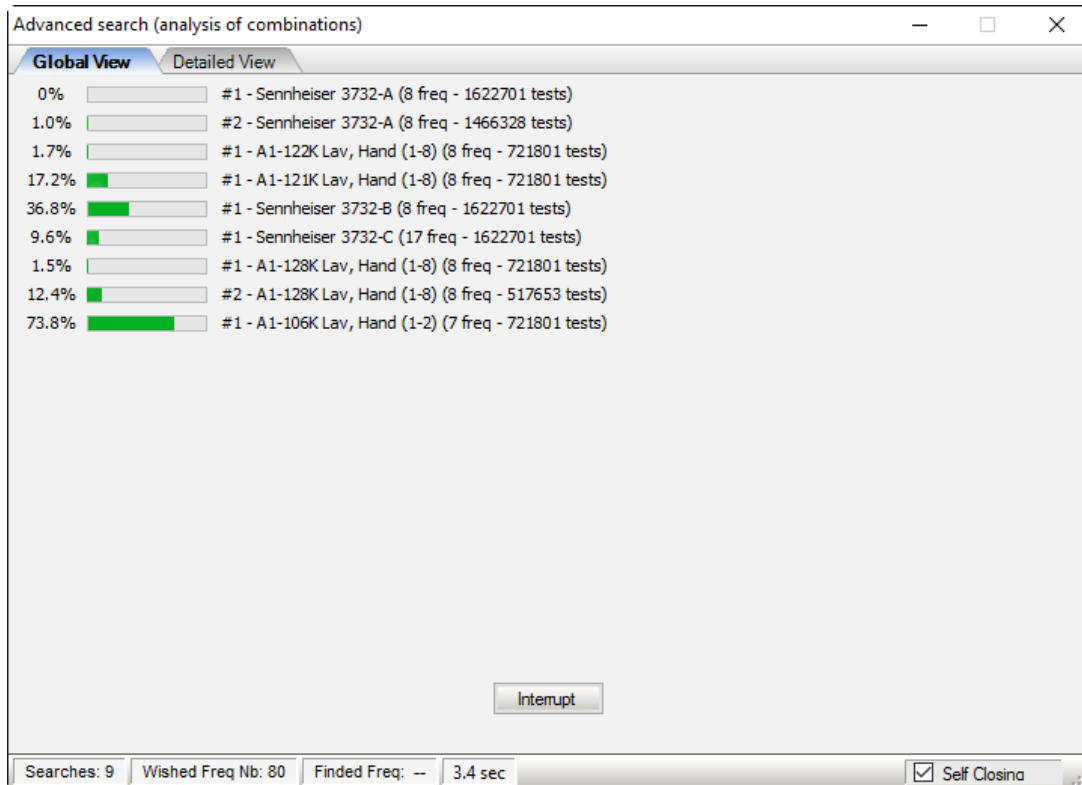


Sometimes it is necessary to recalculate the devices several times, this window allows you to follow the progress of operations.

With the mode of calculation "Automatic Addition", only the modified or added device is calculated.

The "Manual" mode allows the user to use specific frequencies (EazyRF still suggest valid list of available frequencies).


When evaluating a device, an animation indicates which device is recalculated:

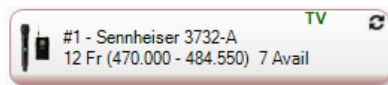


In addition, the status bar displays the calculation steps:



EazyRF always calculates the number of required and available frequencies for a device. By moving the mouse cursor over the number of frequencies, the list appears:

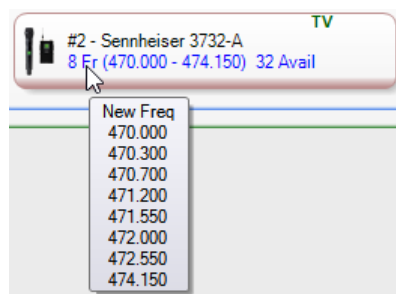

It is the same when the cursor is over the available frequencies:

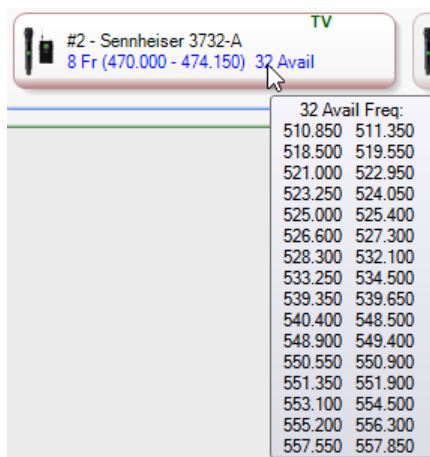

When evaluating frequency, if its value changes, then the frequency is displayed in blue and also the number of frequencies.

When two devices with the same basic name (e.g. BTR-800 RX A2) have the same parameters of evaluation, then the available frequencies are calculated for the first one only and only the display indicates "Avail to share" for both devices.

The list of Available Frequencies is valid only if no frequency is changed in all the devices. Therefore in calculation mode Fully Automatic, if the devices are not protected, it is possible that the revaluation brings different results according to the order of calculation (see Chapter 8 Classification).

The "Evaluate" commands can be used to request a manual recalculation:



"Evaluate Freq List" allows the evaluation the frequencies between them. "Evaluate Devices" request a revaluation of the devices according to the mode of calculation by respecting the protected devices.


1.5 Group - Section - Device

EazyRF uses Groups and Sections to clarify the presentation of the devices of the document. So, a section can collect Micros, another BTR-800, another In-Ear, etc. A group can be used to represent a room, a company, or any other affinity.

To manage these Groups - Sections, use the commands:



The Group has an additional feature: it can be used to define a relationship in a set of groups. So, it is possible to define how the evaluation of these groups should be. To call the editor, use the Group / Interrelations command or double-click the header of a group:

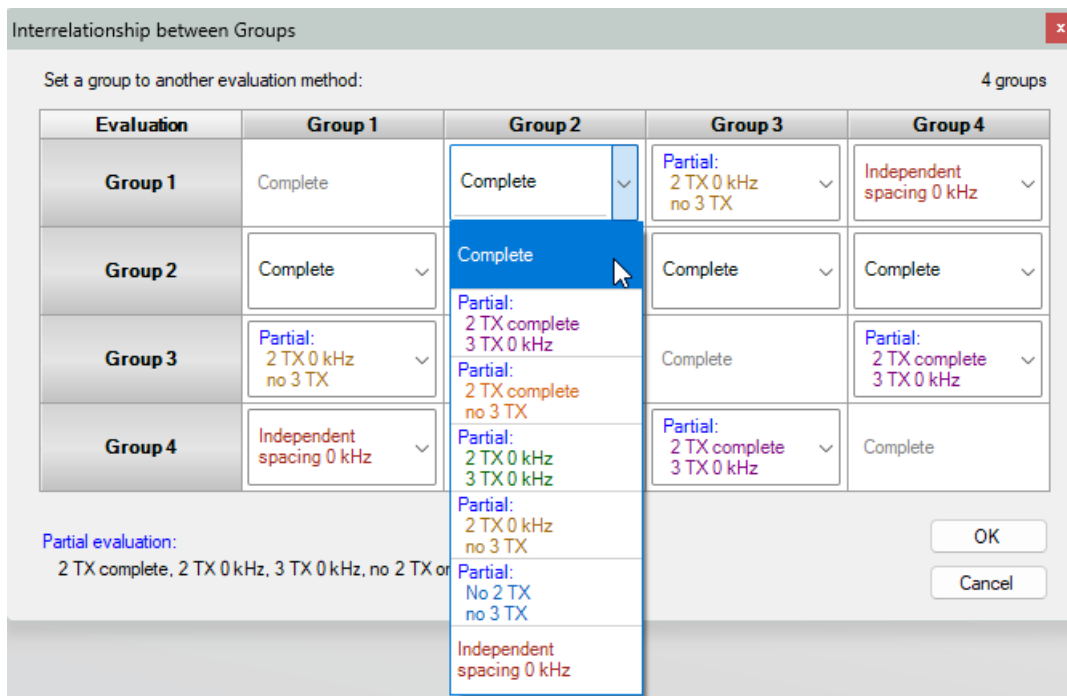

Relationships between groups can be Full, Partial, or Independent. Partial relations can be defined with all possible combinations of 2 TX and 3 TX intermodulation. There are no restrictions on the possible combinations since version 4.70 of EazyRF.

To change the relationship of a group on a horizontal line, simply click on the cell of the group name in the left box. The change is circular (Full / Partial / Independent).

To change the relationship of a group to a vertical column, simply click on the header of the group name on the top area. The change is also circular.

To define the relationship for all groups to "Complete" or "Partial", click on the "Evaluation" heading on the upper left corner.

It is preferable to define relationships when creating a new document. Thereafter, it is possible to change these relationships, but intermodulations may appear.

From version 4.76 onwards, you can adjust the distance between independent groups as you wish. The default value is the one defined for the document:

Interrelationship between Groups 4 groups

Set a group to another evaluation method:

Evaluation	Group 1	Group 2	Group 3	Group 4
Group 1	Complete	Independent spacing <input type="text" value="100"/> k	Independent spacing <input type="text" value="150"/> k	Independent spacing <input type="text" value="200"/> k
Group 2	Independent spacing <input type="text" value="100"/> k	Complete	Independent spacing <input type="text" value="150"/> k	Independent spacing <input type="text" value="100"/> k
Group 3	Independent spacing <input type="text" value="150"/> k	Independent spacing <input type="text" value="150"/> k	Complete	Complete
Group 4	Independent spacing <input type="text" value="200"/> k	Independent spacing <input type="text" value="100"/> k	Complete	Complete

Partial evaluation:
 2 TX complete, 2 TX 0 kHz, 3 TX 0 kHz, no 2 TX or no 3 TX.
 0 kHz = on carrier. Separation and Image Freq always calculated.

OK
Cancel

EazyRF lets you add devices not included in the list of devices with the command:

Device

Add Fixe | Add Variable | Delete

The "Add Fixe" command allows you to add a device with Fixed Frequency:

Add Fixed Freq Device

Description:

Type:

Deviation: Intermediate:

Start: Stop: Increment:

Frequencies: ☐ Manual

Tolerance 2 TX:

Tolerance 3 TX:

Separation:

Image Freq:

Filter:

No	Description	Freq	Intermodulation
1			
2			
3			
4			

OK Cancel

Use "Add Variable" to add a device by setting the Start and Stop frequencies:

Add Variable Freq Device

Description:

Type:

Deviation: Intermediate:

Start: Stop: Increment:

Frequencies: ☐ Manual

Tolerance 2 TX:

Tolerance 3 TX:

Separation:

Image Freq:

Filter:

No	Description	Freq	Intermodulation
1		650.000 43	
2		650.300 44	
3		650.700 44	
4		651.200 44	
5		651.550 44	
6		652.000 44	
7		652.550 44	
8		654.150 44	

OK Cancel

It is still possible to enter frequencies without defining Start and Stop.

1.6 Television Channels

EazyRF 4.x supports standard television channels ATSC (USA-Canada), PAL and SECAM for Western Europe.

From version 4.72, EazyRF now supports certain countries that use the same video standards but with different configurations, for example Australia and New Zealand.

The channel list can be global (Options / Channels TV) or local (in a document). Global list contains the channels your hometown normally (to be defined by the user). The local list is used when traveling. The lists can be saved and retrieved later.

You can also import TV channels (public database) from a given location (see section 9.1).

Here is the local definition window (for SECAM video standard):

TV channels of the document (regardless of global channels) *

ATSC | PAL | **SECAM** | COUNTRY ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

02	19	36 (590-598)	53 (726-734)
03	20	37 (598-606)	54 (734-742)
04	✓ 21 (470-478)	38 (606-614)	55 (742-750)
05	22 (478-486)	39 (614-622)	56 (750-758)
06	✓ 23 (486-494)	40 (622-630)	57 (758-766)
07	✓ 24 (494-502)	41 (630-638)	58 (766-774)
08	25 (502-510)	42 (638-646)	59 (774-782)
09	26 (510-518)	✓ 43 (646-654)	60 (782-790)
10	27 (518-526)	44 (654-662)	61 (790-798)
11	28 (526-534)	45 (662-670)	62 (798-806)
12	✓ 29 (534-542)	46 (670-678)	63 (806-814)
13	30 (542-550)	47 (678-686)	64 (814-822)
14	✓ 31 (550-558)	48 (686-694)	65 (822-830)
15	32 (558-566)	49 (694-702)	66 (830-838)
16	33 (566-574)	50 (702-710)	67 (838-846)
17	✓ 34 (574-582)	51 (710-718)	68 (846-854)
18	35 (582-590)	52 (718-726)	69 (854-862)

☒ Reject Frequencies 694 to 863 MHz - Channels 49 to 69 ☒ Duplex Gap 822-830 MHz

The channels in blue correspond to the global channels.

Groups
Import Scan
Import CH
Clear CH
CH Names
Read CH
Save CH
OK
Cancel

49 SECAM channels 7 local channels

Since the advent of digital television and 4G and 5G cellular telephony, frequency bands have to be freed up and thus become unavailable. In every standard of television, a TV option enables the rejection of these frequencies:

☒ Reject Frequencies 694 to 863 MHz - Channels 49 to 69 ☒ Duplex Gap 822-830 MHz

See section 2.6.3 and 10.1 for further explanation of rejection areas.

1.7 Digital Audio Broadcasting

EazyRF 4.1 now supports DAB (Digital Audio Broadcasting). For the moment only band III is covered, mainly used in Europe (178 MHz to 223 MHz).

In North America this frequency band is used by digital TV, so this control is not accessible with the ATSC video standard.

Here is an overview:

DAB (Digital Audio Broadcasting Band III)*

5A 174.928 MHz	8A 195.936 MHz	11A 216.928 MHz
✓ 5B 176.640 MHz	8B 197.648 MHz	11N 217.088 MHz
5C 178.352 MHz	8C 199.360 MHz	11B 218.640 MHz
5D 180.064 MHz	✓ 8D 201.072 MHz	11C 220.352 MHz
		11D 222.064 MHz
6A 181.936 MHz	9A 202.928 MHz	✓ 12A 223.936 MHz
6B 183.648 MHz	✓ 9B 204.640 MHz	12N 224.096 MHz
✓ 6C 185.360 MHz	9C 206.352 MHz	12B 225.648 MHz
6D 187.072 MHz	9D 208.064 MHz	12C 227.360 MHz
		12D 229.072 MHz
7A 188.928 MHz	10A 209.936 MHz	13A 230.784 MHz
7B 190.640 MHz	10N 210.096 MHz	13B 232.496 MHz
7C 192.352 MHz	10B 211.648 MHz	13C 234.208 MHz
7D 194.064 MHz	10C 213.360 MHz	13D 235.776 MHz
	10D 215.072 MHz	13E 237.448 MHz
		13F 239.200 MHz

Reject Freq on each side: MHz

41 DAB channels | 5 selected channels

1.8 Interferences

It is allowed to define zones not to be used in the frequency allocation. This is done in the "Intermodulation" pane, see Chapter 5.

2 - Global View


The "Global View" is the visual representation of the document on devices not detailed form of frequencies, only the desired number of available frequencies and each device is displayed with some indicators.

The screenshot shows the EazyRF V4.56.220104 software interface. The top menu bar includes 'New', 'Options', 'About', and 'Language'. The toolbar contains icons for 'Equip', 'SECAM L', 'DAB', 'Avail Freq', 'Grp', 'Sect', 'Dev', 'Grp', 'Sect', 'Dev', '5th Order', 'Dev', 'Freq', 'Freq', 'Notes', 'Freq Changes', 'Global', and 'Full Automatic'. The left sidebar shows a 'List of Devices' with a search bar and a list of devices including 'Shure AD4Q G54', 'Shure AD4Q G55', 'Shure AD4Q G56', 'Shure AD4Q G57', 'Shure AD4Q G57+', 'Shure AD4Q G62', 'Shure AD4Q G63', 'Shure AD4Q H54', 'Shure AD4Q J8', 'Shure AD4Q K53', 'Shure AD4Q K54', 'Shure AD4Q K55', 'Shure AD4Q K56', 'Shure AD4Q K57', 'Shure AD4Q K58', 'Shure AD4Q L54', 'Shure AD4Q L60', 'Shure AD4Q R52', 'Shure AD4Q X51', 'Shure AD4Q X55', 'Shure AD4Q X56', 'Shure AD4Q Z16', 'Shure AD4Q G53', 'Shure AD4Q G54', 'Shure AD4Q G55', 'Shure AD4Q G56', 'Shure AD4Q G57', 'Shure AD4Q G57+', 'Shure AD4Q G62', 'Shure AD4Q G63', 'Shure AD4Q H54', 'Shure AD4Q J8', 'Shure AD4Q K53', 'Shure AD4Q K54', 'Shure AD4Q K55', and 'Shure AD4Q K56'. The central workspace shows a 'New document' title and a 'Section 1' containing a device '#1 - Shure AD4Q G56' with a frequency range of '8 Fr (478.500 - 483.000) 66 Avail'. The bottom panel includes a 'Var Device' section, a 'Group - Section - Device' table, a 'Variables Freq Dev' table, a 'No' column, a 'Description' column, an '8 Freq' column, an 'Intermodulation' column, a '66 Avail Freq' column, and an 'Options (Dev)' column. The bottom status bar shows '828 Devices', 'X1', 'Nb Grp: 1', 'Nb Sect: 1', 'Nb Dev: 1', 'Nb Freq: 8 (8 Micros) (478.500 to 483.000 MHz)', '0 M', '1 Dev Selected', and 'January 02, 2022'.


The command bar "Group / Section / Device / Evaluate" has been seen in Chapter 1 (see section 2.12 for the command "Evaluate"):

The screenshot shows the command bar with four main buttons: 'Group', 'Section', 'Device', and 'Evaluate'. Each button has a sub-command bar below it. 'Group' has 'Add', 'Delete', and 'Interrelations'. 'Section' has 'Add' and 'Delete'. 'Device' has 'Add Fixe', 'Add Variable', and 'Delete'. 'Evaluate' has 'Freq List', 'Devices', 'Manual', 'Recalculate', and 'Clear'.

This bar can be changed to display the summary of the frequency spectrum:

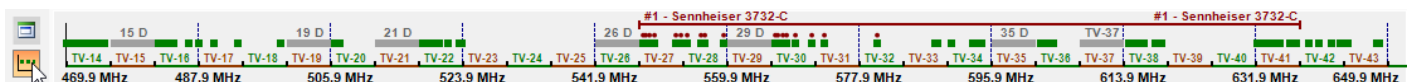


Each Group and Section can be opened or closed by its upper right button:

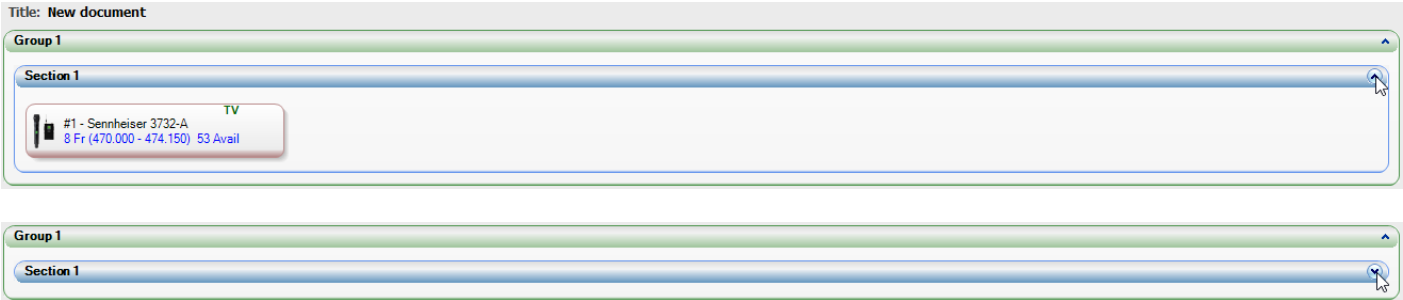

The section "Title" is used to identify the document, it is this title that is displayed in the header prints.

2.1 Devices


In chapter 1, we approached the "List of Devices". Let us look closer at this list:

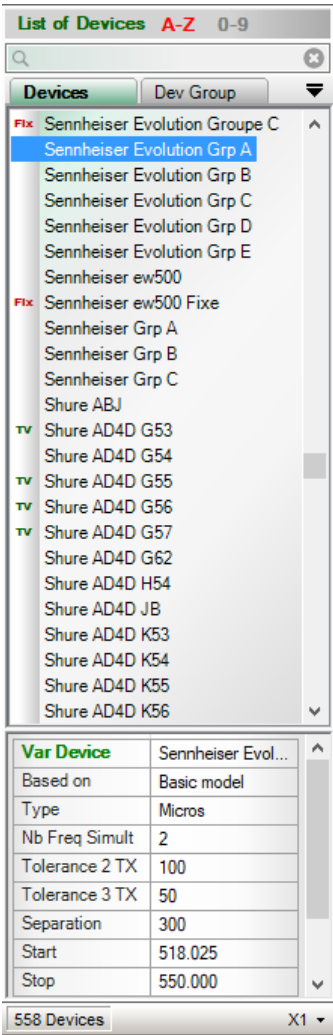

The list can be sorted alphabetically or by Ascending Frequencies with buttons A-Z or 0-9:



In addition, a filter can be applied on the list at the beginning or middle name:

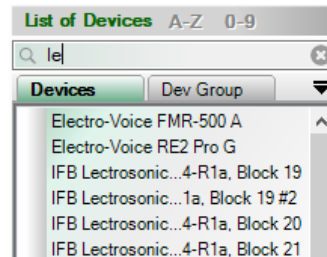

In addition, a more advanced search can be performed by starting the search with a question mark.

Some examples :

?m to search all type devices starting with m (Micros), the word micro can be written in full or some letters

?m>value to search for all microphones whose starting frequency is greater than or equal to the requested value

?b<value to search for all BTRs whose stop frequency is less than or equal to the value

?in>value1<value2 to search all In-Ear whose starting frequency is greater than or equal to value1 and the stop frequency is less than or equal to value2

Finally, you can display the inactive devices in the list by inserting the @ symbol. See section 10.4 for the "Active Device" option.

By leaving the cursor on the name of a device, the number of Desired Frequencies (defined in Options/Devices) is calculated as well as the list of the Available Frequencies. The TV channels affecting the device are also showed:

TV	Sennheiser 3732-A
TV	Sennheiser 3732-B
TV	Sennheiser 3732-A
TV	2 Basic Freq:
TV	474.900
TV	482.500
Ser	51 Avail Freq:
Ser	483.450 484.550
Ser	485.200 486.850
Ser	487.700 488.300
Ser	489.500 490.500
TV	491.650 492.350
Ser	494.600 499.300
TV	506.500 506.800
TV	507.250 507.600
TV	508.150 508.550
Ser	509.150 510.850
Ser	511.350 518.500
Fix	519.550 521.000
Fix	522.950 523.250
Fix	524.050 525.000
TV	525.400 526.600
TV	527.300 528.300
TV	532.100 533.250
TV	534.500 539.350
TV	539.650 540.400
TV	548.500 548.900
TV	549.400 550.550
Var D	550.900 551.350
Based	551.900 553.100
Type	554.500 555.200
Nb Fre	556.300 557.550
Tolera	557.850
Tolera	TV: 15 (476-482) D Global
Separ	19 (500-506) D Radio-Canada
Start	21 (512-518) D CBC
Stop	26 (542-548) D Télé-Québec
	29 (560-566) D Canal Savoir
	Start: 470.000
	Stop: 560.000

The calculation of Available Frequencies is optional (Options/Startup).


By clicking a device, the detail is displayed in the lower part of the section:

Var Device	Sennheiser 3732-A
Based on	Basic model
Type	Micros
Nb Freq Simult	2
Tolerance 2 TX	100
Tolerance 3 TX	50
Separation	300
Start	470.000
Stop	560.000
Increment	0.005
Image	10.70
Filter	16.00


The status bar of the List shows us the number of devices and a command:

300 Variables Freq Dev X1 ▾

The command "X1" allows to set the number of devices added simultaneously:

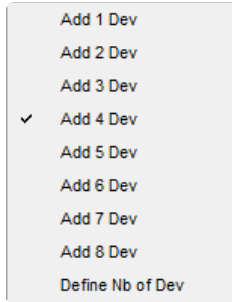

The status bar always indicates the number of devices to add:

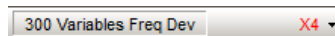


This value can be maintained or reset to 1 after use (Options/Startup).

It is also possible to define the parameters and the number of devices with "Define Nb of Dev":

To use a predefined value for a device parameter, simply enter "0" as value. The option "Reuse from now on" allows to keep these settings for all the new additions.

To add one or more devices to a section, just drag its selection on a section (a group can contain only sections, and a section only devices):

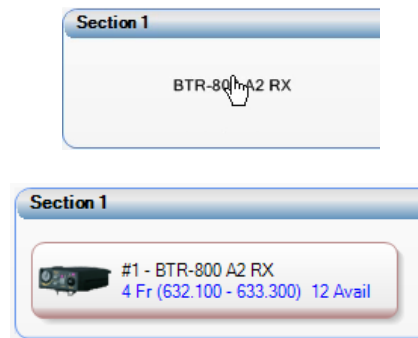


To insert a device, drag the selection on the device to insert it at this position. To add to the end, drop it into an unoccupied area of the section. It is also possible to select multiple devices with Ctrl + Device.

To move a device from one position to another, select the device, and drag to the desired position. This can be done in a section to another, from one document to another, or from one application to another (in this case the operation is a copy).


2.1.1 Export / Import / Delete Devices

From the list of devices on the left side of the views, it is now possible to export, import or delete devices. Simply call up a menu with the right mouse button on one of the devices in the list:

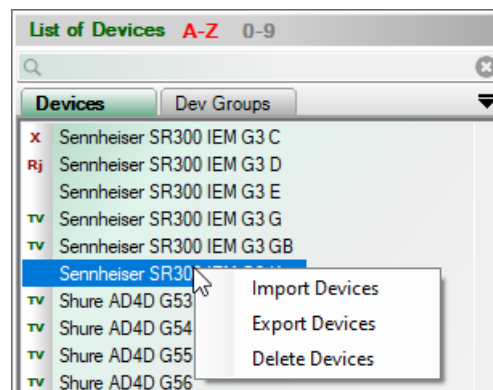

2.1.1.1 Export Devices

Just make the desired selection:

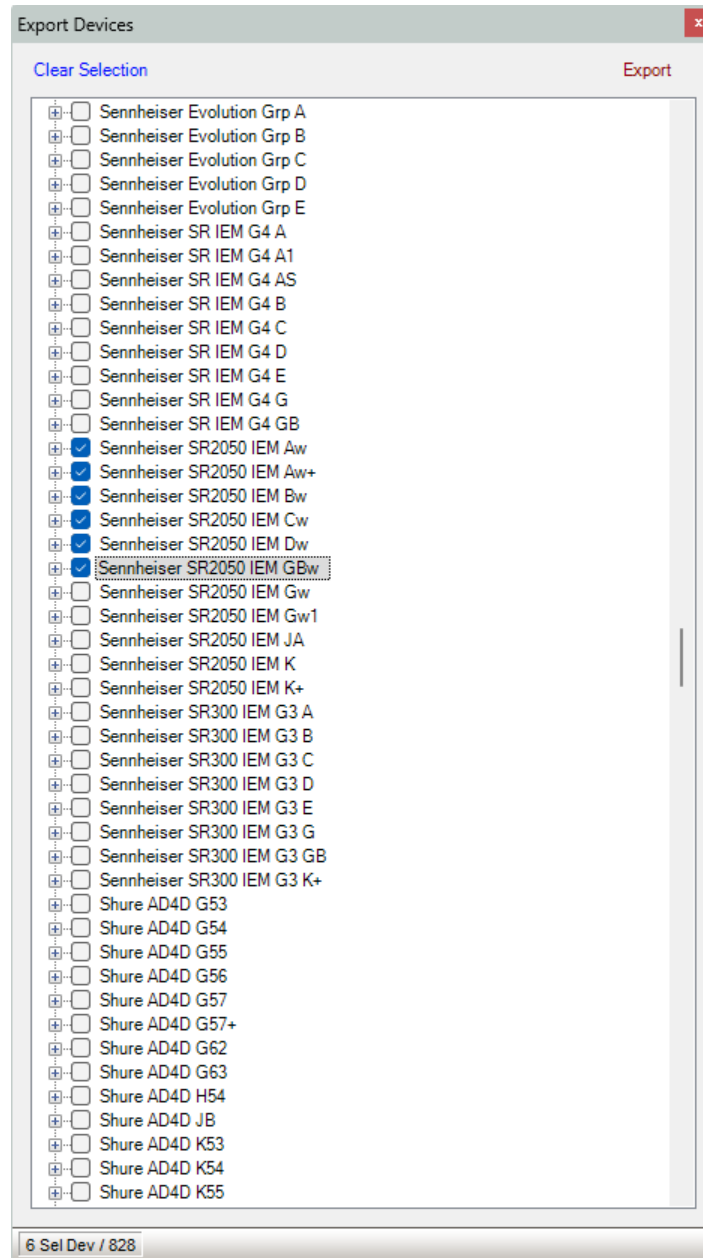


Then, click the “Export” command to enter the name of the new file to be saved. The original list is called "Appareils.lst4" and cannot be used as a new name.

Reminder: the device list file (Appareils.lst4), is the most crucial file in your EazyRF environment, make sure you have backup copies.

2.1.1.2 Import Devices

To import devices, simply open a device file (created by a user (export) or importing from eazyrf.com):

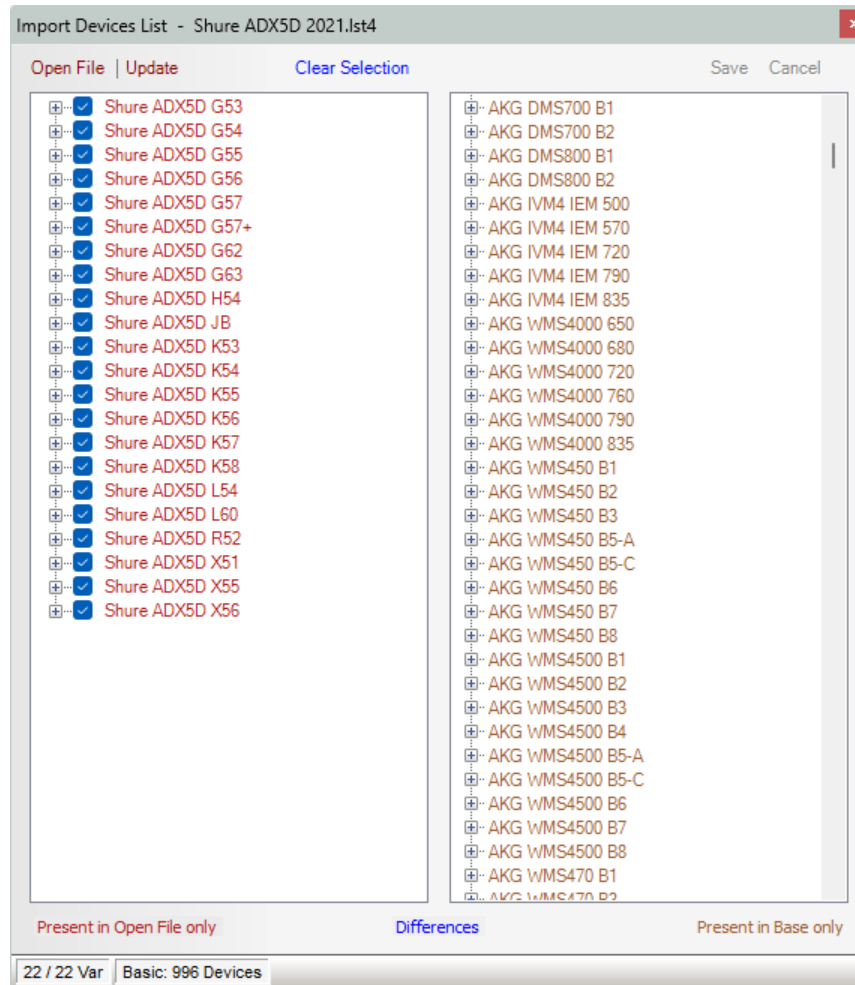


The differences between the two lists are displayed with different colors. Devices present only in the open list are in red, devices present only in the system list are in brown. A device present in both lists but with different parameters is displayed in blue. Identical devices in both lists are not displayed in the list on the left.


After making a selection of devices, just click on “Update” and “Save” everything.

2.1.1.3 Delete Devices

Select the devices to delete:

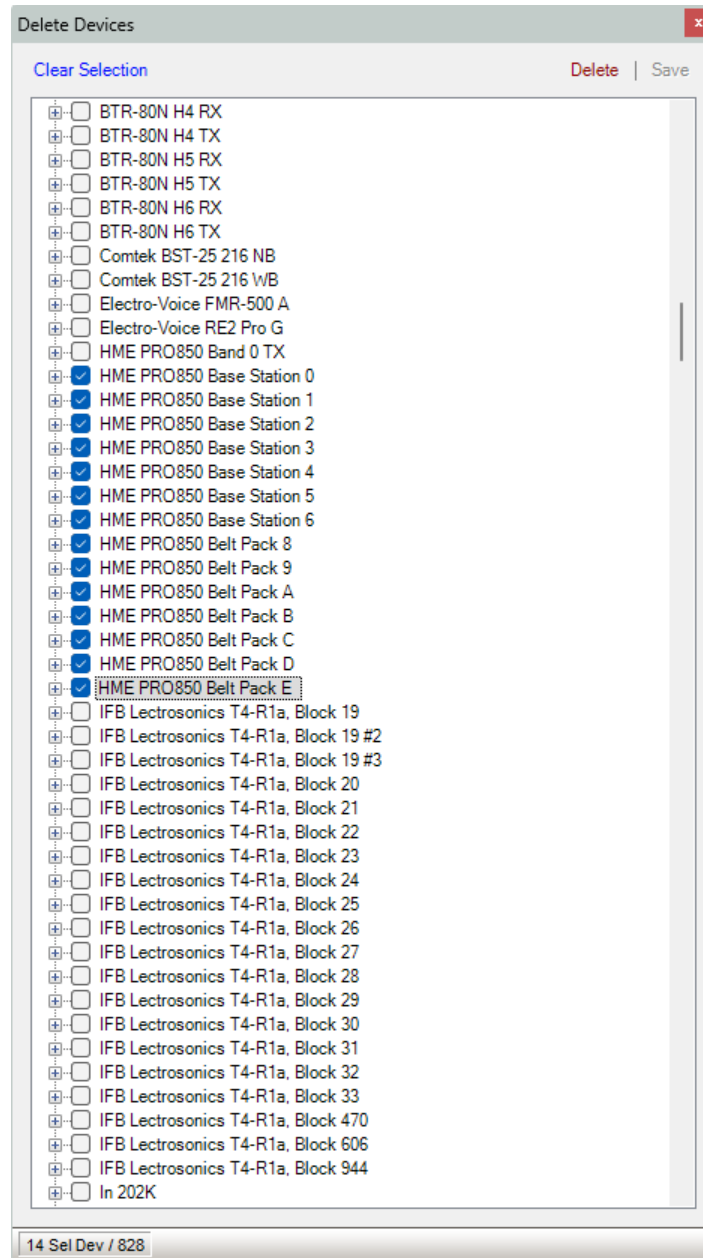

After completing your selection, just click on "Delete" and a message asks for confirmation:

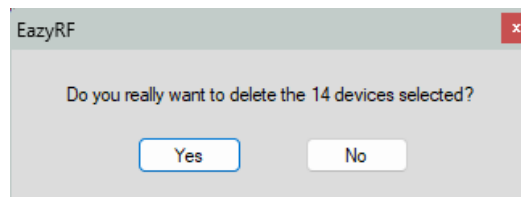


Finally, you must "Save" the changes to the EazyRF devices file.

2.1.2 Devices indicators

A device has several indicators:




En déplaçant le curseur de la souris au-dessus de chaque indicateur, le détail s'affiche :

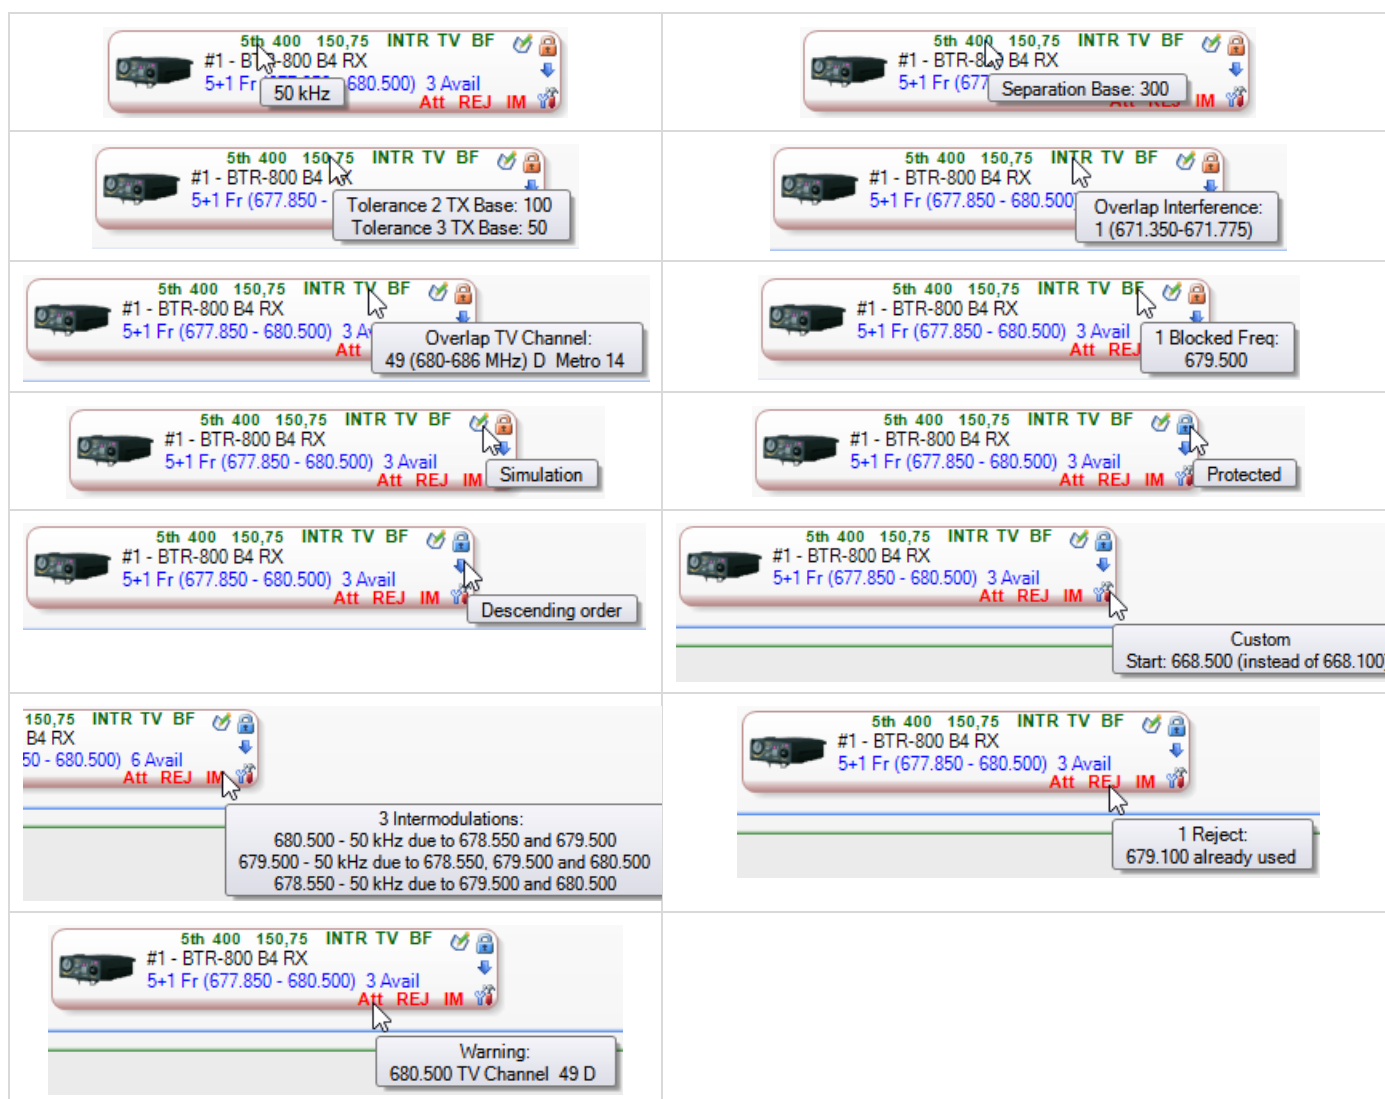


A green indicator indicates a difference of data, while red indicates an anomaly of frequencies found in the stage of the evaluation of all the frequencies.

By placing the cursor over the image of the device, all the parameters of the device are displayed:

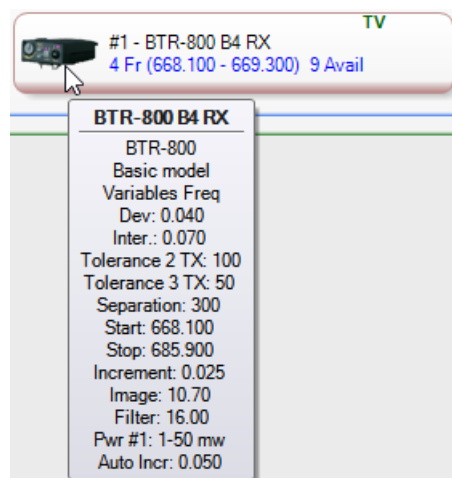

The last parameter displayed, Auto-Increment, is a parameter calculated by EazyRF to accelerate calculations. Thus, when the increment is larger, the number of frequencies tested decreases. The value of this parameter depends on several factors, the main ones being Tolerance 2 and 3 TX.

It is possible to add a device NOT INCLUDED in the list of devices (obtained from an external file). To do this, just make a click with the RIGHT mouse button and the following menu appears:



When opening a document, if a device does not exist, its name is DISPLAYED IN GREY (as in the example). In addition, if the device is of type Fixed, the number of Available Freq does not appear, because it cannot be recalculated if the device is not part of the list of devices.

Devices "Undefined" cannot be added to a list.

This option enables the exchange of data file without exchanging the devices file.

TO BE ABLE TO USE THIS OPTION, YOUR DOCUMENT MUST HAVE BEEN SAVED WITH A COPY OF EAZYRF 3.20.120326 OR MORE. Because additional information must be saved with the document.

This option works with a Fixed or Variable unit. The menu does not appear if the file does not contain the necessary information.

2.2 Devices Groups

2.2.1 Devices Groups V1

There are two types of devices groups, the first type is the one used before version 4.55. These are created in the options module, see sections 10.7, 10.8 and 10.9 for more information.

Type 1 is actually an equivalent of a multiple selection of devices in the "Devices" pane.

2.2.2 Devices Groups V2

With version 4.55 of EazyRF, a new type of devices group has been developed. A type that is easier to create and more complete, with all the parameters for evaluating the devices.


To define this new type, just transform a section of devices into a group of devices. The goal is to reuse a set of devices for a group of musicians for example.

New groups are displayed in blue:




The groups of version 1 are in black.

To create a new group from a section, just click on the section header with the right mouse button:

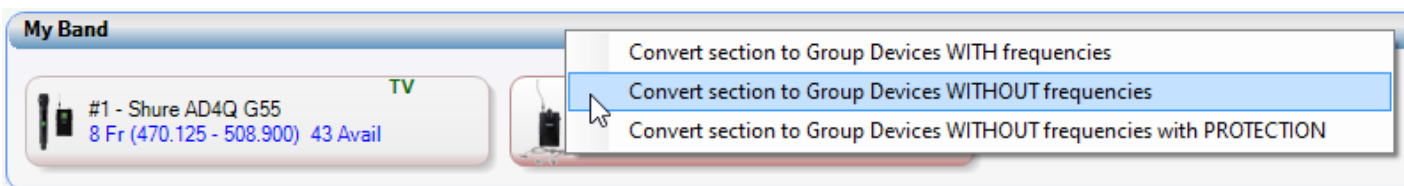

The menu offers the choice of creating a group with the frequencies already assigned or of creating a group without assigned frequencies, with or without protection. A group without frequencies and with protection only contains the skeleton of needs.

The name of the section is used as the name of device groups, this name is assigned to the section used during the drag and drop operation (only if the section does not contain any device):

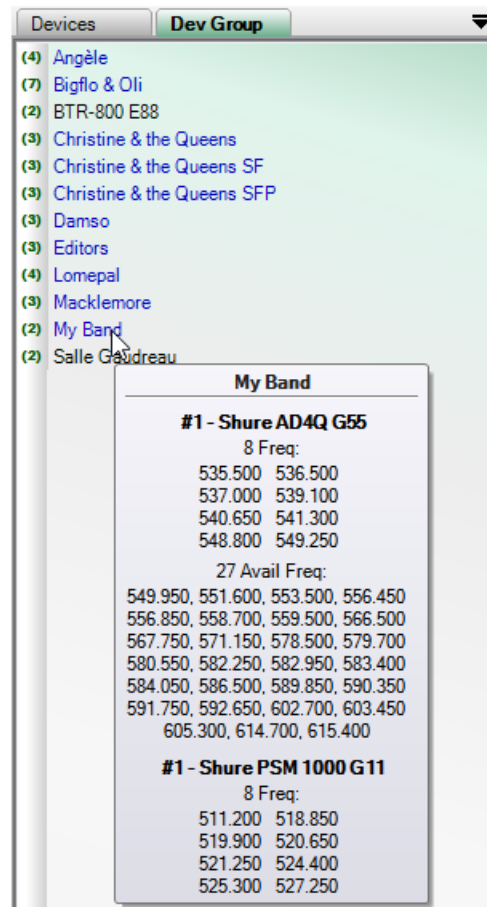



The group frequency calculation preview is displayed by moving the mouse pointer over the group names, as in the device list.

EazyRF automatically saves the new group in the device groups file (GrpAppareil.grp).


To edit a device group, just double click on the group name:

Devices Group Edition - Christine & the Queens*

Name:  Duplicate  Delete

Devices list:

- ☒ #1 - Shure PSM 1000 J8-J8E (P)
- ☒ #1 - Shure AD4D G56 (P)
- ☒ #1 - Sennheiser EM3732-II N (P)

Description:  #1



Based on: In-Ear

Start: Stop: Increment:

☐ Descending order

☐ 5th Order Evaluation (if Global)

Tolerance 5th:

Fr Nbr:   ☒ Protected ☐ Off

Tolerance 2 TX:

Tolerance 3 TX:





Separation:

Image Freq:

Filter:

No	Description	Freq	Intermodulation
1		554.125 28	
2		554.425 28	
3		554.825 28	
4		555.325 28	
5		555.675 28	
6		556.125 28	
7		556.675 28	
8		558.275 28	
9		559.025 28	
10		559.675 28	
11		560.775 29	
12		562.825 29	


Delete Selected device

The editor allows you to modify all the evaluation parameters of each device, to duplicate the group, or to delete it. You can move to the next or previous group with the arrows at the bottom of the screen. An "Undo / Redo" system makes it possible to correct the changes made.

You can remove a device from a group, but you cannot add devices. To add devices, you have to go back to the document, make the changes and save the device group again. Why, because the goal of these new groups is to have custom devices, not devices with basic parameters.

The "Multi-Scenes" pane also allows you to create groups of devices from the sections:

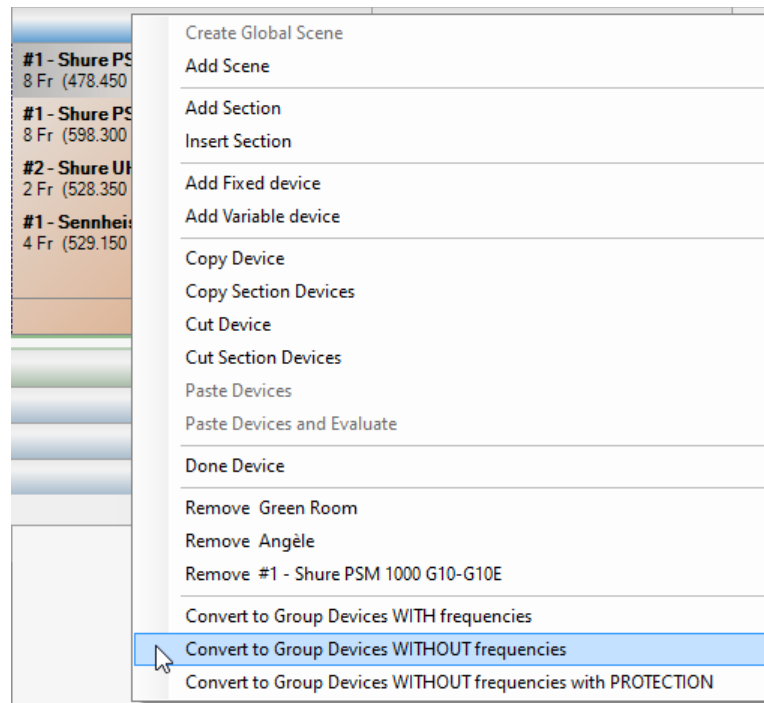


2.2.2.1 Import Devices Groups V2

With version 4.60 it is now possible to import or export parts of a devices groups file.

Simply right click on the list of devices groups to display the menu:



The "Import Groups" editor:

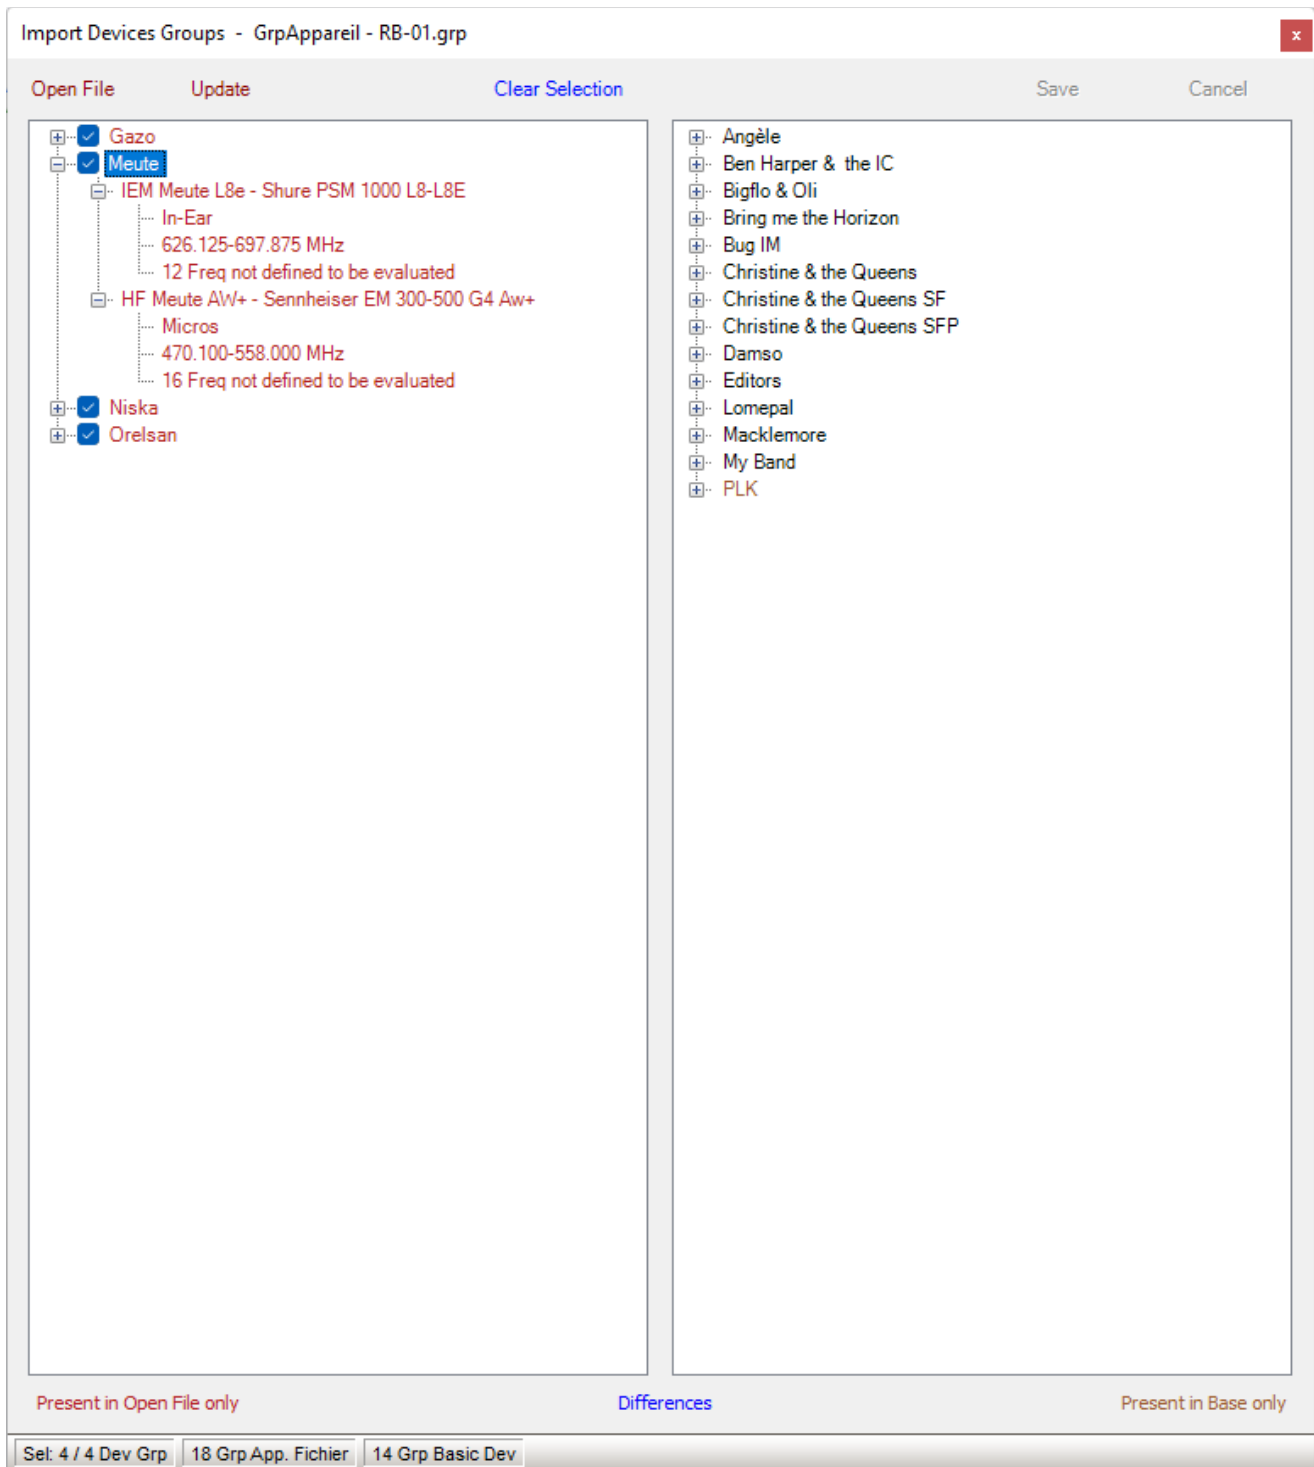

The operation is identical to that of the standard groups (V1), section 10.8.

To get started, just open a devices groups file (created with the Export command, next section).

The differences between the two lists are displayed with different colors. Devices groups present only in the open list are in red, devices groups present in the system list only are in brown. A group of devices present in both lists but

with differences in parameters is displayed in blue. The groups of identical devices in the two lists are not displayed in the left list for a little more clarity.

The contents of the settings can be examined by opening the device detail (+).

The devices groups of the opened file can be selected individually before performing the update. By default, when opening a file, the groups that are not in the basic list are selected.

Finally, you must end the operation with the Save command.

Updating can only be done from the open file to the system list, never the other way around.


2.2.2.2 Export Devices Groups V2

With version 4.60 it is now possible to import or export parts of a devices groups file.

Simply right-click on the list of device groups to display the menu:



The “Export Groups” editor:

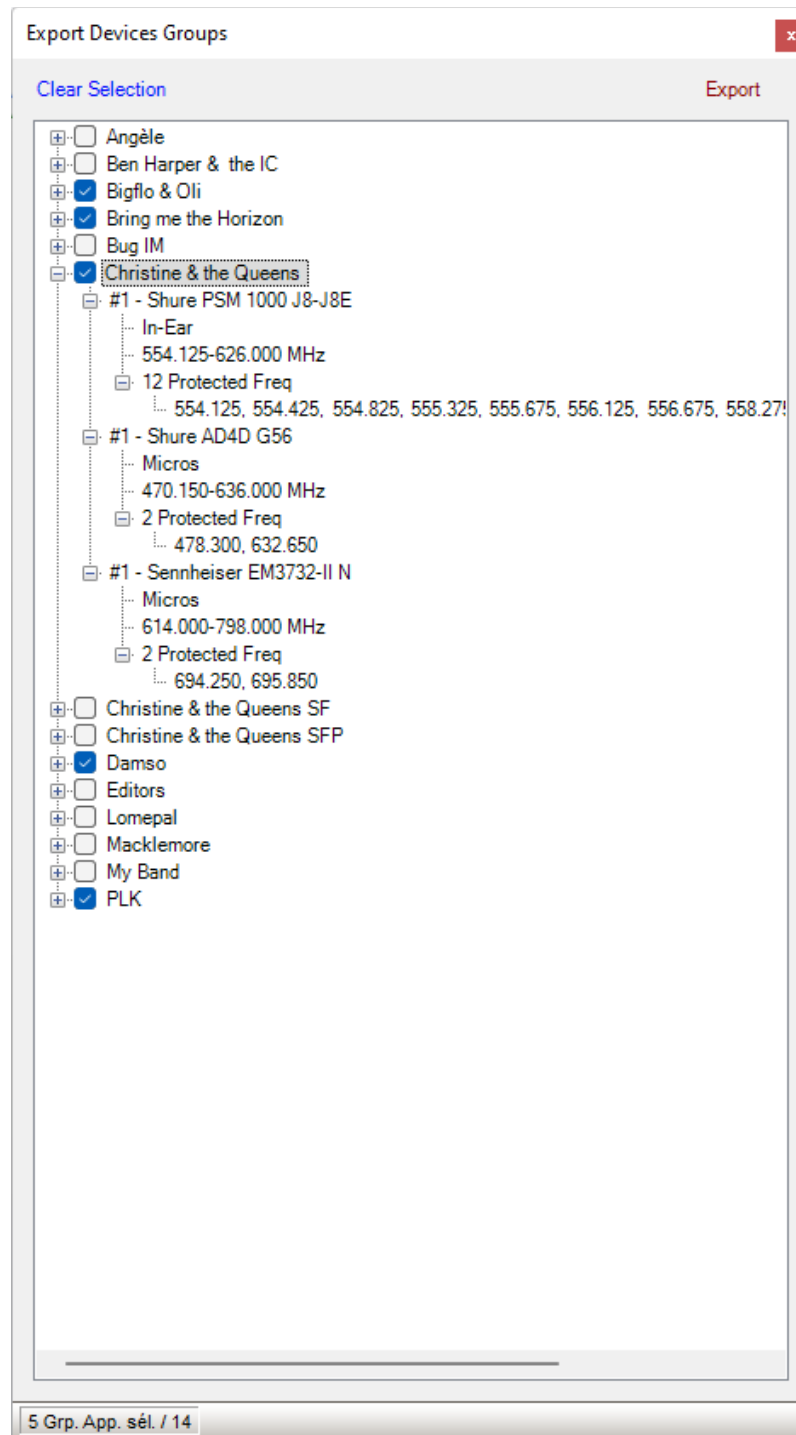




The list of system devices groups is displayed, just select the groups to export. Finally, the “Export” command saves the selected list under a group name. Note that the name “GrpAppareil.grp” is reserved for EazyRF.




The files thus created can be imported via the “Import Groups” utility, thus facilitating the exchange of data between partners.

2.3 Details




The bottom section of the Global View displays the details of the group, the section and the selected device. This section allows you to edit the parameters and frequencies:

Group - Section - Device		Variables Freq Dev	No	Description	8 Freq	Intermodulation	12 Avail Freq	Options (Dev)
Group		Group 1						
Section		Section 1						
Dev Desc		#1						
Shure AD4D G53								
Wished Freq	8							

This section may take another form if the size of the screen allows it:

Group - Section - Device		Variables Freq Dev	No	Description	8 Freq	Intermodulation	12 Avail Freq	Options (Dev)
Group		Group 1						
Section		Section 1						
Dev Desc		#1						
Shure AD4D G53								
Wished Freq	8							
Type	Micros							

The name of the Group and the Section can be edited in this zone:

Group - Section - Device	
Group	 Group 1
Section	 Section 1
Dev Desc	 #1
Shure AD4D G53	
Wished Freq	8
Type	Micros

The description of the device (function) can be changed also. The desired number of frequencies can be changed with the arrows or entered directly (up to 40 frequencies per device). It is also allowed to change devices, such BTR-800 B4 RX to BTR-800 E88 RX or any other device. It is not allowed to change an "Undefined" device.

The parameters of the selected device appear in:

Variables Freq Dev	
Tolerance 2 TX	100
Tolerance 3 TX	50
Separation	300
Image	10.70
Filter	16.00
Start	470.000
Stop	560.000
Increment	0.005

The third part of details display the frequencies:

No	Description	4 Freq	Intermodulation
1	Camera 4	470.000	
2	Camera 5	470.300 14	
3		470.700 14	
4		471.200 14	

The column Description provides a description of the use of the frequency. To auto-increment the description (it takes that it ends with a digit): select the description, press the Ctrl and Alt keys simultaneously and then extend the selection keys. To copy without incrementing, press Alt only.

In the case of devices "Lectrosonics", they use a hexadecimal numbering number corresponding to the frequency channel, this value is displayed by moving the mouse cursor on the frequency:

686.600	50	
686.900	50	
687.400		Ch D2

The "Intermodulation" column is not editable, it is reserved for EazyRF to display problematic results of the evaluation of each frequency.

The frequencies can be changed manually. It is allowed to drag&drop data from an Excel spreadsheet. In Excel, the data must be in columns. Text data is copied in the Description column and numeric data in the Frequency column (this can be done in all editing windows).

Available frequencies appear here:

22 Avail Freq		
27	549.200	^
27	549.700	
27	550.050	
27	550.500	
27	551.050	
27	552.650	
27	553.400	
28	554.050	v

These frequencies can be dragged onto the frequency list. the device becomes "Protected" of an automatic evaluation.

Options (Dev)	
<input checked="" type="checkbox"/>	Protected
<input type="checkbox"/>	Priority
<input type="checkbox"/>	Minimum Evaluation
<input type="checkbox"/>	Descending order
<input checked="" type="checkbox"/>	Avail Freq
<input checked="" type="checkbox"/>	Auto Start

The Options section allows you to modify some evaluation parameters. The "Protected" option has already been seen. The "Priority" option allows you to place a device first and foremost in the list of evaluation. If the device is protected, it goes without saying that the assessment cannot have a priority.

The option "Minimum Evaluation" is intended for devices of type "Walkie/Talkie" which uses frequencies too close. With this option only the verification of the value of the frequency is retained in the evaluation (without evaluation of intermodulations).

The option "Descending Order" allows to estimate the frequencies of a device from the "Stop" value down to the "Start".

The "Avail Freq" enable or disable the calculation of available frequencies if the global option is on.

The "Auto Start" option enables or disables the Auto Start function. When the Auto Start calculation is enabled, the first device different from the previous one will use a Start frequency a little further than the values found on the previous device in the evaluation order. An example:



Instead of:



When entering frequency manually, it is possible that the added value influences the existing devices. Then a window will appear to indicate that this data will influence "Intermodulations" on some devices:

Devices and Intermodulations influenced by the last change of frequencies			
Device	Frequency	Prior IM	After IM
#1 - A1-128K Lav, Hand (1-8) (Group 1, Section 1)			
	578.000	0 kHz - 578.700 & 586.600 & 587.300	0 kHz - 580.000 & 584.650 & 586.650
	578.700	0 kHz - 578.000 & 586.600 & 587.300	
	579.200	0 kHz - 582.900 & 586.600	50 kHz - 582.900 & 586.650
	580.000	50 kHz - 586.600 & 593.150	0 kHz - 578.000 & 584.650 & 586.650
	580.550	50 kHz - 583.550 & 586.600	
#2 - A1-128K Lav, Hand (1-8) (Group 1, Section 1)			
	582.900	0 kHz - 579.200 & 582.900 & 586.600	0 kHz - 583.550 & 586.650 & 587.300
	583.550		0 kHz - 582.900 & 586.650 & 587.300
	584.650		0 kHz - 578.000 & 580.000 & 586.650
		0 kHz - 578.000 & 578.700 & 587.300	0 kHz - 578.000 & 580.000 & 584.650
OK			

2.4 Evaluation parameters

Variables Freq Dev	
Tolerance 2 TX	100
Tolerance 3 TX	50
Separation	300
Image	10.70
Filter	16.00
Start	470.000
Stop	560.000
Increment	0.005

2.4.1 Tolerance 2 TX

A 2 TX intermodulation is the one created by two carriers, the strongest of the intermodulations.

The 2 TX Tolerance is the value beyond which all the 2 TX intermodulations are accepted. The default value is 100 kHz on each side of the carrier.

The value 0 allows to accept all the 2 TX intermodulations, thus deactivate the 2 TX calculations.

2.4.2 Tolerance 3 TX

A 3 TX intermodulation is an intermodulation created by three carriers, less strong than the 2 TX, but equally important.

The 3 TX Tolerance is the value beyond which all the 3 TX intermodulations are accepted. The default value is 50 kHz on each side of the carrier.

The value 0 allows to accept all the 3 TX intermodulations, thus deactivate the 3 TX calculations.

For the intermodulations, there are no limits in theory, but only the odd are significant (except 2 TX). The more the number of TX is raised (brought up) (5 TX, 7 TX, etc.), the less the intensity is important and becomes not significant (5 TX can become annoying occasionally).

The 5 TX Tolerance default value is 50 kHz and is editable only in the devices editor (section 2.7).

2.4.3 Separation

The separation is the minimal value between two frequencies, 300 kHz by default.

2.4.4 Image Frequency

The Image frequency is an old phenomenon of the analog world when two frequencies were separated by 10.7 MHz (default value), both receivers decode the same signal. With the digital world, this value can be null. If it remains active, it does not matter, the result of calculations will be a little bit different, but that does not really change the number of possible frequencies in a given area. Just erase the value to disable it :

Image		=	Image	None
-------	--	---	-------	------


2.4.5 Filter

The value used to determine the gap between the frequencies to consider during the calculation of the intermodulations (16 MHz by default). Thus for a carrier set to 500 MHz, all the frequencies between 484 MHz and 516 MHz will be used for the calculation of intermodulations. Any device has an electronic filter in the amplification circuit of the signal received by the antenna to limit the interferences. This value can be found in service manuals, but 16 MHz constitute a good value. For In-Ear, increasing this value can help if the RF environment is very loaded.

2.4.6 Start, Stop and Increment

With Variable Devices, there is a frequency range available to program the device. For example, the transmitter of a BTR-800 A2 operates between the frequencies 518.100 and 535.900 by step of 25 kHz. So the fields Start, Stop and Increment are used to define these data.

The BTR-800 has a possibility of 712 frequencies. EazyRF uses an algorithm to accelerate the calculations. A value of increment is fitted to the parameters of evaluation and is called Auto-Increment. For example, the increment value of a BTR is 25 kHz, the auto-increment is set to 50 kHz (depending of others parameters). The value can be seen with the device detail:

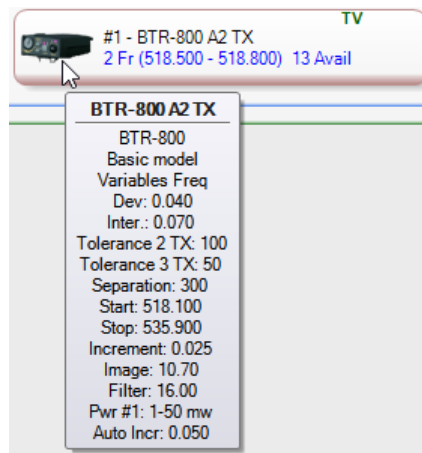

For Fixed devices, these parameters don't exist.

2.5 Selection


It is possible to select multiple devices simultaneously in two ways. The first method uses the CTRL + click a device button. The second method is to click on the unoccupied end of a section or group, keep the mouse button pressed and extend the selection:



When there is more than one device selected, the illustrated description corresponds to the button which is the clearest (in this case, the BTR-800 B4 TX):



The status line shows the number of selected devices (in addition to providing information on the document):



With a multiple selection, some parameters can be changed simultaneously: Tolerance, Separation, the Image Frequency and Filter. The value of Start, Stop or Increment will change only for the highlighted device.

It is allowed to click one of the devices selected without losing its selection (allows to bring individual modifications). To end a multiple selection, click an unselected device, or the bottom of a section or a group.

2.6 Toolbar




2.6.1 File management

The toolbar EazyRF is divided into some sections. At first the management of files:




The first item allows to create a new document (if the current document has been modified, a confirmation is required before replacing it). All documents have the ezrf3 extension and are related to EazyRF during installation (so that double-clicking the file name in Explorer launches EazyRF with the document).

The 2nd and 3rd item allow you to open a document. The second item displays the window opening a document:

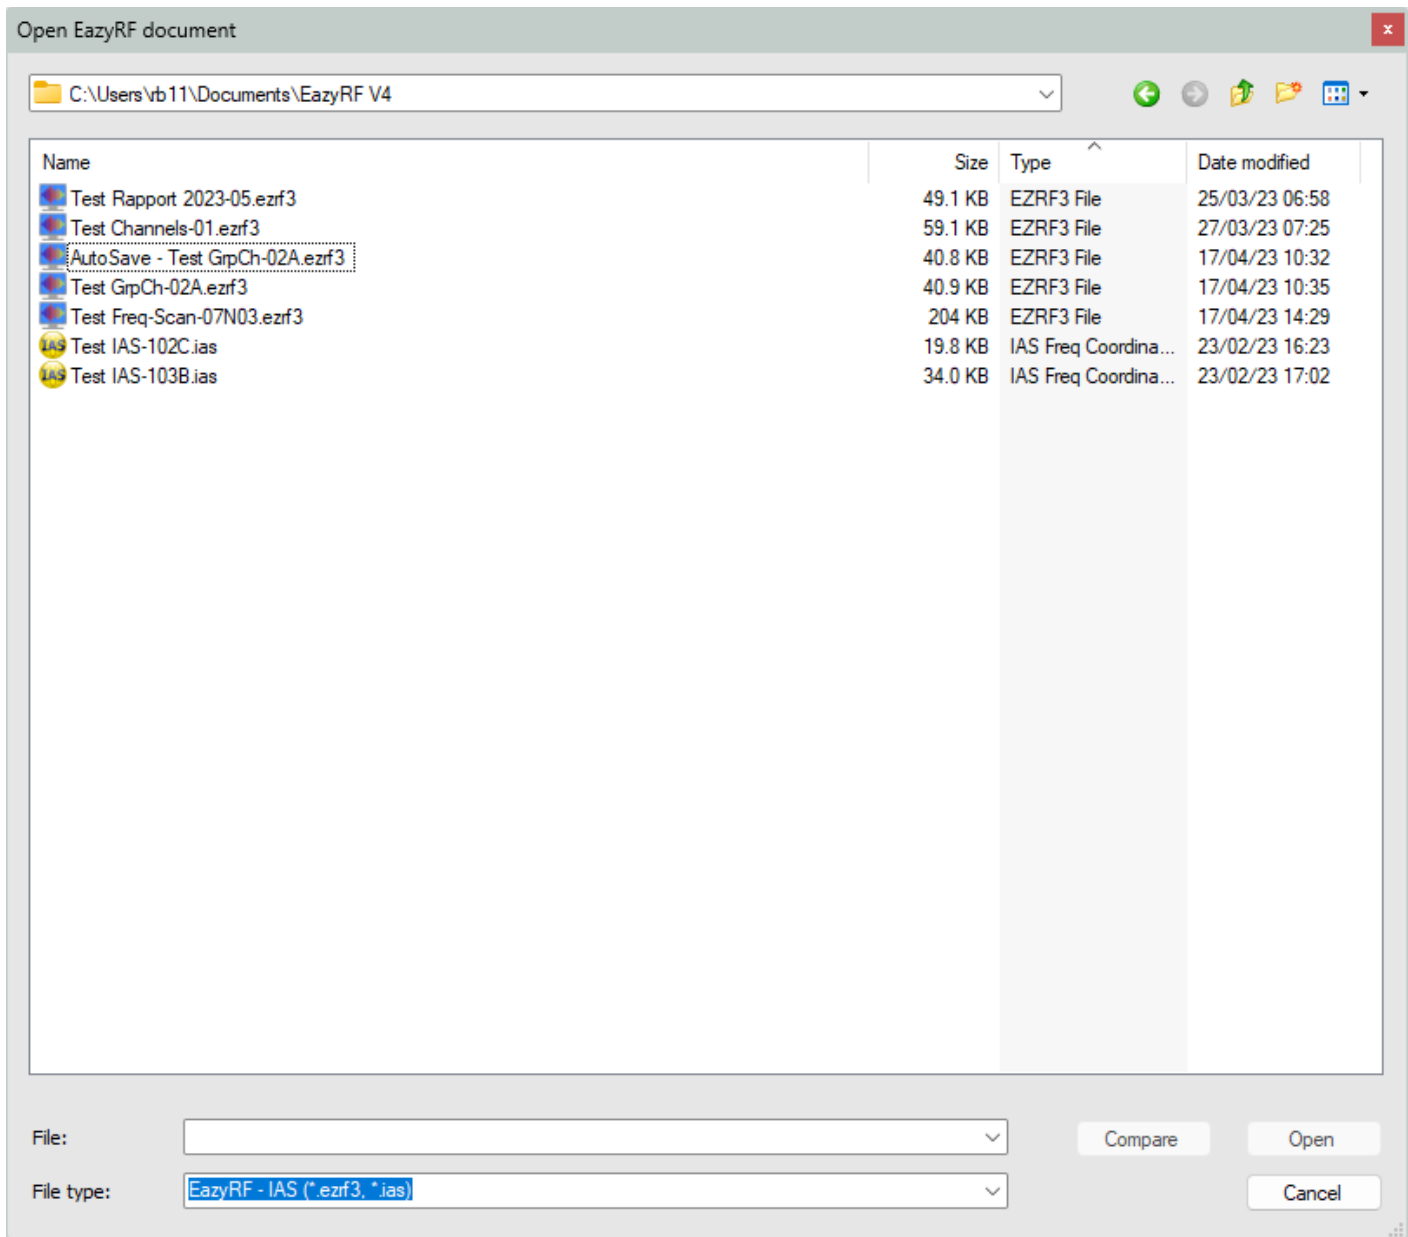


The selected folder is saved for later use. The window size can be changed as well as the column width or display documents method. All these settings are retained.

The File Type option opens documents created by IAS, iOS (iEazyRF Pro) or by the touch screen version of Windows (EazyRF):

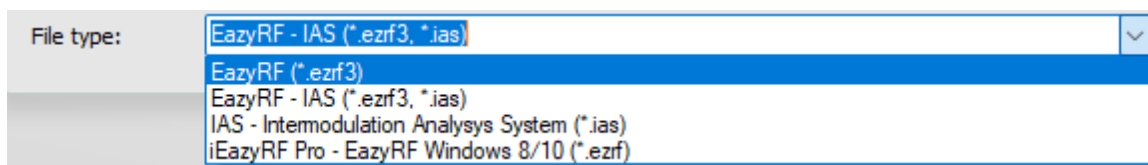


The third item displays a list of recently opened documents. Just leave the cursor on the icon and the list appears:

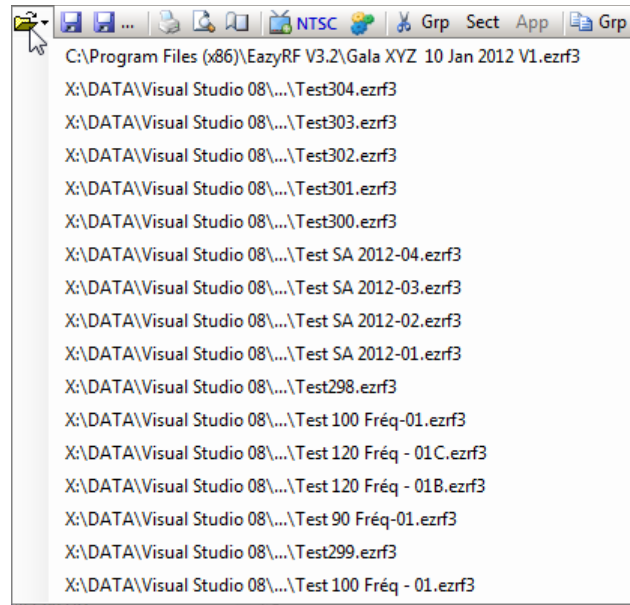


In the opening of a file created with the global television channels, if the current global channels and those saved with the document differ, they are converted into local channels automatically (a warning will be display).

Finally, the 4th and 5th item allow you to save a document. The 4th save on the same name and the 5th display the save window (very similar to the window of opening of a document).

The file manager makes it possible to compare two documents in order to display the differences between the two versions with the "Compare" command:

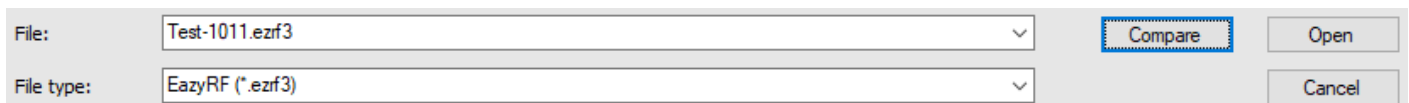

The selected file is compared to the already opened file, which gives for example:

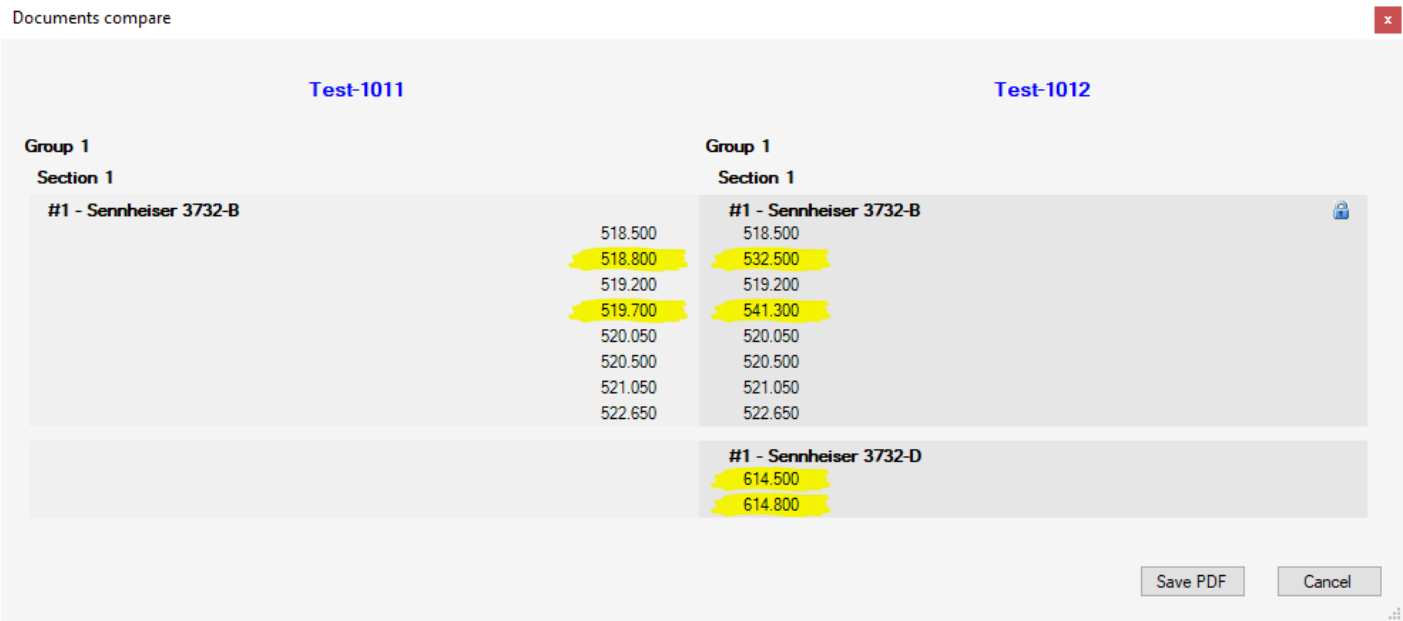


The result of the comparison can be saved in PDF format with the command "Save. PDF ».

2.6.2 Printing

The second section of the toolbar allows you to manage printing and page layout:



The second item can preview before printing. The third item shows the page layout:

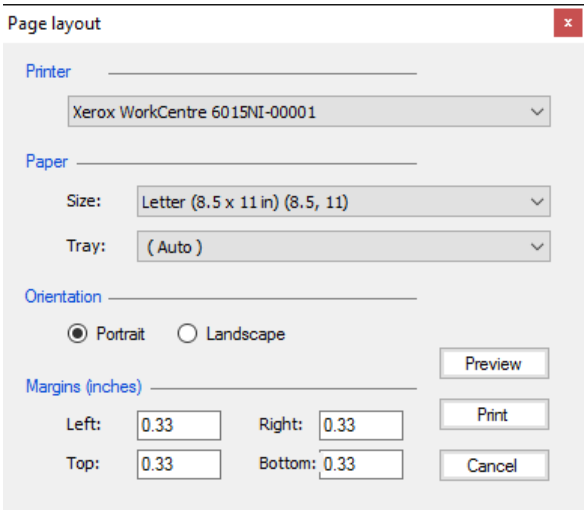


N.B. 1 inch = 2.54 cm

Finally, the last option allows you to create and manage the presentation of a report for a client, see section 2.8.

2.6.3 Document TV channels

The third section of the toolbar allows you to manage television channels and evaluation parameters of the document:

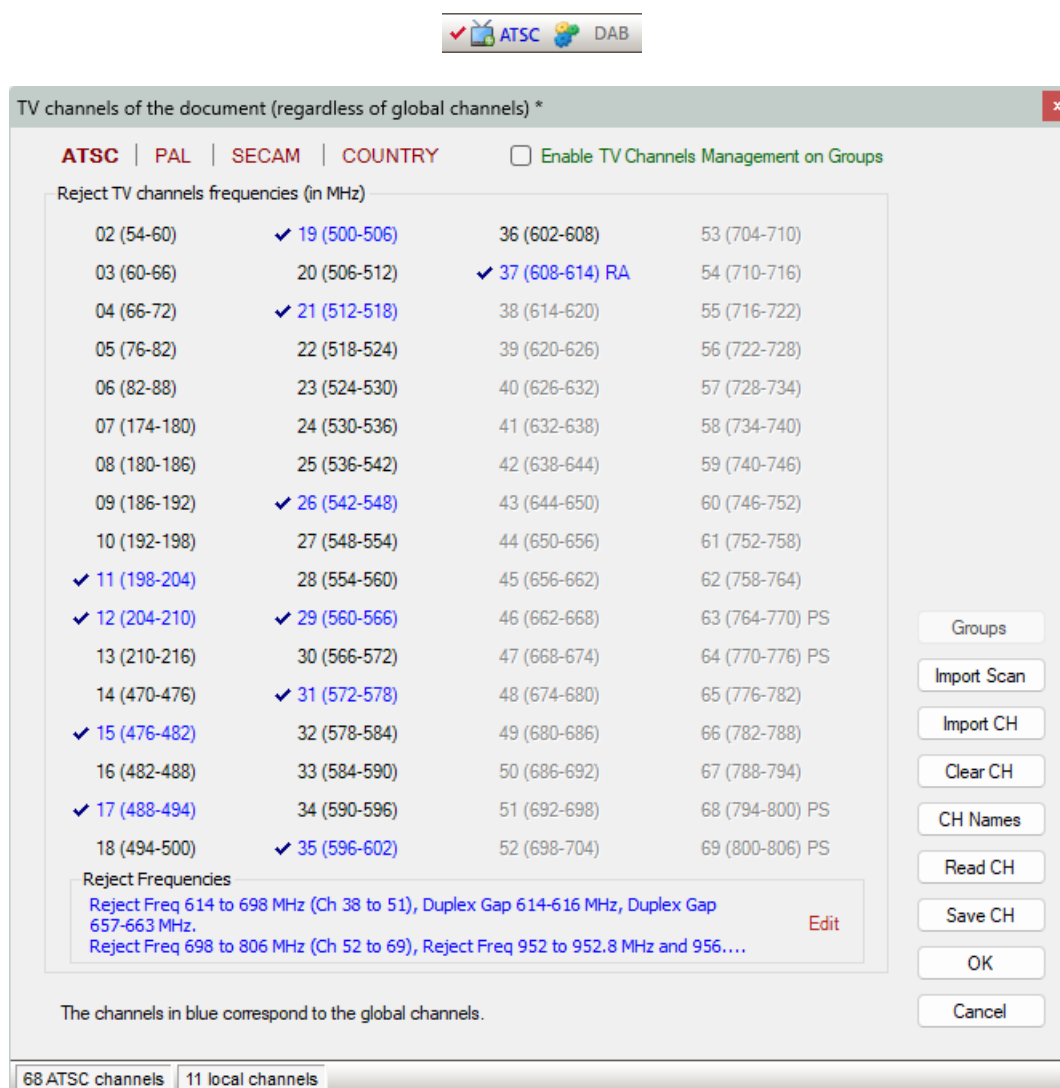

Global channels are those defined in "Options/TV Channels" and are normally set for his hometown. Local channels are assigned according to each locality. It is best to save each file under the name of the city, it will be more useful in the pane "On Tour", Chapter 7.

2.6.3.1 Video Standard

It is allowed to change standard TV even if it is not the same as global. To change the standard, simply click on one of the items:

ATSC | PAL | SECAM | COUNTRY

Some countries use one of the three video standards, but with different configurations, see section 2.6.4.


The toolbar displays the selected format:



The red color indicates that the video standard is different from the standard defined globally (otherwise it is blue). The hook indicates a local definition.


2.6.3.2 North America Frequency Rejection Zone

In North America, the 600 MHz frequency band has moved from the allocation of digital television channels (Ch 38 to 51) to those of 5G LTE cellular telephony. Here is the attribution:

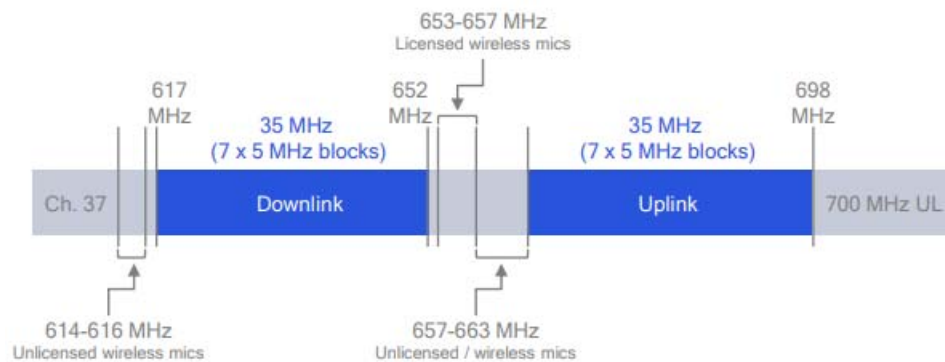



600 MHz Spectrum

The “Downlink” and “Uplink” zones are called band 71 in the cellular world. These two areas are separated into 7 blocks of 5 MHz:

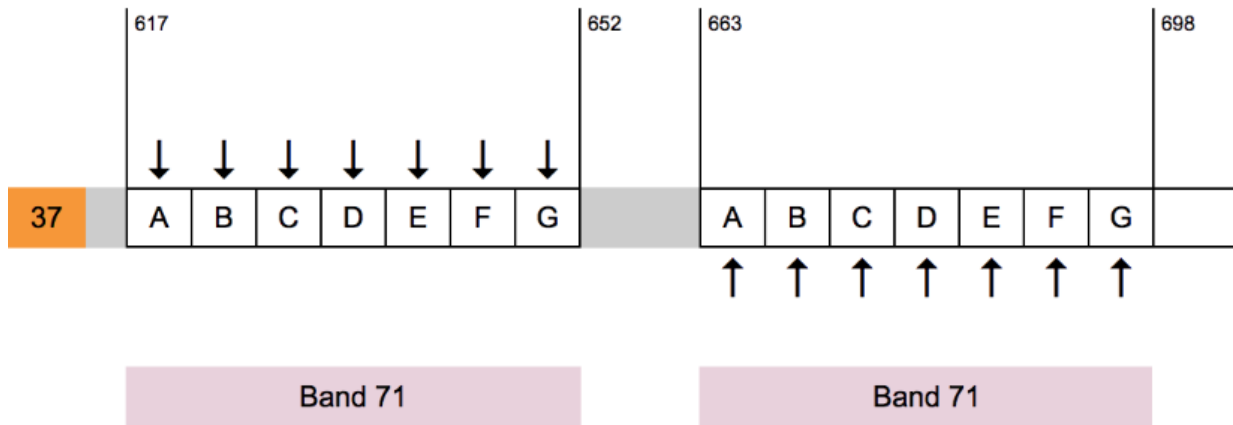

The FCC which manages the allocation of frequencies in the United States allows the use of the 5 MHz blocks in the 71 band (downlink and uplink are paired) when they are free in some regions.

Just click on “Edit” to call up the rejection zone editor:

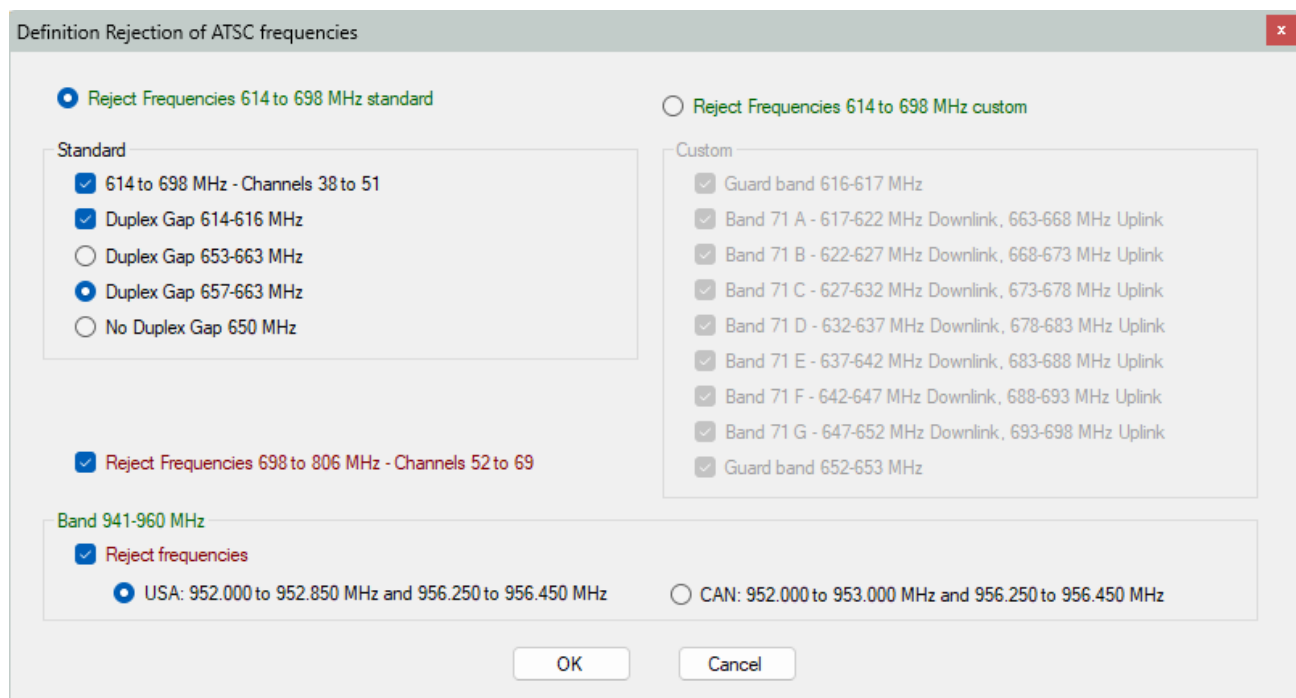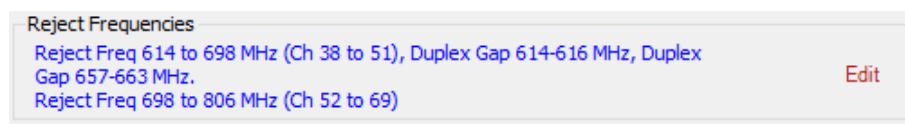

The editor is separated into two parts, the left part allows you to manage the 614 to 698 MHz band. The part on the right is used to manage the allocation of frequency blocks to be used according to the authorizations granted by the FCC.

The “Reject 614 to 698 MHz Frequencies standard” or “Reject 614 to 698 MHz Frequencies custom” selector is used to define the desired use.

Note that the 698 to 806 MHz rejection zone remains active in the two management modes of the 614 to 698 MHz zone.

The “Reject frequencies” selector of the 941-960 Mhz frequency band allows you to exclude frequencies that are not permitted in this region according to the American or Canadian format.

Let's take a closer look at the custom mode:

Definition Rejection of ATSC frequencies*

☐ Reject Frequencies 614 to 698 MHz standard

☒ Reject Frequencies 614 to 698 MHz custom

Standard

- ☒ 614 to 698 MHz - Channels 38 to 51
- ☒ Duplex Gap 614-616 MHz
- ☐ Duplex Gap 653-663 MHz
- ☒ Duplex Gap 657-663 MHz
- ☐ No Duplex Gap 650 MHz

☒ Reject Frequencies 698 to 806 MHz - Channels 52 to 69

Band 941-960 MHz

☒ Reject frequencies

☒ USA: 952.000 to 952.850 MHz and 956.250 to 956.450 MHz ☐ CAN: 952.000 to 953.000 MHz and 956.250 to 956.450 MHz

Custom

- ☒ Guard band 616-617 MHz
- ☒ Band 71 A - 617-622 MHz Downlink, 663-668 MHz Uplink
- ☒ Band 71 B - 622-627 MHz Downlink, 668-673 MHz Uplink
- ☒ Band 71 C - 627-632 MHz Downlink, 673-678 MHz Uplink
- ☒ Band 71 D - 632-637 MHz Downlink, 678-683 MHz Uplink
- ☒ Band 71 E - 637-642 MHz Downlink, 683-688 MHz Uplink
- ☒ Band 71 F - 642-647 MHz Downlink, 688-693 MHz Uplink
- ☒ Band 71 G - 647-652 MHz Downlink, 693-698 MHz Uplink
- ☒ Guard band 652-653 MHz

OK Cancel

The downlink and uplink blocks work together, impossible to use them individually.

2.6.3.3 Frequency rejection zone in Europe

Much simpler than in North America.

ATSC | PAL | SECAM | COUNTRY ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

02 (47-54)	19	36 (590-598)	53 (726-734)
03 (54-61)	20	37 (598-606)	54 (734-742)
04 (61-68)	21 (470-478)	38 (606-614)	55 (742-750)
05 (174-181)	22 (478-486)	39 (614-622)	56 (750-758)
06 (181-188)	23 (486-494)	✓ 40 (622-630)	57 (758-766)
07 (188-195)	24 (494-502)	41 (630-638)	58 (766-774)
08 (195-202)	✓ 25 (502-510)	42 (638-646)	59 (774-782)
09 (202-209)	26 (510-518)	43 (646-654)	60 (782-790)
✓ 10 (209-216)	27 (518-526)	44 (654-662)	61 (790-798)
11 (216-223)	28 (526-534)	45 (662-670)	
12 (223-230)	29 (534-542)	46 (670-678)	
13	✓ 30 (542-550)	47 (678-686)	
14	31 (550-558)	48 (686-694)	
15	32 (558-566)	49 (694-702)	
16	33 (566-574)	50 (702-710)	
17	34 (574-582)	51 (710-718)	
18	✓ 35 (582-590)	52 (718-726)	

☒ Reject Frequencies 695 to 865 MHz - Channels 49 to 61

☐ 695-703 MHz Guard band ☒ 821-832 Duplex Gap ☐ 863-865 MHz ISM

ATSC | PAL | SECAM | COUNTRY ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)


02	19	36 (590-598)	53 (726-734)
03	20	37 (598-606)	54 (734-742)
04	✓ 21 (470-478)	38 (606-614)	55 (742-750)
05	22 (478-486)	39 (614-622)	56 (750-758)
06	✓ 23 (486-494)	40 (622-630)	57 (758-766)
07	✓ 24 (494-502)	41 (630-638)	58 (766-774)
08	25 (502-510)	42 (638-646)	59 (774-782)
09	26 (510-518)	✓ 43 (646-654)	60 (782-790)
10	27 (518-526)	44 (654-662)	61 (790-798)
11	28 (526-534)	45 (662-670)	62 (798-806)
12	✓ 29 (534-542)	46 (670-678)	63 (806-814)
13	30 (542-550)	47 (678-686)	64 (814-822)
14	✓ 31 (550-558)	48 (686-694)	65 (822-830)
15	32 (558-566)	49 (694-702)	66 (830-838)
16	33 (566-574)	50 (702-710)	67 (838-846)
17	✓ 34 (574-582)	51 (710-718)	68 (846-854)
18	35 (582-590)	52 (718-726)	69 (854-862)

☒ Reject Frequencies 694 to 863 MHz - Channels 49 to 69 ☒ Duplex Gap 822-830 MHz

Each rejection zone has one or more exclusion zones, i.e., zones where the use of frequencies is permitted.

2.6.3.4 Channels name

The "CH Names" window allows you to define the name of each channel:

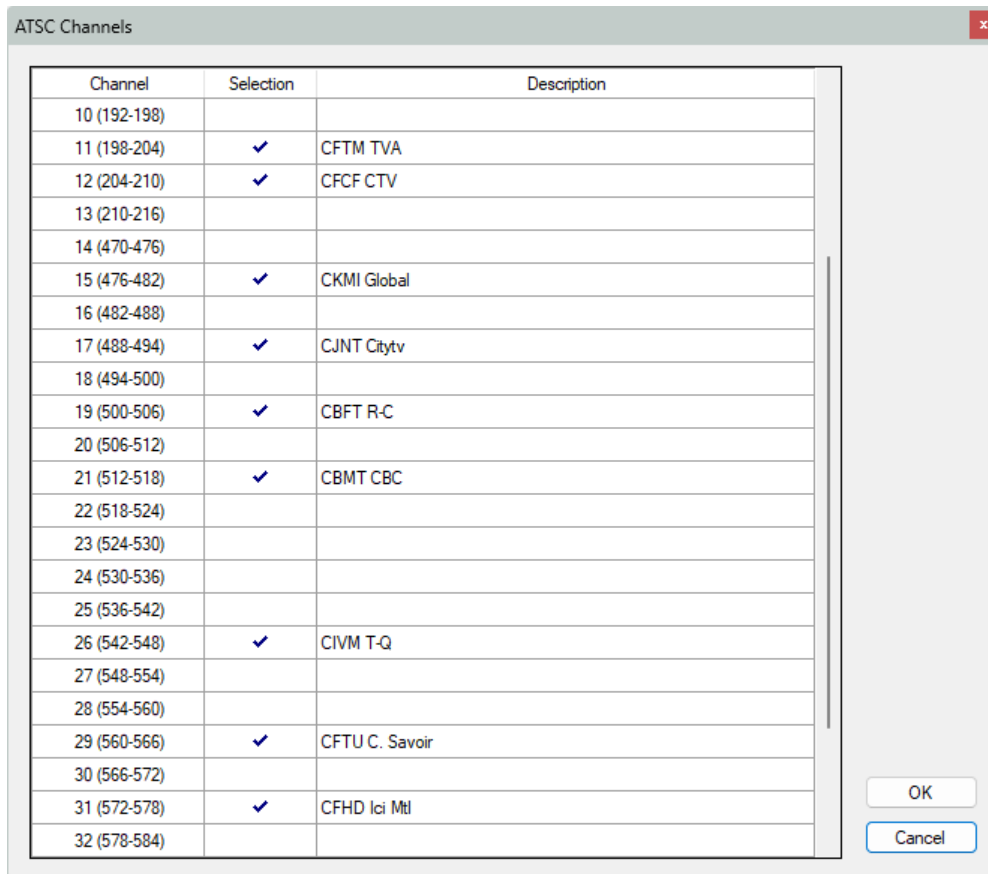

The screenshot shows a window titled "ATSC Channels" with a table containing the following data:

Channel	Selection	Description
10 (192-198)		
11 (198-204)	✓	CFTM TVA
12 (204-210)	✓	CFCF CTV
13 (210-216)		
14 (470-476)		
15 (476-482)	✓	CKMI Global
16 (482-488)		
17 (488-494)	✓	CJNT Citytv
18 (494-500)		
19 (500-506)	✓	CBFT R-C
20 (506-512)		
21 (512-518)	✓	CBMT CBC
22 (518-524)		
23 (524-530)		
24 (530-536)		
25 (536-542)		
26 (542-548)	✓	CIVM T-Q
27 (548-554)		
28 (554-560)		
29 (560-566)	✓	CFTU C. Savoir
30 (566-572)		
31 (572-578)	✓	CFHD Ici Mtl
32 (578-584)		

At the bottom right of the window, there are two buttons: "OK" and "Cancel".

2.6.3.5 Clear, Read and Save Channels

The "Clear CH" button removes all selected CH. Finally, Read and Save CH buttons allow you to save and retrieve corresponding cities. The selection is confirmed by the "OK" button.

2.6.3.6 Channels Import

You can also import TV channels from public databases for a specific location with the command "Import CH":

Import ATSC Channels (database) x

Enter either a postal code, a zip code, a city name, a full address or a latitude,longitude (45.40,-73.57)

Place: My position

Detail: Montreal, QC, Canada (45.509, -73.553)

Distance: ☒ Km ☐ Miles

Channel	Name	City	State/Province	Distance	Power
<input checked="" type="checkbox"/> 19	CBFT R-C	Montréal	QC (CA)	3.01 km	448 Kw
<input checked="" type="checkbox"/> 21	CBMT CBC	Montréal	QC (CA)	3.01 km	436 Kw
<input checked="" type="checkbox"/> 26	CIVM T-Q	Montréal	QC (CA)	5.60 km	269 Kw
<input checked="" type="checkbox"/> 35	CFJP Noovo	Montréal	QC (CA)	3.01 km	17.7 Kw
<input checked="" type="checkbox"/> 11	CFTM TVA	Montréal	QC (CA)	3.01 km	11 Kw
<input checked="" type="checkbox"/> 12	CFCF CTV	Montréal	QC (CA)	3.01 km	10.6 Kw
<input checked="" type="checkbox"/> 15	CKMI Global	Montréal	QC (CA)	3.01 km	8 Kw
<input checked="" type="checkbox"/> 31	CFHD Ici Mtl	Montréal	QC (CA)	3.41 km	4.03 Kw
<input checked="" type="checkbox"/> 17	CJNT Citytv	Montréal	QC (CA)	2.98 km	2.07 Kw
<input type="checkbox"/> 29	CFTU C. Savoir	Montréal	QC (CA)	4.89 km	0.91 Kw

Import Cancel

(9/10) EazyRF is not responsible for the accuracy of public data.

Just type a location data as a postal code, a zip code, a city name, a full address, or GPS data, or latitude-longitude in the format: 54.75, -123.01 (degrees minutes must be in decimal).

The regions covered for ATSC are Canada, the US and the border area with Mexico. For SECAM, coverage includes France and its border regions.

The list displayed depends on the selected distance, between 50 and 200 km. The selected channels vary depending on the combination of distance and power. This suggestion is not foolproof, only the scanner can be reliable. Some channels are allocated but not used, attention to NEWDT or HDTV channels. Only digital channels are shown.

Distances can be displayed in kilometers or miles.

The choice of the desired measurement system and the default distance can be done in Options/General/Startup (see section 9.3).

EazyRF 4.61 and more has a simplified version of the import of SECAM channels in order to better orient the choice of channels offered (the number of channels is much higher in France).

The simplified display is accessible via the “Simplified version” option:

Import SECAM Channels (database)

Enter either a postal code, a zip code, a city name, a full address or a latitude,longitude (45.40,-73.57)

Place:

Detail:

Distance: ☒ Km ☐ Miles ☒ Simplified version

Channel	Name	City	State/Province	Influence	Power
<input type="checkbox"/> 22	R2	Toulon	FR	Low	10 KW
<input type="checkbox"/> 22	R2	Saint-Raphaël	FR	Low	63 KW
<input checked="" type="checkbox"/> 23	R1	Marseille Grande Éto	FR	Very high	100 KW
<input type="checkbox"/> 23	R1	Marseille Pomègues	FR	Very high	3.5 KW
<input type="checkbox"/> 25	R4	Toulon	FR	Low	10 KW
<input type="checkbox"/> 25	R4	Saint-Raphaël	FR	Low	63 KW
<input checked="" type="checkbox"/> 26	R6	Marseille Grande Éto	FR	Very high	100 KW
<input type="checkbox"/> 26	R6	Marseille Pomègues	FR	Very high	3.5 KW
<input type="checkbox"/> 28	R3	Toulon	FR	Low	10 KW
<input type="checkbox"/> 28	R3	Saint-Raphaël	FR	Low	63 KW
<input checked="" type="checkbox"/> 29	R7	Marseille Grande Éto	FR	Very high	100 KW
<input type="checkbox"/> 29	R7	Toulon	FR	Low	10 KW
<input type="checkbox"/> 29	R7	Marseille Pomègues	FR	Very high	3.5 KW
<input checked="" type="checkbox"/> 30	R3	Marseille Grande Éto	FR	Very high	32 KW
<input type="checkbox"/> 30	R3	Marseille Pomègues	FR	Very high	3.5 KW

(6/35)


EazyRF is not responsible for the accuracy of public data.

A combined rating of distance and power was estimated to create a new “Influence” data, with the results: Very High, High, Medium, or Low.

2.6.3.7 Import scans

The “Import Scan” command read a file created from a frequency scanner format – 35s, dat, csv, rfe, spa, trc):

Scan Data - Québec City Convention Centr 2014-09-15 John Sulek Outside

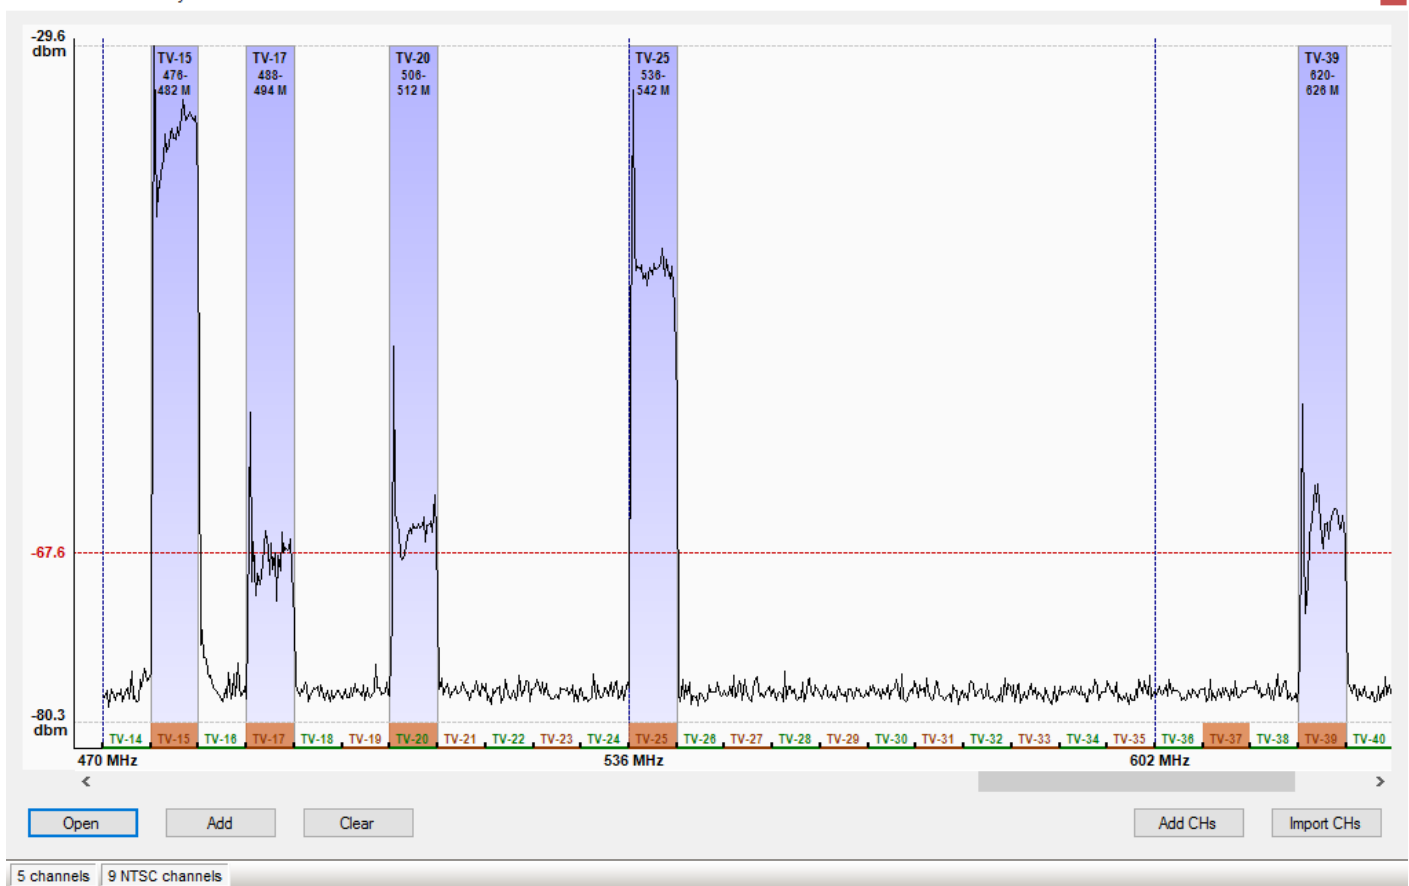

The red line is the detection level for a TV channel (if the cumulative width exceeds 40%). This level can be changed by dragging the text value:



A channel can be activated / deactivated with a click of the mouse. The selected channels of the document appear in orange. Detected channels are independent of the channels in the document. Selection is not automatic because sampling does not necessarily cover the entire range.

The scans files are global, so they are shared with the Intermodulations - Scans module. The data is saved with the document, so if they are no longer useful, it would be better to delete them.

The selection can be imported to the active list (deleting old ones) or added to the list.

2.6.3.8 Management of TV channels on groups

Locally defined TV channels are attached to the current document. The “Enable TV Channels Management on Groups” command:

TV channels of the document (regardless of global channels) *


ATSC | PAL | SECAM | COUNTRY ☒ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

02 (54-60)	✓ 19 (500-506)	36 (602-608)	53 (704-710)
03 (60-66)	20 (506-512)	✓ 37 (608-614) RA	54 (710-716)
04 (66-72)	✓ 21 (512-518)	38 (614-620)	55 (716-722)
05 (76-82)	22 (518-524)	39 (620-626)	56 (722-728)
06 (82-88)	23 (524-530)	40 (626-632)	57 (728-734)
07 (174-180)	24 (530-536)	41 (632-638)	58 (734-740)
08 (180-186)	25 (536-542)	42 (638-644)	59 (740-746)
09 (186-192)	✓ 26 (542-548)	43 (644-650)	60 (746-752)
10 (192-198)	27 (548-554)	44 (650-656)	61 (752-758)
✓ 11 (198-204)	28 (554-560)	45 (656-662)	62 (758-764)
✓ 12 (204-210)	✓ 29 (560-566)	46 (662-668)	63 (764-770) PS

Groups


Allows you to copy the list of active channels from the document to groups for independent management. The “Groups” button calls the manager:

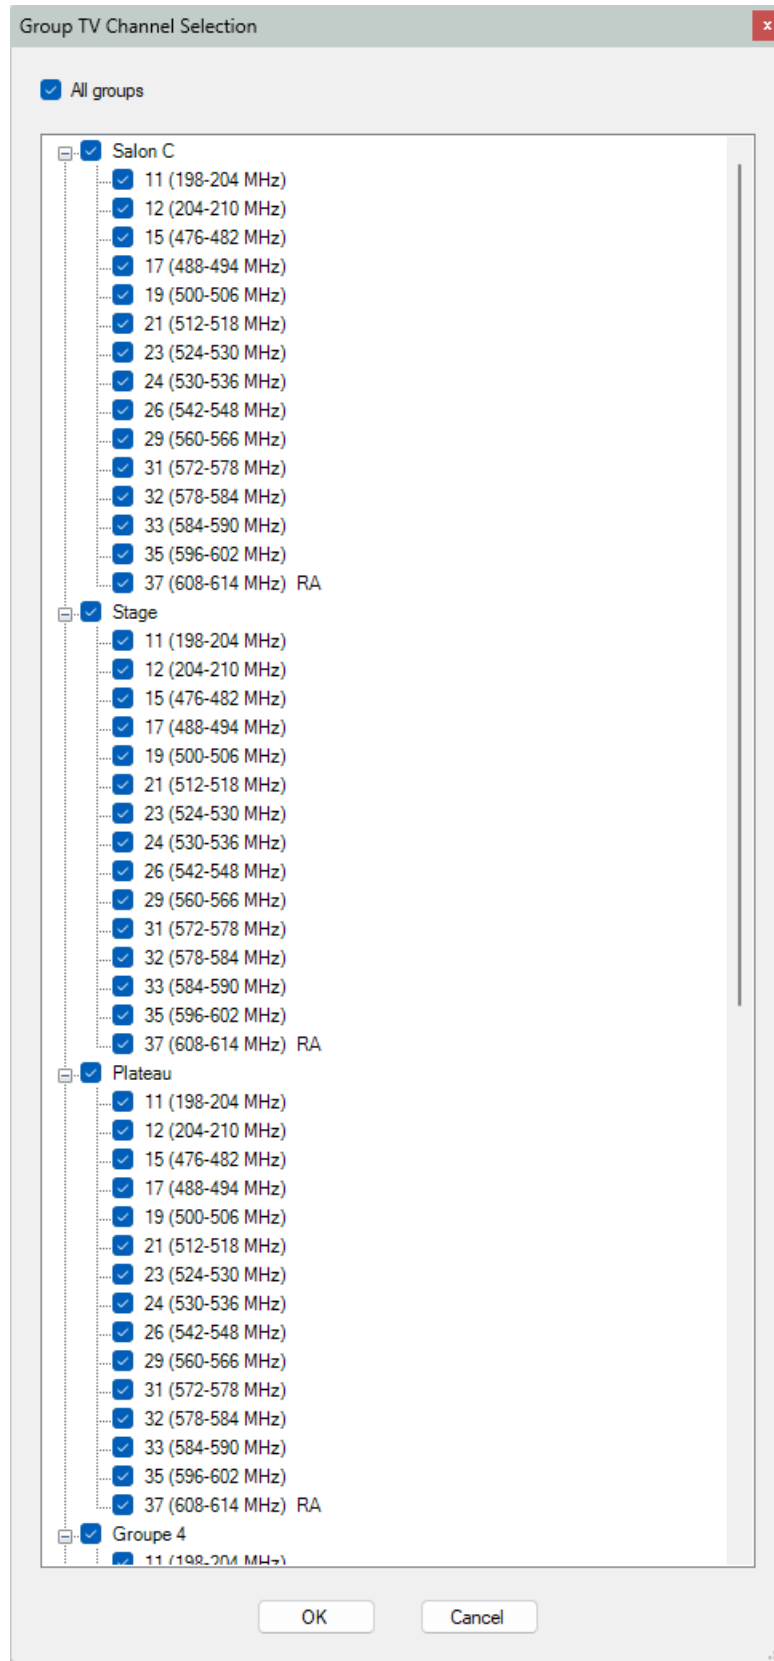


You can activate / deactivate each TV channel on each group. Let's take a simple example, on this event, we have a simple installation in the 4th basement of a theater for interviews during the exit of the artists after the make-up.

Salon Monseau 4th basement

Interviews


#1 - **TV** 

IFB Lectrosonics T4-R1a, Block 23
1 Fr (590.500) 0 Avail


#1 - **TV** 

Shure AD4Q G56
6/8 Fr (522.050 - 569.650) 0 Avail

8 frequencies are needed for the AD4Q G54 device, but only 6 are available. If we look at the spectrum:

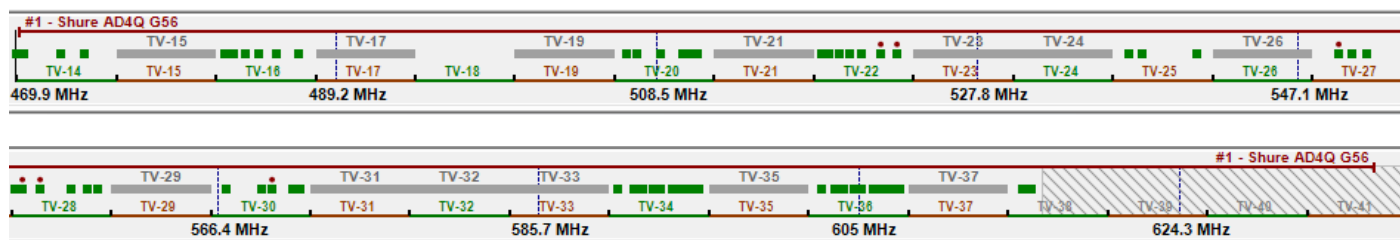

TV channels occupy a large place in the range. In the 4th basement, the signal from most TV channels is negligible. If all the channels of the group are freed:


 **Salon Monseau 4th basement**

- 11 (198-204 MHz)
- 12 (204-210 MHz)
- 15 (476-482 MHz)
- 17 (488-494 MHz)
- 19 (500-506 MHz)
- 21 (512-518 MHz)
- 23 (524-530 MHz)
- 24 (530-536 MHz)
- 26 (542-548 MHz)
- 29 (560-566 MHz)
- 31 (572-578 MHz)
- 32 (578-584 MHz)
- 33 (584-590 MHz)
- 35 (596-602 MHz)
- 37 (608-614 MHz) RA


We easily obtain the number of desired frequencies and even more:

Salon Monseau 4th basement

Interviews

#1 - **TV** 


IFB Lectrosonics T4-R1a, Block 23
1 Fr (590.500) 2 Avail

#1 - **TV** 


Shure AD4Q G56
8 Fr (476.050 - 544.400) 7 Avail

We could also have obtained a satisfactory result by deactivating the weakest channels only.

In the group channel manager, you can call up a menu with the right mouse button by clicking on the name of the group to select or not all the channels:

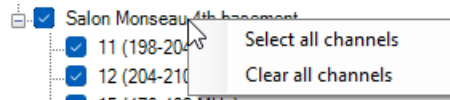

The groups header displays an indicator when the TV on groups channel manager is used, it is in green to indicate that there is no change compared to the channel list of the document and in red when there is:

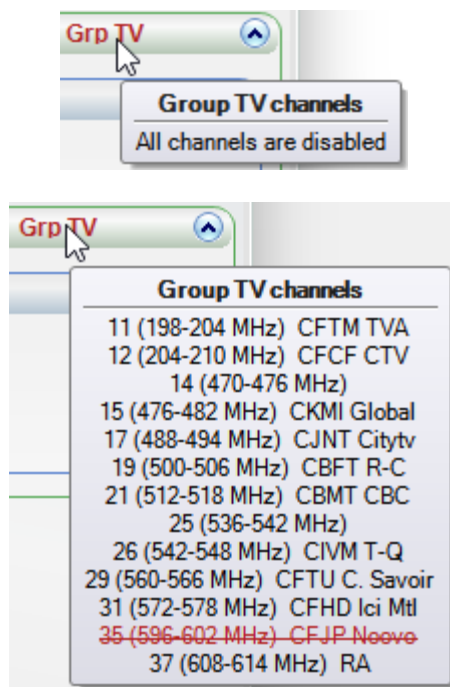

2.6.4 Modified video standard country

Some countries have adapted a video standard by changing the bandwidth of a channel from 8 MHz to 7 MHz for example and by changing the allocation of channel numbers.

The management of basic EazyRF video standards does not allow this type of change. So, a new method has been added to manage this situation, a COUNTRY section has been added to the TV channel management module:

TV channels of the document (regardless of global channels) *

ATSC | PAL | SECAM | **COUNTRY** ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

Country: Australia

6 (174-181)	28 (526-533)	36 (582-589)	44 (638-645)
7 (181-188)	29 (533-540)	37 (589-596)	45 (645-652)
8 (188-195)	30 (540-547)	38 (596-603)	46 (652-659)
9 (195-202)	31 (547-554)	39 (603-610)	47 (659-666)
9A (202-209)	✓ 32 (554-561)	40 (610-617)	48 (666-673)
10 (209-216)	33 (561-568)	41 (617-624)	49 (673-680)
11 (216-223)	34 (568-575)	✓ 42 (624-631)	50 (680-687)
12 (223-230)	35 (575-582)	43 (631-638)	51 (687-694)

☒ Reject Frequencies 470 to 526 MHz - Channels 20 to 27
☒ Reject Frequencies 694 to 820 MHz - Channels 52 to 69

The channels in blue correspond to the global channels.

Groups
 Import Scan
 Import CH
 Clear CH
 CH Names
 Read CH
 Save CH
 OK
 Cancel

32 canaux PAL | 2 local channels

You can thus select the configuration of a country:

Country: Australia

Australia
New Zealand

For the moment the list of countries is limited to Australia and New Zealand. Other countries will be added as needed.

Which gives for New Zealand:

TV channels of the document (regardless of global channels) *

ATSC | PAL | SECAM | COUNTRY ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

Country:

New Zealand

4 (174-181)	25 (502-510)	34 (574-582)	43 (646-654)
5 (181-188)	26 (510-518)	35 (582-590)	44 (654-662)
6 (188-195)	27 (518-526)	36 (590-598)	45 (662-670)
7 (195-202)	28 (526-534)	37 (598-606)	46 (670-678)
8 (202-209)	29 (534-542)	38 (606-614)	47 (678-686)
9 (209-216)	30 (542-550)	39 (614-622)	48 (686-694)
10 (216-223)	31 (550-558)	40 (622-630)	49 (694-702)
11 (223-230)	32 (558-566)	41 (630-638)	
	33 (566-574)	42 (638-646)	

☒ Reject Frequencies 470 to 502 MHz - Channels 21 to 24

☒ Reject Frequencies 702 to 806 MHz - Channels 50 to 62

The channels in blue correspond to the global channels.

Groups

Import Scan

Import CH

Clear CH

CH Names

Read CH

Save CH

OK

Cancel

33 canaux PAL

This new management of TV channels is also supported by the “On Tour” view:

TVchannels - PAL - Australia			Tv-6	Tv-7	Tv-8	Tv-9	Tv-9A	Tv-10	Tv-11	Tv-12	Tv-28	Tv-29	Tv-30	Tv-31	Tv-32	Tv-33	Tv-34	Tv-35	Tv-36	Tv-37	Tv-38	Tv-39	Tv-40	Tv-41	Tv-42	Tv-43	Tv-44	Tv-45	Tv-46	Tv-47	Tv-48	Tv-49	Tv-50	Tv-51
Copy	Cities	X +	174	181	188	195	202	209	216	223	526	533	540	547	554	561	568	575	582	589	596	603	610	617	624	631	638	645	652	659	666	673	680	687
Combined	Reject Freq																																	
Document	No sampling																																	
Sydney-01																																		
SBS-Sydney-Aust-Scan-01																																		

2.6.5 Document Options



The item next to the channels called local settings for a document:

Evaluation parameters of the document

Power Level

Influence:	2 TX Tol	3 TX Tol	5 TX Tol
1: 1-50 mw	0 kHz	0 kHz	0 kHz
2: 51-150 mw	25	25	0
3: 151-400 mw	75	50	25
4: > 400 mw	125	75	50

5th Order Intermodulation
Tolerance 5th Order: 50 kHz
Method: 2 TX and 3 TX
Skip Freq beyond: 32 MHz
☒ Turn on 5th Order on New Device

Digital TV Channels
Reject Freq on each side: 0.500 MHz

Interferences
Reject Freq on each side: 0.300 MHz
Auto Interferences limit: 0.100 MHz

Interrelationship between independents groups
Minimum spacing: 0 kHz

Random evaluation
☐ Separation until: 2000 kHz
☒ Keep Freq already evaluated

Auto Start Freq
☒ Variable Dev

Scans
The frequency reject level is now with the sample file manager.

Default OK Cancel

This window allows you to adjust the evaluation parameters. By modifying a parameter, the global parameters become local (by clicking "OK" of course).

Power Level settings can be changed as needed locally. Chapter 9 explains how to use these settings.

For digital TV channels and areas of interference, the area occupied is adjusted by the given offset width.

To change data of the "5th Order Intermodulation", the Option 5th Order needs to be selected (we will see it later).

Interrelationship between independents groups

Minimum spacing: 0 kHz

When two groups have an independent interrelation (see section 1.5), the gap between two identical frequencies can be defined with this parameter or set to 0 to use the same frequencies.

The Random Evaluation is a mode or when evaluating frequency, instead of assigning frequencies consecutively random separation is added to the value found (like IAS).

The Auto Start frequency of Variable Device can be activated / deactivated for all the document (in priority to the option on the devices). This allows frequencies that are far apart from each other to be assigned to each device if possible.

Interferences

Reject Freq on each side: MHz

Interferences can be added manually or from a sample file, see section 5.6. This parameter is used to determine at what distance from a carrier it is accepted or rejected.

2.6.6 DAB – Digital Audio Broadcasting



The 3rd command allows to call the editor of DBA channels (Digital Audio Broadcasting) Group III. This publisher is not accessible with the ATSC video standard because this frequency band is used by digital television in North America:

DAB (Digital Audio Broadcasting Band III)*

5A 174.928 MHz	8A 195.936 MHz	11A 216.928 MHz
✓ 5B 176.640 MHz	8B 197.648 MHz	11N 217.088 MHz
5C 178.352 MHz	8C 199.360 MHz	11B 218.640 MHz
5D 180.064 MHz	✓ 8D 201.072 MHz	11C 220.352 MHz
		11D 222.064 MHz
6A 181.936 MHz	9A 202.928 MHz	✓ 12A 223.936 MHz
6B 183.648 MHz	✓ 9B 204.640 MHz	12N 224.096 MHz
✓ 6C 185.360 MHz	9C 206.352 MHz	12B 225.648 MHz
6D 187.072 MHz	9D 208.064 MHz	12C 227.360 MHz
		12D 229.072 MHz
7A 188.928 MHz	10A 209.936 MHz	13A 230.784 MHz
7B 190.640 MHz	10N 210.096 MHz	13B 232.496 MHz
7C 192.352 MHz	10B 211.648 MHz	13C 234.208 MHz
7D 194.064 MHz	10C 213.360 MHz	13D 235.776 MHz
	10D 215.072 MHz	13E 237.448 MHz
		13F 239.200 MHz

Reject Freq on each side: MHz

41 DAB channels | 5 selected channels


Buttons: Import Scan, Clear CH, Read, Save, OK, Cancel

Like the TV channels editor, you can save a list for each city and use it later.

You can also select DAB channels from a scan file:



The red line is the detection level for a DAB channel (if the cumulative width exceeds 40%). This level can be changed by dragging the text value:



A channel can be activated / deactivated with a click of the mouse. The selected channels of the document appear in orange. Detected channels are independent of the channels in the document. Selection is not automatic because sampling does not necessarily cover the entire range.

The scans files are global, so they are shared with the Intermodulations - Scans module and TV Channels module. The data is saved with the document, so if they are no longer useful, it would be better to delete them.

You can also import DBA channels from public databases for a specific location with the command "Import CH":

Import DAB Channels France (database) ×

Enter either a postal code, a city name, a full address or a latitude,longitude (45.40,7.57)

Place: My position

Detail: Nice, Maritime Alps, France (43.700, 7.27774)

Distance: ▼

Channel	Name	City	Frequency	Distance ▲	Power ▲
<input checked="" type="checkbox"/> 11C	Beur FM	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 11C	Sud Radio	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 11C	Grimaldi FM	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 11C	Radio Star	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 11C	France Maghreb 2	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 11C	Emotion FM	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 11C	Crooner radio	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 11C	Cannes Radio	Nice	220.352 MHz	4.22 km	6 kW
<input checked="" type="checkbox"/> 7B	Swigg	Nice	190.640 MHz	4.22 km	2 kW
<input checked="" type="checkbox"/> 7B	Radio Life	Nice	190.640 MHz	4.22 km	2 kW
<input checked="" type="checkbox"/> 7B	Ràdio Lengua d'Oc	Nice	190.640 MHz	4.22 km	2 kW
<input checked="" type="checkbox"/> 7B	Collector Radio	Nice	190.640 MHz	4.22 km	2 kW
<input checked="" type="checkbox"/> 7B	Générations	Nice	190.640 MHz	4.22 km	2 kW
<input checked="" type="checkbox"/> 7B	Latina FM	Nice	190.640 MHz	4.22 km	2 kW
<input checked="" type="checkbox"/> 9D	Nice radio	Nice	208.064 MHz	7.62 km	12 kW

(47)

EasyRF is not responsible for the accuracy of public data.


Import Cancel

Just type a location data as a postal code, a city name, a full address, or GPS data, or latitude-longitude in the format: 44.75, 7.01 (degrees minutes must be in decimal).

Coverage includes France only.


The list displayed depends on the selected distance, between 50 and 200 km. The selected channels vary depending on the combination of distance and power. This suggestion is not foolproof, only the scanner can be reliable. Some channels are allocated but not used.

Finally, the DAB channels are displayed in the same way as the TV channels in the frequency detail:

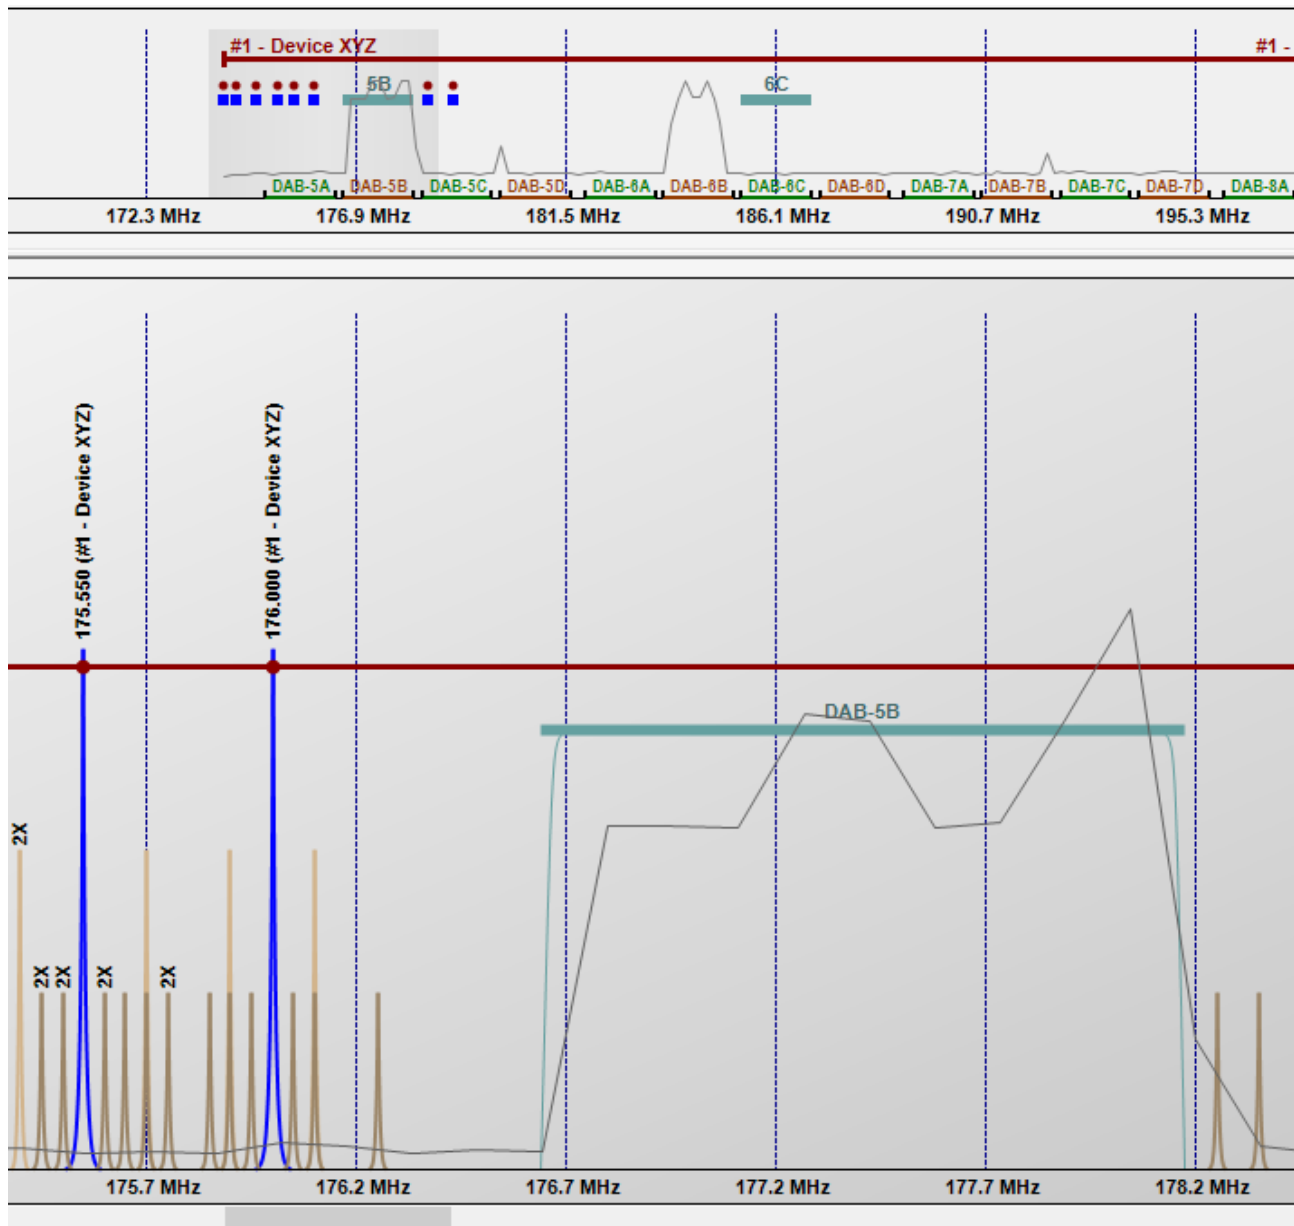

2.6.7 Available Frequencies

The following zone of the toolbar:

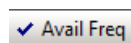

This command enables or disables the calculation of available frequencies. With a device type Shure UHF-R L3 for example, frequencies vary from 638.000 to 698.000 in steps of 25 kHz, thus a possibility of 2400 frequencies. With several devices of this type and a lot of frequencies within this range, the calculation of available frequencies with each of the possible values with a large number of frequencies requires a high time. As the processor performance

has its limits of performance, there are not so many solutions. EazyRF becomes slow according to the power of the computer. This command allows to bypass this type of problems.

By deactivating the calculation of the available frequencies, EazyRF finds a big fluidity. In addition, the calculation of available frequencies can be enabled or disabled for each device individually.

In the window of edition or addition of manual device, an option allows you to launch the calculation of the available frequencies only for the concerned device:



In this way, the calculation is more quickly made and you keep access to the list of available frequencies.

2.6.8 Clipboard


The following zone of the toolbar allows to manage the operations of the clipboard:



In the first part of the commands, you can cut a group, a section or a device. In the second part, the commands allow the copy of a group, a section or a device. Finally, the last item allows to paste the data from the previous operation. Obviously, these commands work from a document to the other one or from an EazyRF application to another one.

2.6.9 Off function

The next area of the toolbar manages "Off Function":

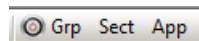

EazyRF allows to put a device, a section or a group to "Off", a bit like turning power off on devices. When a device is off, it is displayed as:




No	Description	Freq	Intermodulation
1		Off (632.100)	
2		Off (632.400)	
3		Off (632.850)	
4		Off (633.450)	

This operation frees the frequencies assigned to a device. The display allows you to see what these frequencies were. Note that if I add another device, these frequencies become available and may be assigned to it.


The purpose of these commands is to release devices without removing them.

2.6.10 Blocked / Released Frequencies

The following section of the toolbar allows to manage frequencies individually:




The first command:

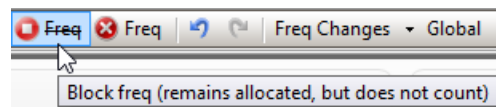

Will block a frequency, e.g. eliminate this frequency of allocation in another device. A blocked frequency corresponds to a frequency that you can identify as used but not on your frequency plan (undesirable). It is best to use this command in a device containing only those blocked (easier to see) frequencies.

The second command:



Frees a frequency, e.g. remove the attribution of the plan. So it becomes available for another device. This is the equivalent of putting device "Off" but for a particular frequency.

These commands may not be displayed if the width of main window is not sufficient.

2.6.11 Undo / Redo


The next section of the toolbar control operations "Undo" & "Redo" commands:




There is no limit on the level of undo/redo of the commands.

2.6.12 Notes / Changes

Finally, the last commands of the toolbar allow you to see the frequencies changes. The first command shows the changes arisen in the last made operation:

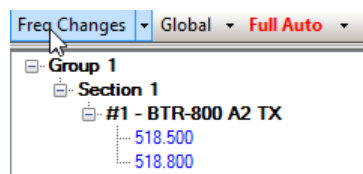

The following command displays the changes since the last backup or opening of the document:

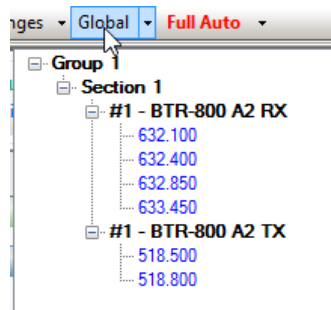

The command affecting the modes of calculations was seen in the chapter 1.





2.7 Notes

2.7.1 Notes – Global View

Notes can be added to the document, groups, sections and devices.


The principle of operation is simple, commands to add a note and commands to modify each device, section, group; for the document, only one button to add / modify because there is only one document to edit.

The commands for adding notes have been centralized in the detail section of the selection:


Group - Section - Device		
Group		Group 1
Section		Section 1
Dev Desc		#1
beyerdynamic		
Wished Freq		2

Add a note to the device


The "Note" icon contains a "+" to indicate an addition of a note. By clicking on the add note, the editor appears:

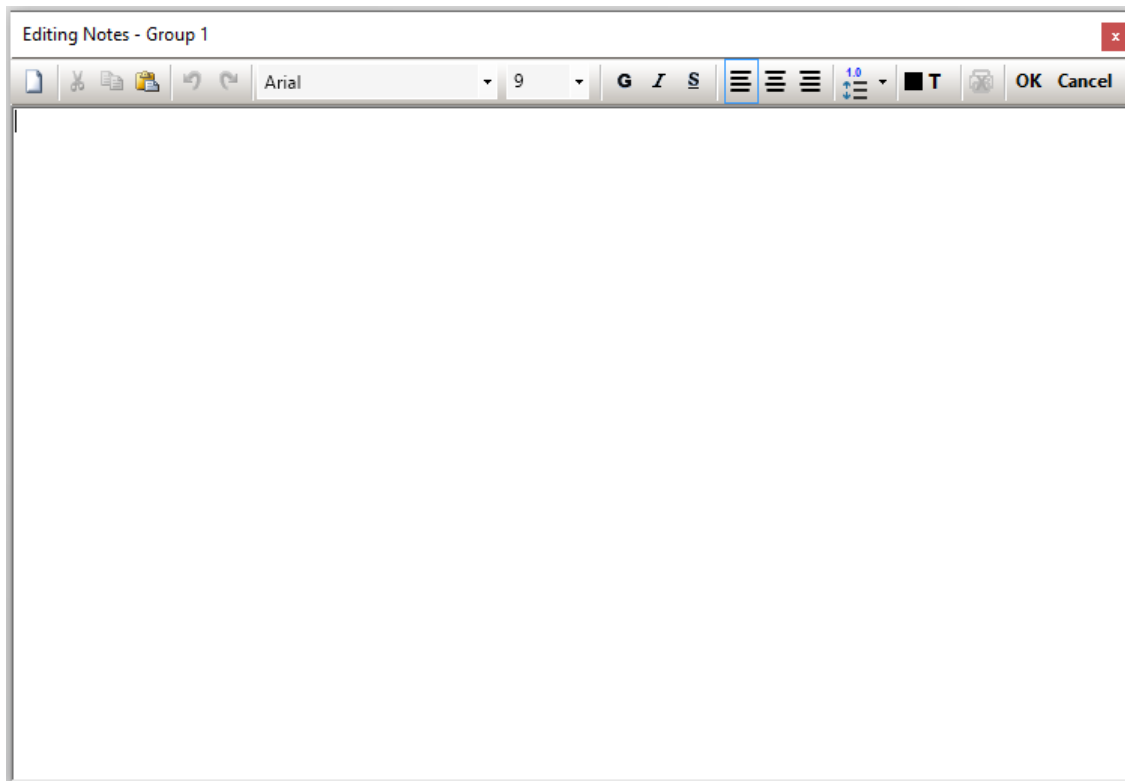


When a note is added, the add note icon disappears and another icon appears on the group, section or device:

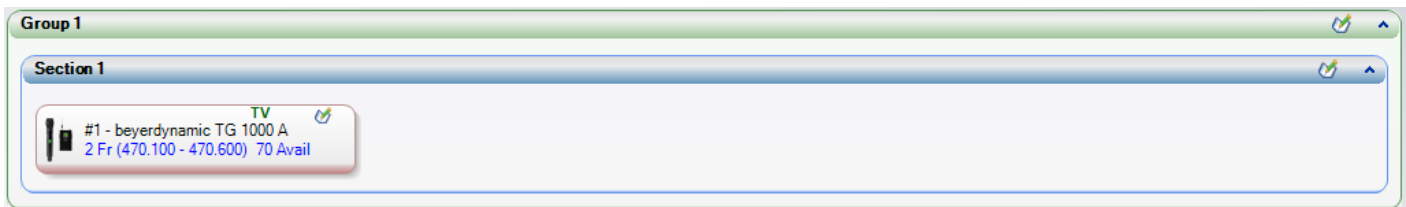

By moving the mouse pointer over the note icons, the content appears:

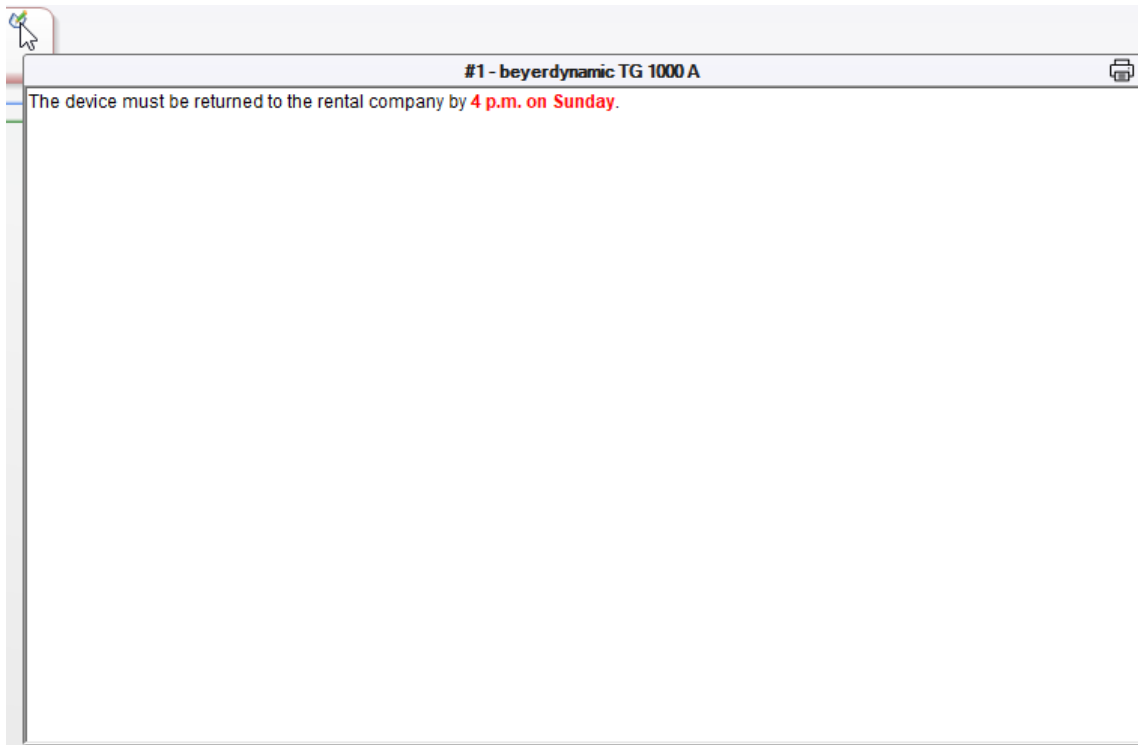


By clicking on the icon, the note editor appears instead of the text bubble:

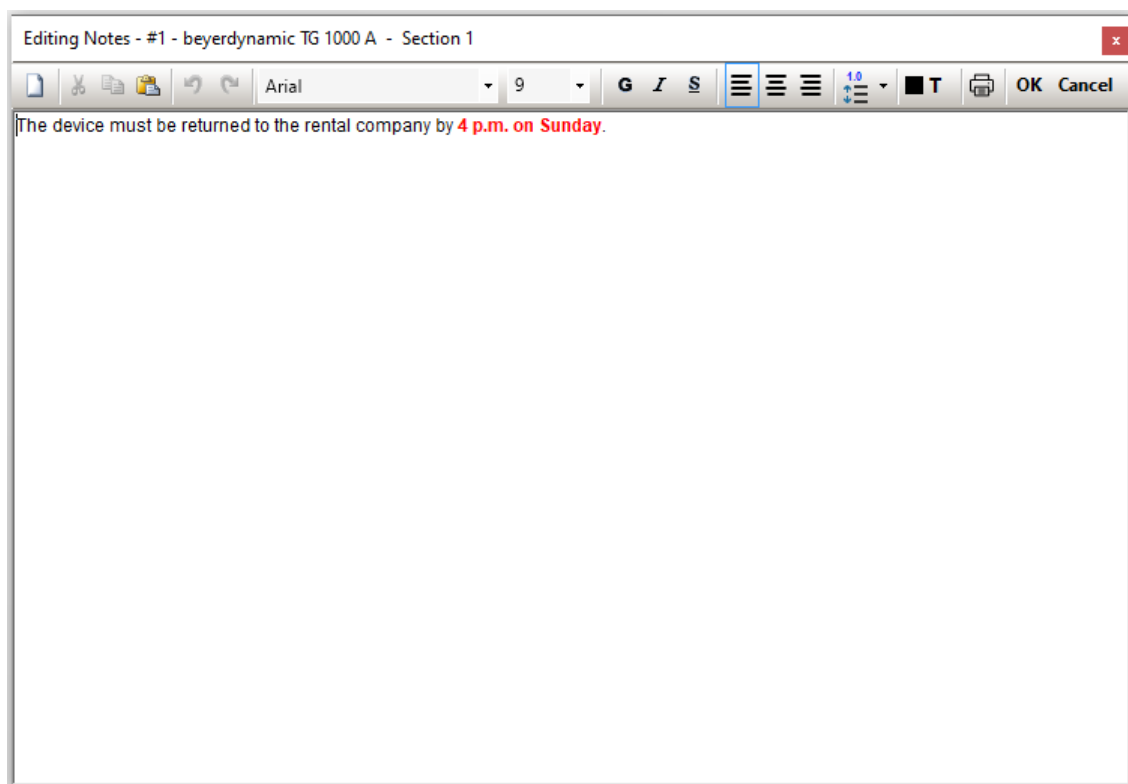




2.7.2 Note editor

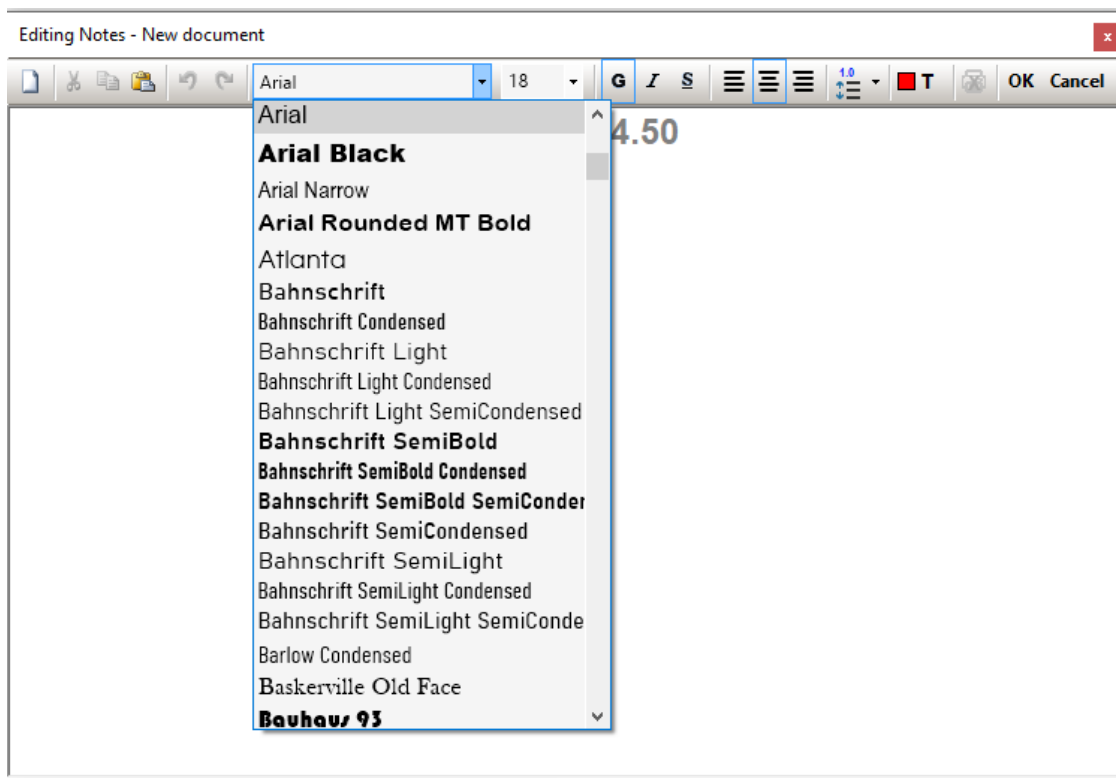The note editor allows you to style the text from its toolbar:

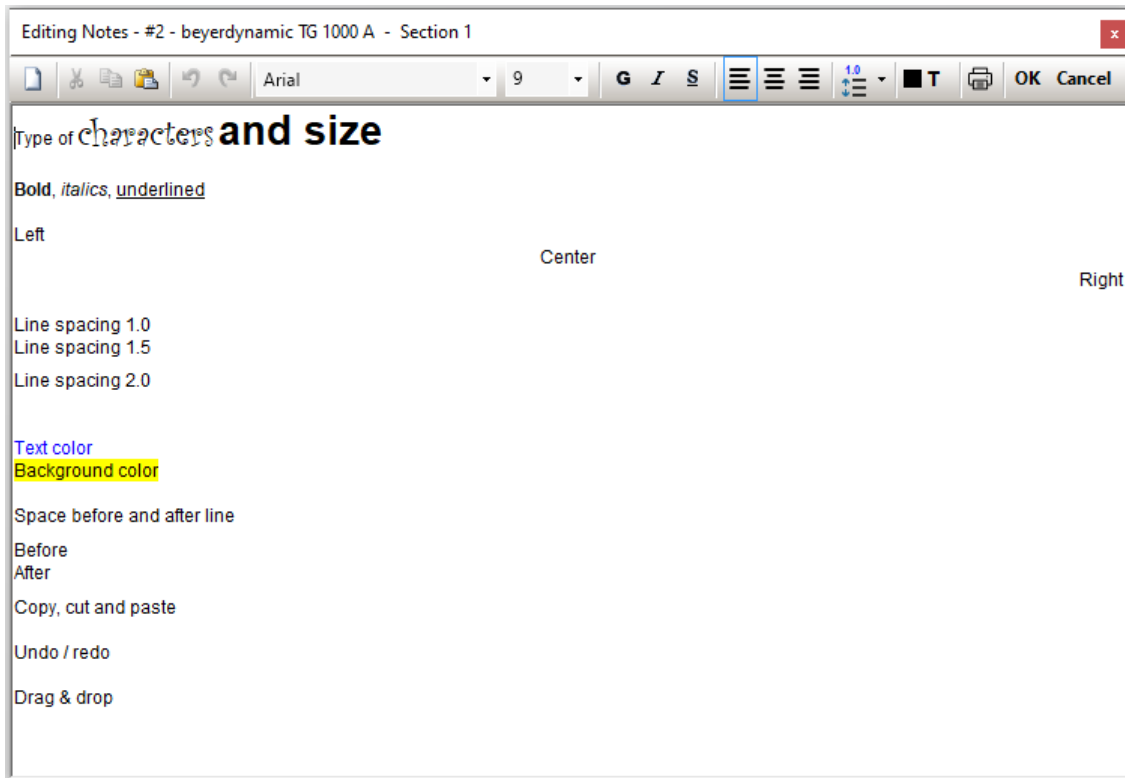


Here is an overview of the supported formatting:




The printer icon sets whether or not to print device notes in reports ( or ). Only device notes are printable.

Printing of notes for devices can be enabled individually for each device and globally enabled / disabled when printing reports:

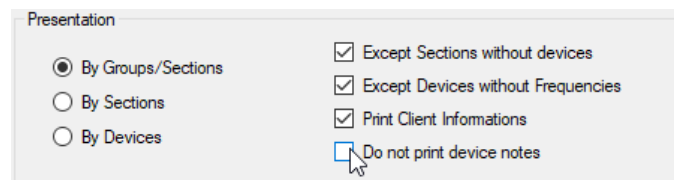

To copy frequencies and descriptions of a device, make a selection in a device editor, copy with the keyboard: CTRL + C:

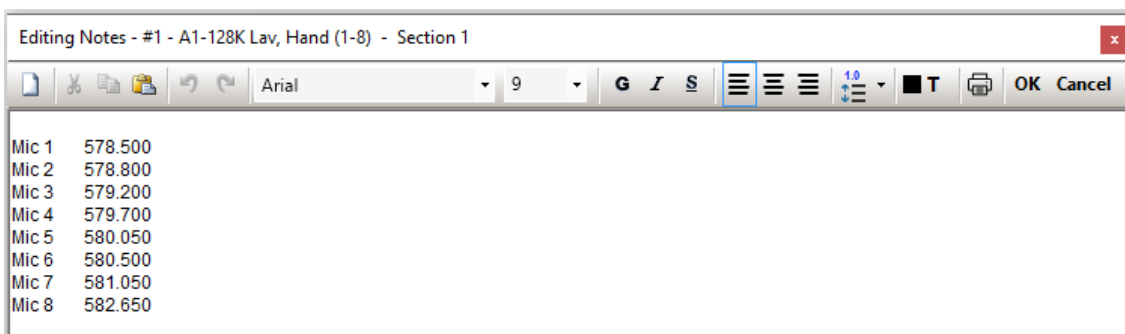

To drag & paste from Excel or Word, these must have been started as administrator.

You can paste pictures as well.

If you need more sophisticated text formatting, you can do it in Word and simply copy it to EazyRF.


The data is saved in compressed format (zip), therefore of reasonable size.

The size of the edit window can be adjusted and saved for use when EazyRF is restarted. To restore the default size, increase or decrease the size with the CTRL key, the size will be adjusted at the end of the operation.


The TAB key moves to the note of the next device, while Shift + TAB, moves to the previous device. To use tabulation, you must use the CTRL key simultaneously.

2.7.3 Notes – Detailed View

Adding a note from the "Detailed View" pane is done in a similar way, the commands are always found in the detail section of the selection:

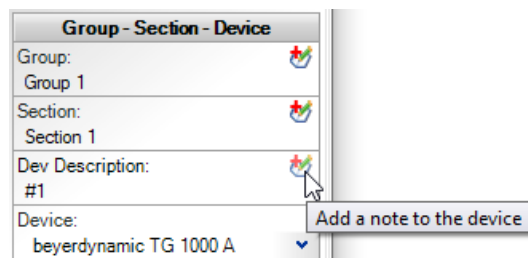


With the result when notes are added to a device, a section, a group and to the document:

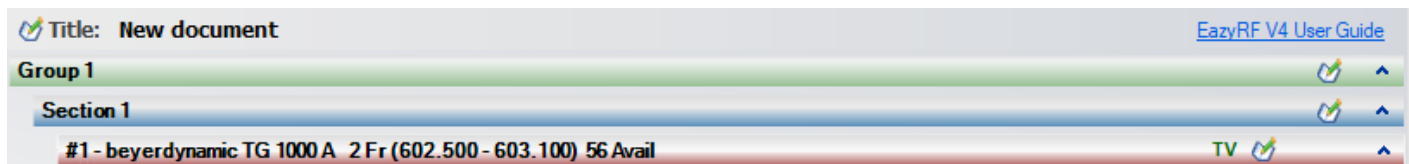


2.7.4 Notes – Document

The operation of a note for the document is slightly different. By default, EazyRF offers content (EazyRF with the latest version number):

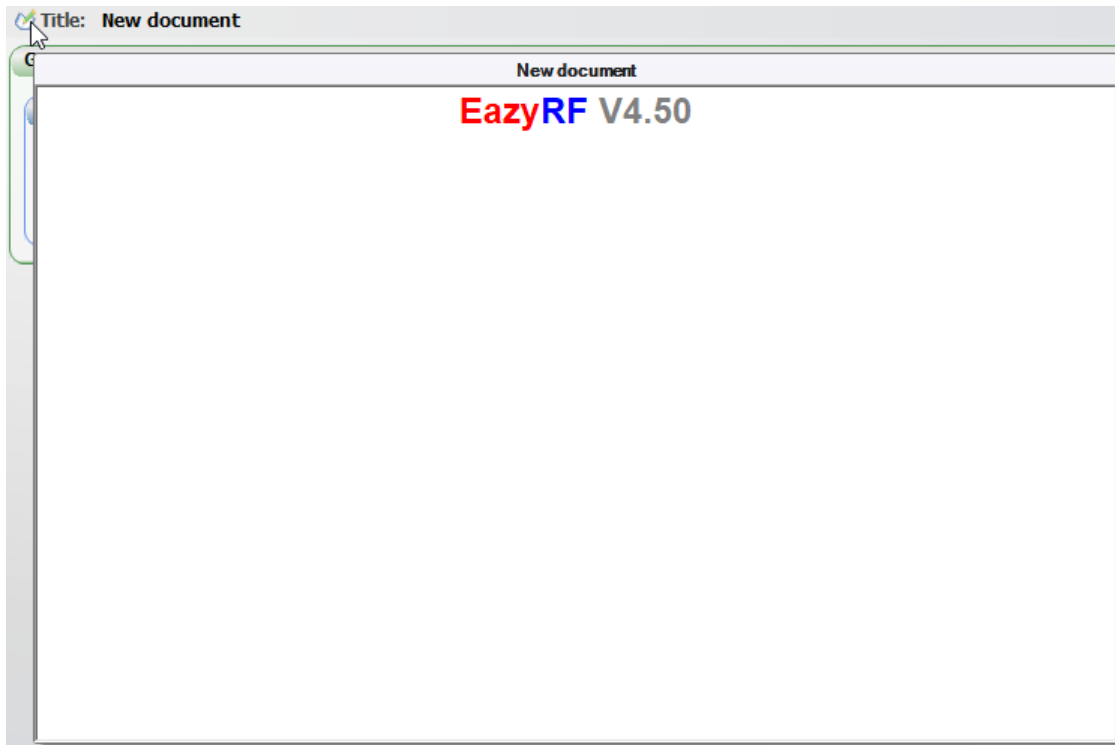

Adding and viewing the note is done from the same command:

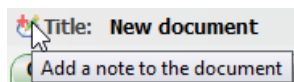

2.7.5 Notes – Frequencies Plan

In the "Frequencies Plan" view, only the command for the document note is found:

Title: New document			
	Description	Frequency	Comment

2.7.6 Notes – Multi-Scenes

See section 8.8.8 of chapter 8.

2.8 Edition of a Device

The editing window of a device is called by making a double-click on a device in a section:

Device Edition - #1 - Shure AD4D G57

Description: #1

Device: Shure AD4D G57

Start: 470.125 Stop: 607.875 Increment: 0.025

Auto Start: ☒ 503.700 TV Channels: 15 (476-482 MHz ...)

Descending order: ☐ Tolerance 5th: 50

5th Order Evaluation (if Global): ☐ Tolerance 2 TX: 100

Tolerance 3 TX: 50

Separation: 400

Image Freq: None

Filter: 32.00

TX Power Level: 1 1-50 mw 2 TX: 0 kHz 3 TX: 0 kHz 5 TX: 0 kHz

Fr Nbr: 8 Protected: ☐ Manual: ☐ Avail Freq: ☒ Random: [Button] Clear: [Button]

+ Ctrl = 1 Col

No	Description	Freq	Intermodulation
1		506.500 20	
2		506.900 20	
3		507.450 20	
4		507.900 20	
5		508.500 20	
6		509.200 20	
7		510.000 20	
8		510.650 20	

51 Avail Freq

- 14 470.775
- 14 471.175
- 14 472.025
- 14 472.725
- 14 473.525
- 14 474.425
- 14 475.175
- 16 486.050
- 18 499.250
- 22 518.500
- 22 519.000
- 22 519.750
- 22 520.850
- 22 522.550
- 22 523.450
- 23 524.800

Undo: Increase Freq Nbr to 8

This window allows you to edit all the parameters affecting the evaluation of the device. It is also possible to use the list of available frequencies to make changes. To classify the frequencies in ascending or descending order, use the arrows at the top of the header "Freq". It is also possible to classify the frequencies by description. It is also possible to auto-increment the description frequencies using Ctrl + Alt (as seen above) and import data from Excel.

The editor has its own system of "Undo/Redo" which allows to cancel/repeat each operation. The command "Undo/Redo" of the "Global View" and "Detailed View" panes allows you to cancel/repeat the complete editing done on a device.

In addition, the editor now has a visual effect when moving available frequencies to clearly identify the destination, the background color varies:



This visual effect is also available in the "Global View" pane.

The format of the editor changes when there are intermodulations in order to display the details of them:

Device Edition - #2 - Shure AD4D G57

Description: #2

Device: Shure AD4D G57

Start: 470.125 Stop: 607.875 Increment: 0.025

☐ Auto Start ☐ Descending order ☐ 5th Order Evaluation (if Global)

TV Channels: 15 (476-482 MHz ...)

Tolerance 5th: 50

TX Power Level: 1

Fr Nbr: 4

☒ Protected ☒ Manual ☒ Avail Freq

Tolerance 2 TX: 100

Tolerance 3 TX: 50

Separation: 400

Image Freq: None

Filter: 32.00

Random

Clear

Nb IM: 4

Frequency	Intermodulation
487.000	25 kHz - 470.150 & 471.175 & 486.000 0 kHz - 471.175 & 475.175 & 483.000 25 kHz - 473.525 & 482.500 & 495.950
495.950	25 kHz - 473.525 & 482.500 & 487.000
497.100	
499.150	

47 Avail Freq

No	Description	Freq	Intermodulation
1		487.000	25 kHz - 470.150 & 471
2		495.950	25 kHz - 473.525 & 482
3		497.100	
4		499.150	

8 Freq

Frequency	Description
470.150	#1 - Shure SLX G4-G4E - Section 1, Group 1
471.175	#1 - Shure AD4D G57 - Section 1, Group 1
473.525	#1 - Shure AD4D G57 - Section 1, Group 1
475.175	#1 - Shure AD4D G57 - Section 1, Group 1
482.500	#1 - Shure PSM 1000 G11 - Section 1, Group 1
483.000	#1 - Shure PSM 1000 G11 - Section 1, Group 1
486.000	#1 - Shure AD4D G57 - Section 1, Group 1
495.950	#2 - Shure AD4D G57

4/11 IM

OK Cancel

EazyRF offers several data editing methods. The result is the same regardless of the method used. The objective is to eliminate the navigation to find commands. Normally there is always a method of edition within the reach of the user.


The buttons:



Allow you to move from device to device without having to close the editor and open it with another device.

2.8.1 Device scans


The "Scans" command of the device editor calls up the sampling analysis module according to a device, i.e. for the range of frequencies covered by the device:

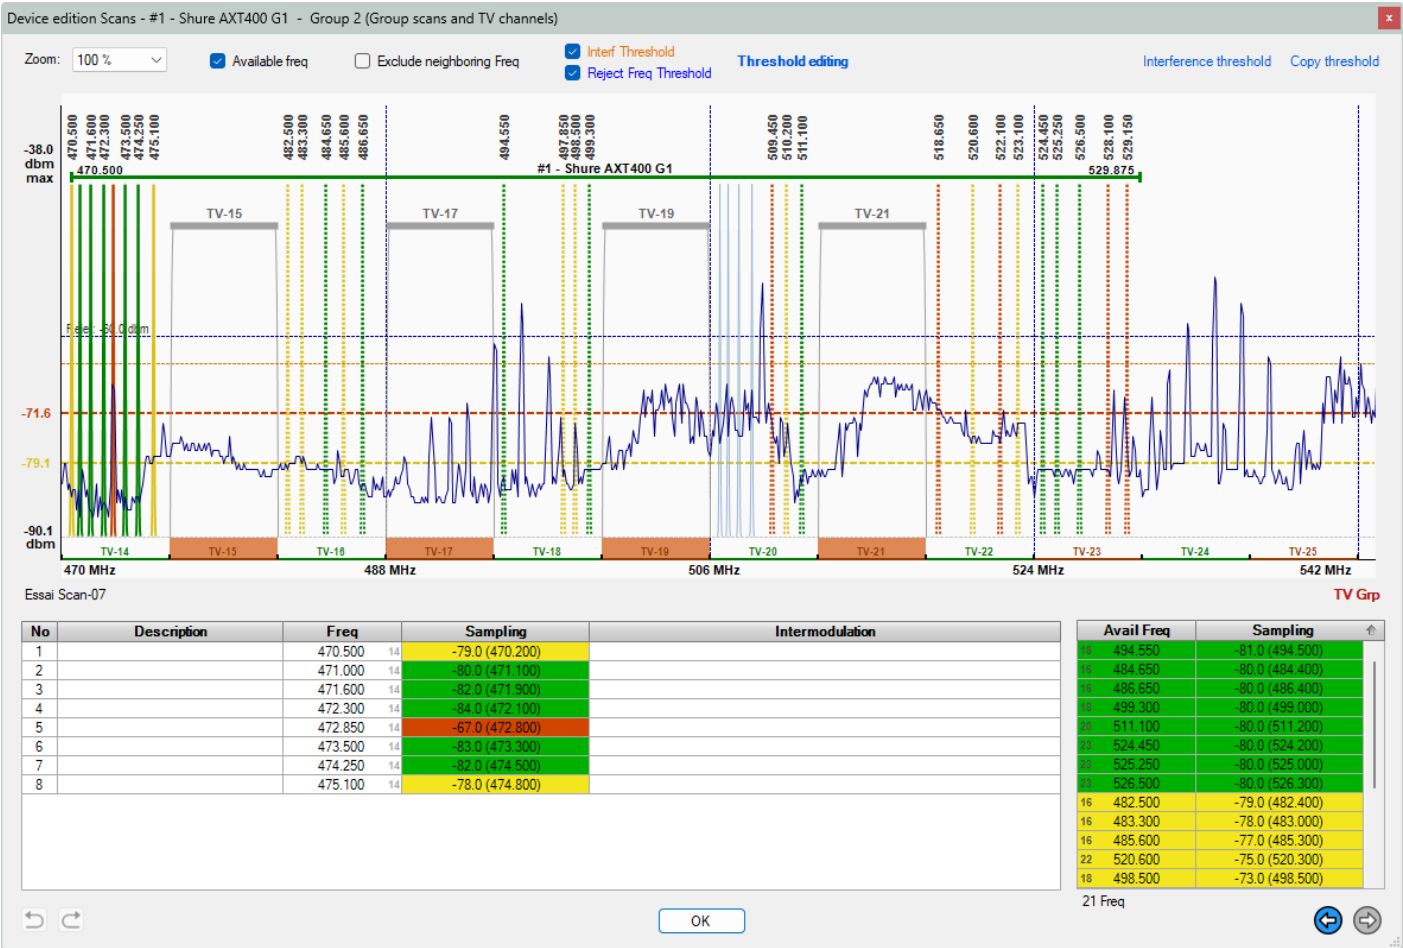


The title bar displays which type of scan file is used by the group associated with the device, either that of the group or of the document (see section 5.6), the scans are displayed in gray when they come from the document or in blue if they belong to the group.

The name of the scan file is displayed at the bottom of the sampling display area on the left.


If the group manages the TV channels, the display "TV Grp" appears at the bottom right of the sampling display area:

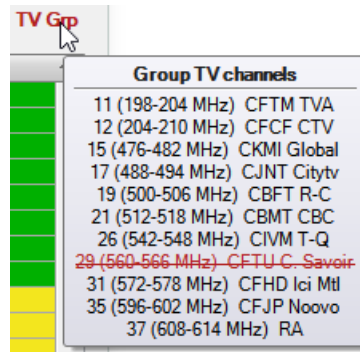

TV channels can also be modified as in the scan module, but the difference is that in this editor, there is no need to save TV channels because the change is made immediately for real-time viewing. As this editor has Undo/Redo commands, changing TV channels uses it:

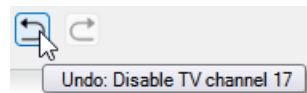


By default, EazyRF displays the full range of frequencies, the "Zoom" command displays more details:

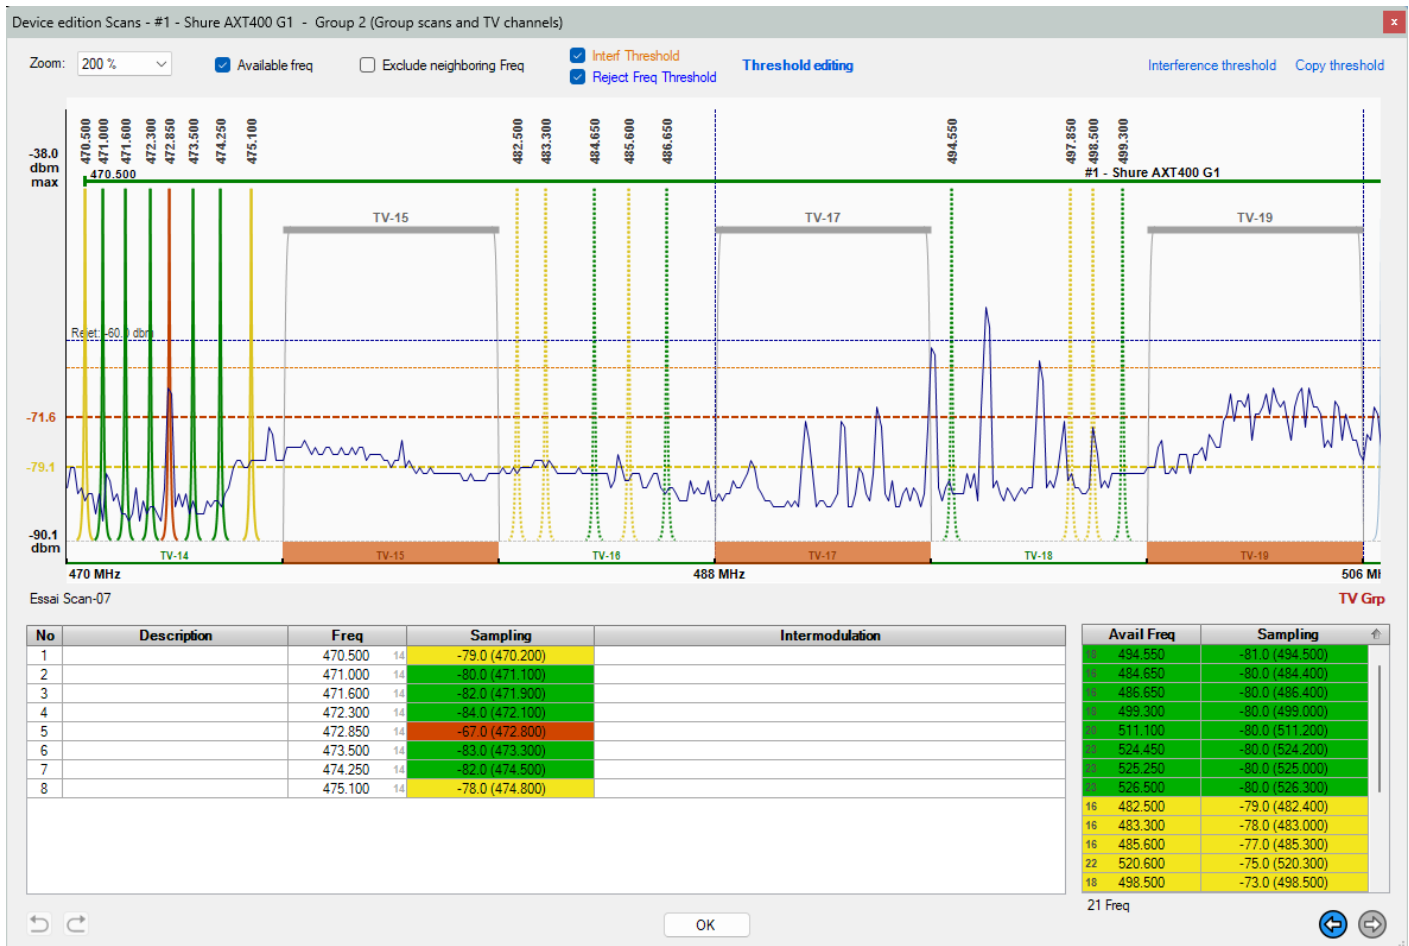

The frequency analysis is based on the level of the samples, the value of the rejection width of the interference frequencies (0.300 MHz by default) is used for the calculation (document parameters).


A yellow tolerance threshold is used to detect the frequencies that can be reached by sampling:

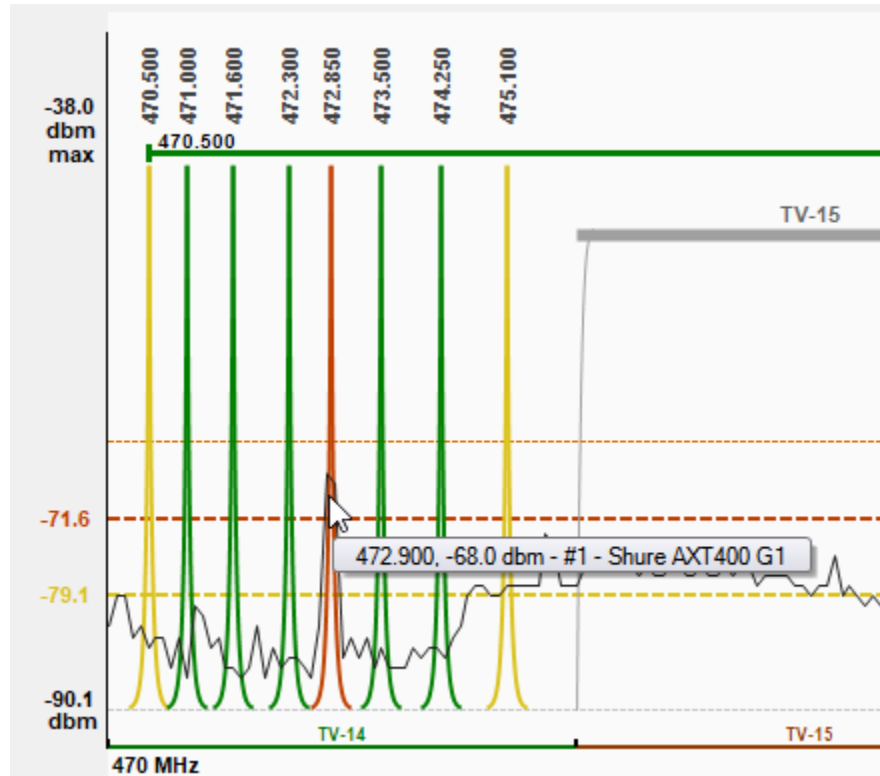


The detection threshold of the red zone is fixed here at -71.6 dbm, the frequency 472.850 is near a sampling peak at 472.900, level -68.0 dbm. The affected frequency is displayed in red to illustrate the possible problem.

The yellow zone makes it possible to detect the frequencies less reached by the samplings.

The frequencies shown in green are located in an area where sampling is less accentuated.

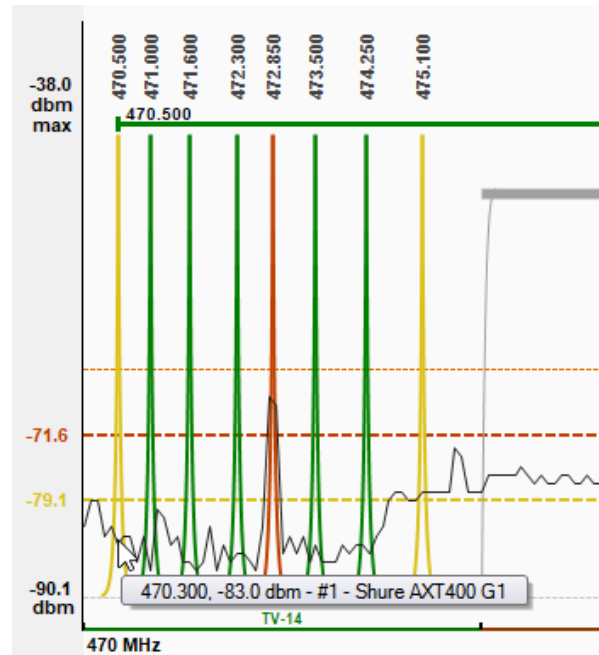

See section 2.7.1.2 for more details on detection thresholds.

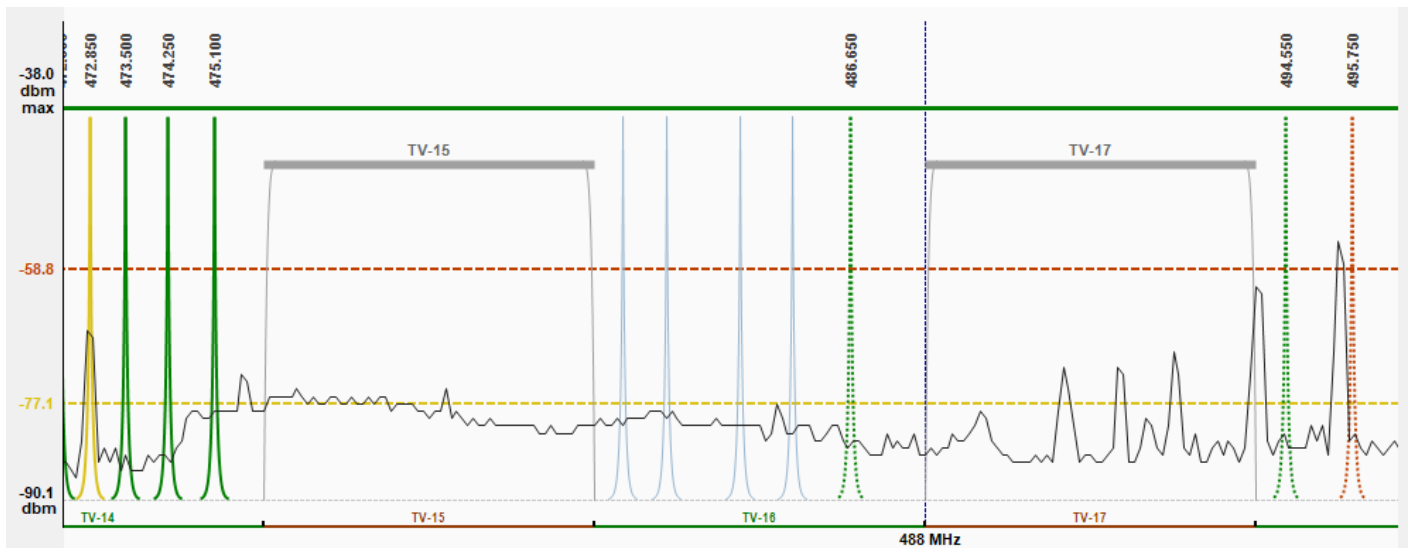


The available frequencies are also analyzed, they are displayed in dotted lines. Frequencies in light blue are frequencies assigned to other devices (without being analyzed), but within the spectrum of the displayed device.

The following controls allow you to display or not the available frequencies and those of other devices:


☒ Available freq
 ☐ Exclude neighboring Freq

To move the tolerance level, all you have to do is drag the text of the level displayed in the left part:

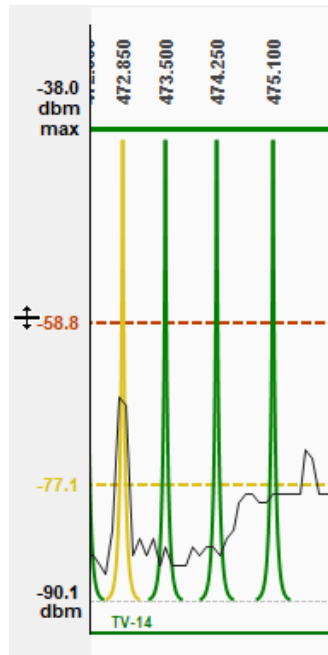

At this point, the mouse pointer changes shape to indicate the displacement.

The rejection zone threshold can be modified, the threshold is defined for the document or for the group and not for a device:

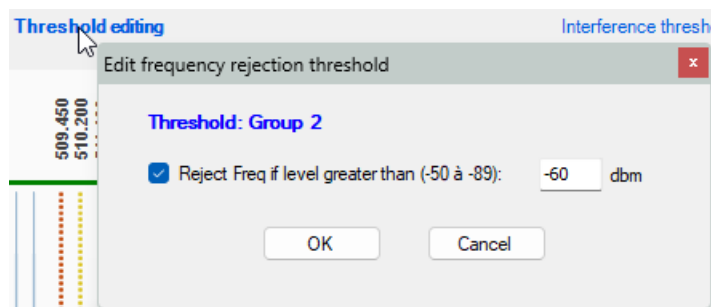

2.8.1.1 Device Scans – Results analysis

EazyRF analyzes the frequencies (basic and available) and displays the result using a colored background (green, yellow and red):

No	Description	Freq	Sampling	Intermodulation
1		470.500 14	-79.0 (470.200)	
2		471.000 14	-80.0 (471.100)	
3		471.600 14	-82.0 (471.900)	
4		472.300 14	-84.0 (472.100)	
5		472.850 14	-67.0 (472.800)	
6		473.500 14	-83.0 (473.300)	
7		474.250 14	-82.0 (474.500)	
8		475.100 14	-78.0 (474.800)	


We see that the frequency 470.500 is in the yellow zone because of the sampling 470.200 of level -79.0 dbm. The frequency 472.850 is found in the red zone because of the sampling 472.800 of level -67.0 dbm.

The analysis of the available frequencies goes a little further:

Avail Freq	Sampling	Avail Freq	Sampling
18 494.550	-81.0 (494.500)	16 482.500	-79.0 (482.400)
18 484.650	-80.0 (484.400)	16 483.300	-78.0 (483.000)
18 486.650	-80.0 (486.400)	16 485.600	-77.0 (485.300)
18 499.300	-80.0 (499.000)	22 520.600	-75.0 (520.300)
18 511.100	-80.0 (511.200)	18 498.500	-73.0 (498.500)
22 524.450	-80.0 (524.200)	22 523.100	-73.0 (522.800)
22 525.250	-80.0 (525.000)	18 497.850	-72.0 (497.700)
22 526.500	-80.0 (526.300)	20 510.200	-72.0 (509.900)
16 482.500	-79.0 (482.400)	22 522.100	-71.0 (522.300)
16 483.300	-78.0 (483.000)	20 509.450	-70.0 (509.200)
16 485.600	-77.0 (485.300)	22 518.650	-70.0 (518.400)
22 520.600	-75.0 (520.300)	23 529.150	-69.0 (529.000)
18 498.500	-73.0 (498.500)	23 528.100	-68.0 (528.400)

The frequencies are classified by detection zone (green, yellow and red) and moreover, they are classified according to the level of the samplings and then by frequency value. So EazyRF suggests you the best frequencies according to the sampling, the frequency 482.500 (-79.0 dbm, 482.400) is a better choice than the frequency 510.200 (-72.0 dbm, 509.900) for example.

The frequencies can be classified in ascending or descending order of samplings, or frequency values by clicking on the headers, an indicator illustrates the direction:



In addition, the frequency order follows the "Ascending / Descending" direction of the device.

This module is not an editor of the parameters of a device, it only allows you to drag and paste the available frequencies. To do this, make a selection with the left mouse button for a non-continuous selection (use Shift for an extended selection or Ctrl for a multiple selection), or drag the right mouse button for a continuous selection. Finally, to move the selection, use the left button:

No	Description	Freq	Sampling	Intermodulation	Avail Freq	Sampling
1		470.500	14	-79.0 (470.200)	18	494.550 -81.0 (494.500)
2		471.000	14	-80.0 (471.100)	18	486.650 -80.0 (486.400)
3		471.600	14	-82.0 (471.900)	18	499.350 -80.0 (499.100)
4		472.300	14	-84.0 (472.100)	23	525.150 -80.0 (524.900)
5		472.850	14	-67.0 (472.800)	23	526.050 -80.0 (525.800)
6		473.500	14	-83.0 (473.300)	22	520.650 -75.0 (520.400)
7		474.250	14	-82.0 (474.500)	22	521.200 -75.0 (520.900)
8		475.100	14	-78.0 (474.800)	22	521.850 -74.0 (521.700)


18	494.550	-81.0 (494.500)
18	486.650	-80.0 (486.400)
18	499.350	-80.0 (499.100)
23	525.150	-80.0 (524.900)
23	526.050	-80.0 (525.800)
22	520.650	-75.0 (520.400)
22	521.200	-75.0 (520.900)
22	521.850	-74.0 (521.700)
18	498.500	-73.0 (498.500)
22	523.450	-73.0 (523.200)
18	497.850	-72.0 (497.700)
22	519.350	-72.0 (519.300)
22	518.850	-71.0 (518.600)

Any modification can be canceled and redone using the “Undo / Redo” commands.

By positioning the mouse pointer over the list of available frequencies, the lower and upper spacing of the frequency from the document frequencies is displayed:

Avail Freq	Sampling
552.500	-100.4 (552.775)
552.950	-100.4 (552.775)
577.950	1.200 of 551.300 MHz - #1 - Shure AD4D G54 (Section 1 - Salon C)
608.400	1.700 of 554.200 MHz - #1 - Sennheiser EM3732-II A (Section 1 - Salon C)

The arrows at the bottom of the window allow you to move to the next or previous device:

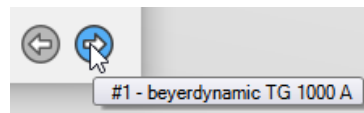


The "Sampling" option of the document parameters allows frequencies to be rejected automatically during calculations (see section 2.5.4):

Scans


☐ Reject Freq if level greater than (-50 à -89): dbm

2.8.1.2 Device Scans – Threshold detection


By default, EazyRF uses the interference detection threshold of the Sampling module:

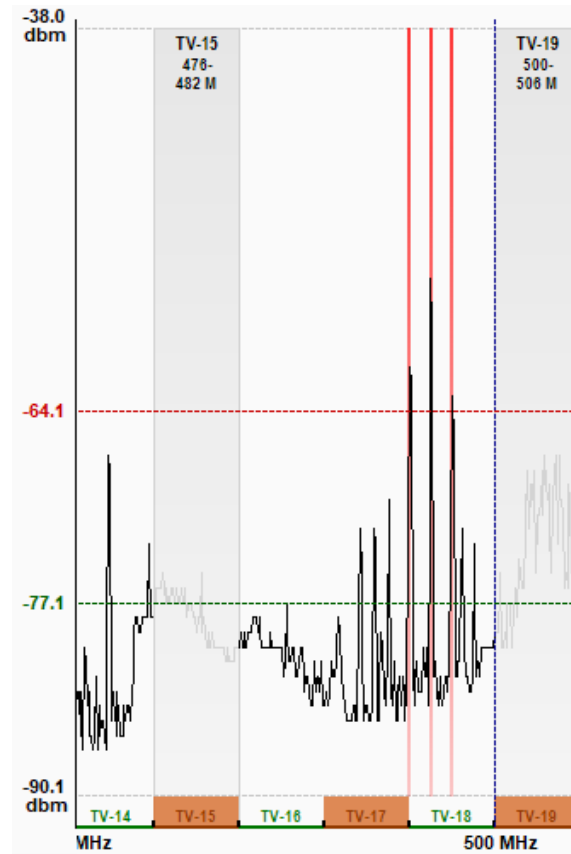

In this example, the threshold is set to -64.1 dbm. EazyRF will use this value with an offset of -7.5 dbm for the red level and -15 dbm for the yellow level, i.e. -71.6 and -79.1 respectively when adding a device:

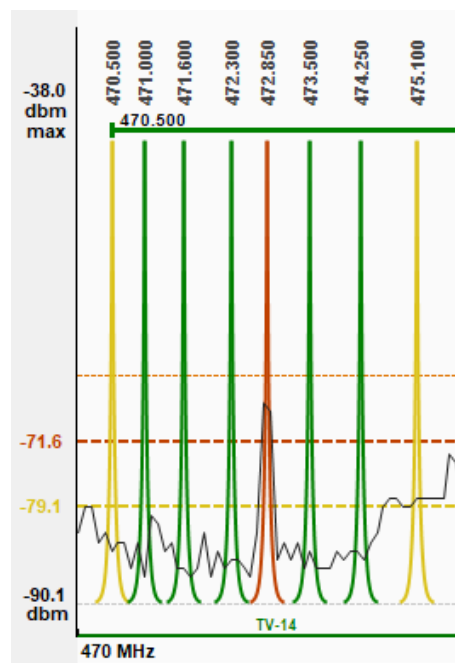


These values can be modified manually or directly with the command:

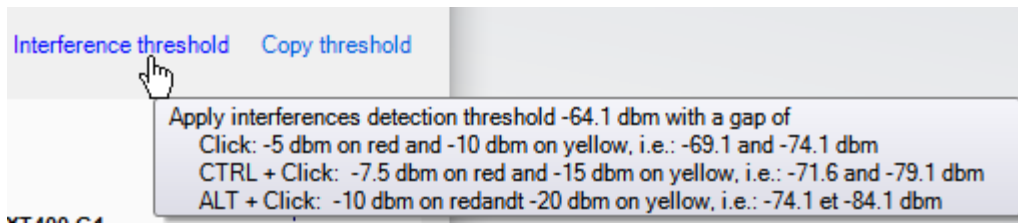


Thus, by using the Ctrl, Alt or none keys, a different correction can be assigned from the level of interference detection.

The threshold of the interference level or that of the rejection frequencies can be displayed with these commands:

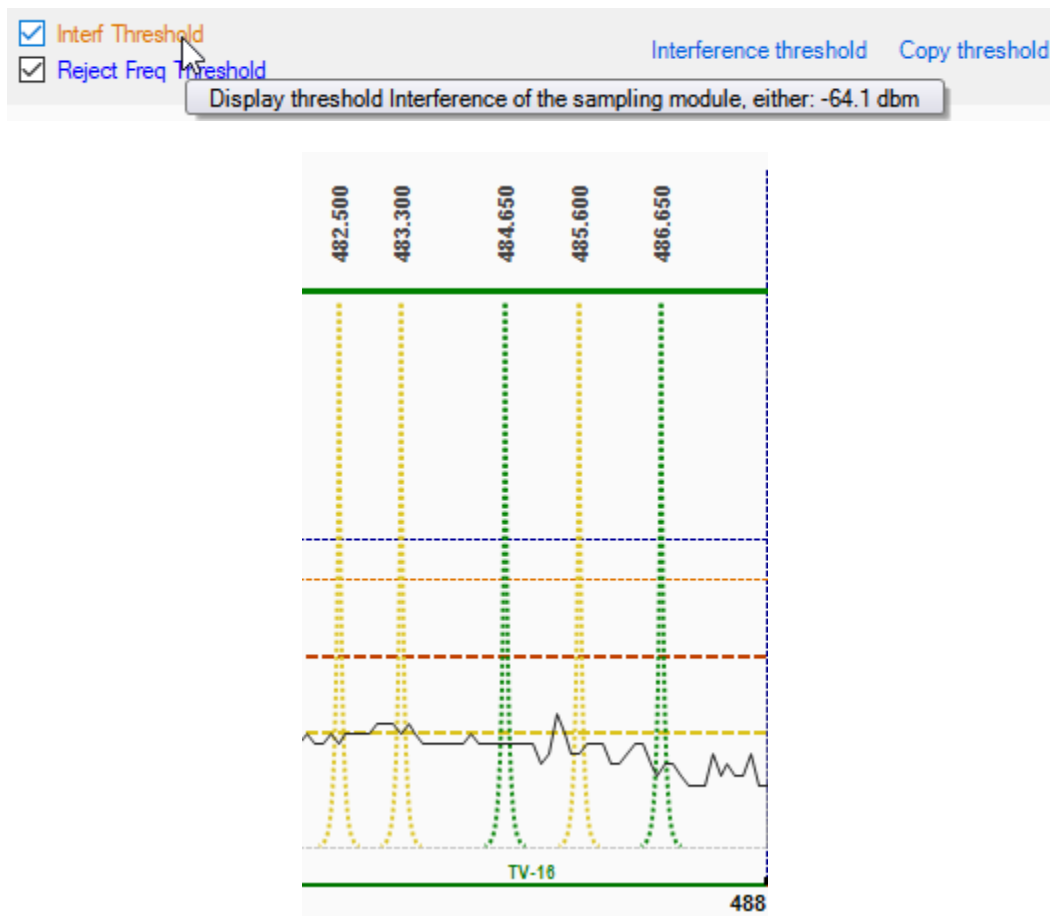


The orange threshold represents the level of interference and the blue that of the automatic frequency rejection (if activated).

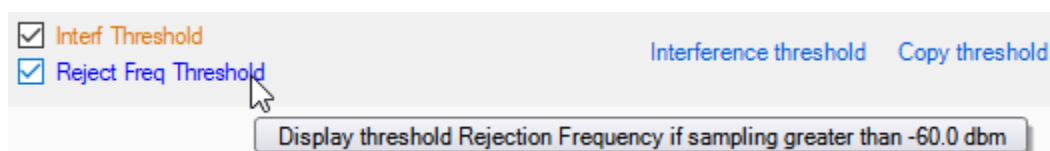

See section 2.5.4 for more information on the rejection of frequencies according to sampling.

Finally, the red and yellow threshold values can be copied to all devices in the document or in a group:

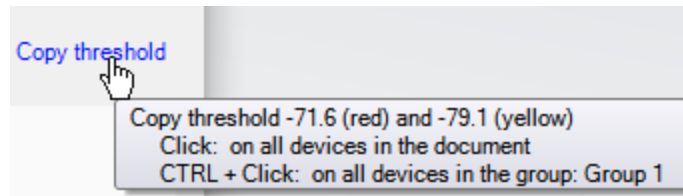

2.9 Client Report creation

This module is used to create a report for delivery to a customer. The report can be created in pdf or printed directly.

Here is an example of a report:

Logo

Address

Email
Phone

Frequencies Coordination

Version: **Guide Test 4.71 221101-1200**
 Event: **New document**
 Client: **NW**
 City: **Montreal**
 Date: **11/11/23**
 Contact: **Roger Rog**
 Phone: **123-456-7890**
 Email: **lui@me.com**

Main Stage			
Micros			
#1 - beyerdynamic TG 1000 A			
	584.750	585.850	
	586.850	587.400	
	588.100	588.600	
	589.450	590.600	
#1 - beyerdynamic TG 1000 B			
	552.500	553.000	
	553.650	554.200	
In-Ear			
#1 - Shure PSM 1000 G11			
	527.800	528.900	

To create this report, use the command:



2.9.1 Print Details

The tool has three panes that allow you to define the elements to be printed, the client informations, and the customized creation of the report header.

In the "Print Details" pane, you can select each group or section separately, the "All Groups" option selects all groups and sections.

The size makes it possible to reduce the height of the lines of the document and the "2 columns" option, to place two frequencies per line. The "Section Group Name" option allows you to display the name of the group following the name of the section.

In the "Presentation" section, the "By Groups / Sections" option displays device data by section with the group name, while "By Sections" displays the section name only. The "By Devices" option displays data per device separately without the section and group name.

Sections without devices may not be displayed with "Except Sections without devices", while the option "Except Devices without Frequencies" does not display devices with no allocated frequency.

The option "Print Client Informations" allows to display the data relating to a client, data entered in the "Client Infos" pane in next section.

The "Do not print device notes" option is used not to print notes added to devices, even if they are marked as printable (see section 2.6.2).

The "Preview" button display the report before printing.

The "Save PDF" button allows to save the report in a PDF file. This file is locked and can't be edited by anyone.

2.9.2 Client Informations

Report creation

Print Details **Client Infos** Header

Frequencies Coordination

Version: 01/06/2017 12h00

Client: Beta

Event: Big Show

City: Montreal

Date: June 24th 2017

Contact: Jeff

Phone: 123-456-7890

Email: jeff@event.co

☒ Do not print undefined information

Save PDF

Preview

Cancel

This pane allows you to define the data for a client and for an event. The title data (in bold) is also editable, it is global to all documents, while personal data is relative to the current document only.

The option "Do not print undefined information" is used to cancel the printing of an undefined data line (right part).

2.9.3 Header

Report creation

Print Details Client Infos **Header**

Left part

Logo

Set...

LogoEz.png

Image - Maximum: Height: 80, Width: 250 pixels

Middle part

9999 rue AB
Ste-Ville (Québec)
J1K 1K0

Right part

regis@eazyrf.com
514-922-5818

☒ On all pages

Save PDF

Preview

Cancel

The document header has three parts, the left, center, and right.

In the left part, an image can be added (company logo). The "Set" button allows you to select an image. The image is copied to the EazyRF installation directory. The maximum size displayed (and not the base image) is 80 pixels for height and 250 for width (proportion retained).


The central part is used to define the address of your company.

The right part is intended to display the contact data of your company.

The "On all pages" option prints this header on all pages of the document or only on the first page (the name to which the EazyRF license was granted appears on the subsequent pages at that time).


2.10 Creating WinRadio or Shure WWB7 marker list

It is allowed to use the colors assigned to the groups, sections and devices of the document to create a list of markers.



EazyRF uses two coloring systems, the one in the “Frequencies Plan” view is independent and appears only in this view.

Additionally, it is now possible to select each group, section or device:

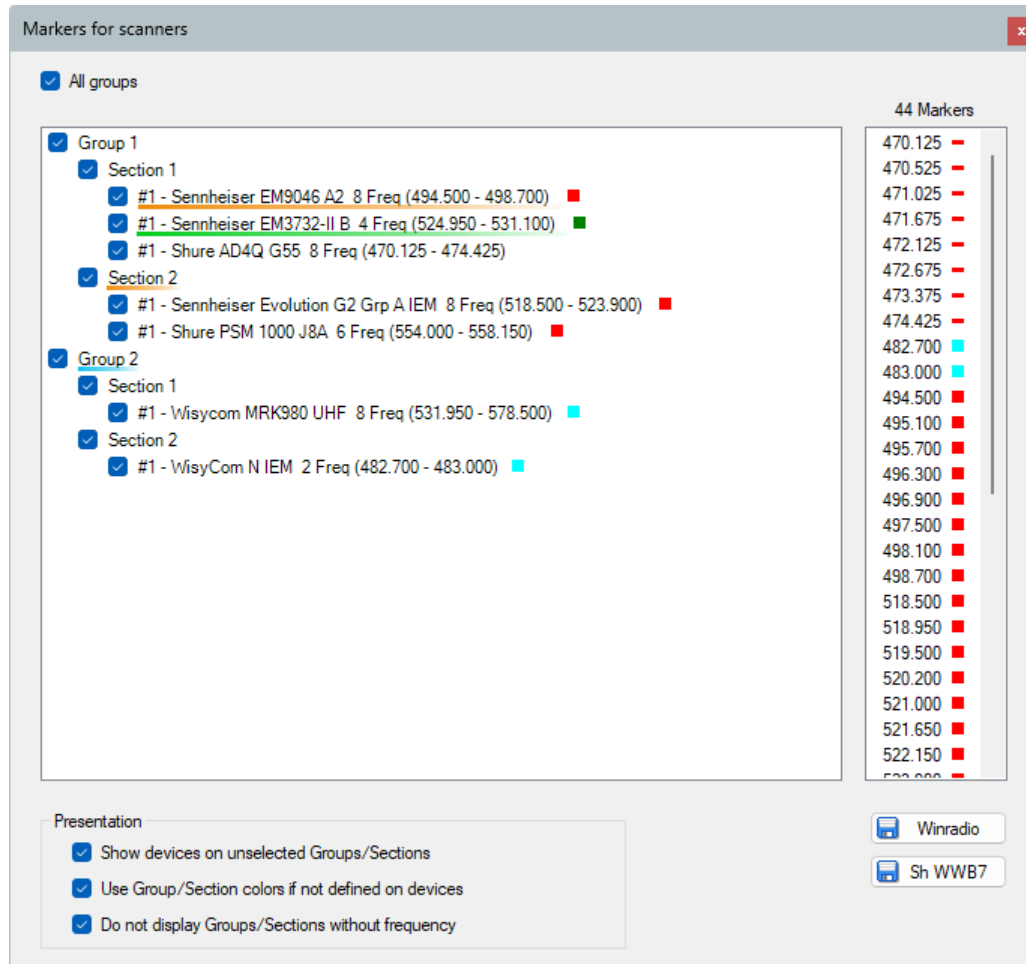

The color of each group, section or device is indicated by a colored line below the name:


#1 - Sennheiser EM9046 A2 8 Freq (494.500 - 498.700) ■

The color block at the end of the name represents the corresponding color in a 16-color system such as WinRadio.

If a device does not have a defined color, an option allows to use the color of the section if defined, otherwise that of the group:

☒ Use Group/Section colors if not defined on devices

If no color is defined, red is selected by default and is indicated by a line instead of a block:

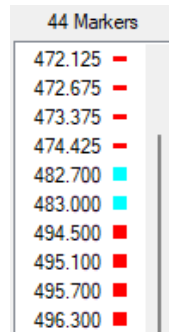


44 Markers	
472.125	—
472.675	—
473.375	—
474.425	—
482.700	■
483.000	■
494.500	■
495.100	■
495.700	■
496.300	■

You can save the list as a .csv file in WinRadio or Shure WWB7 format.

2.11 Creation of Wisycom frequency list

This option allows you to create frequency lists in Wisycom format, ie 450000 instead of 450.000 MHz.

The command:



Call the editor:

Create list of frequencies in Wisycom format

☒ All groups

☒ Group 1

- ☒ Section 1 (2 devices)
- ☒ Section 2 (2 devices)

☒ Group 2

- ☒ Section 1 (1 device)

12 frequencies

Presentation

☒ By groups classified freq

☐ By Groups

☐ By classified freq

Start Group: GR00

Start Chanel: CH0

Transfer Table

Copy text


Save XWDF

Cancel

Like the client reporting tool, group / section selection is allowed.


In the "Presentation" section, simply select the desired type of frequency classification, then select the destination cell for the Wisycom frequency editor.

For the following selection:

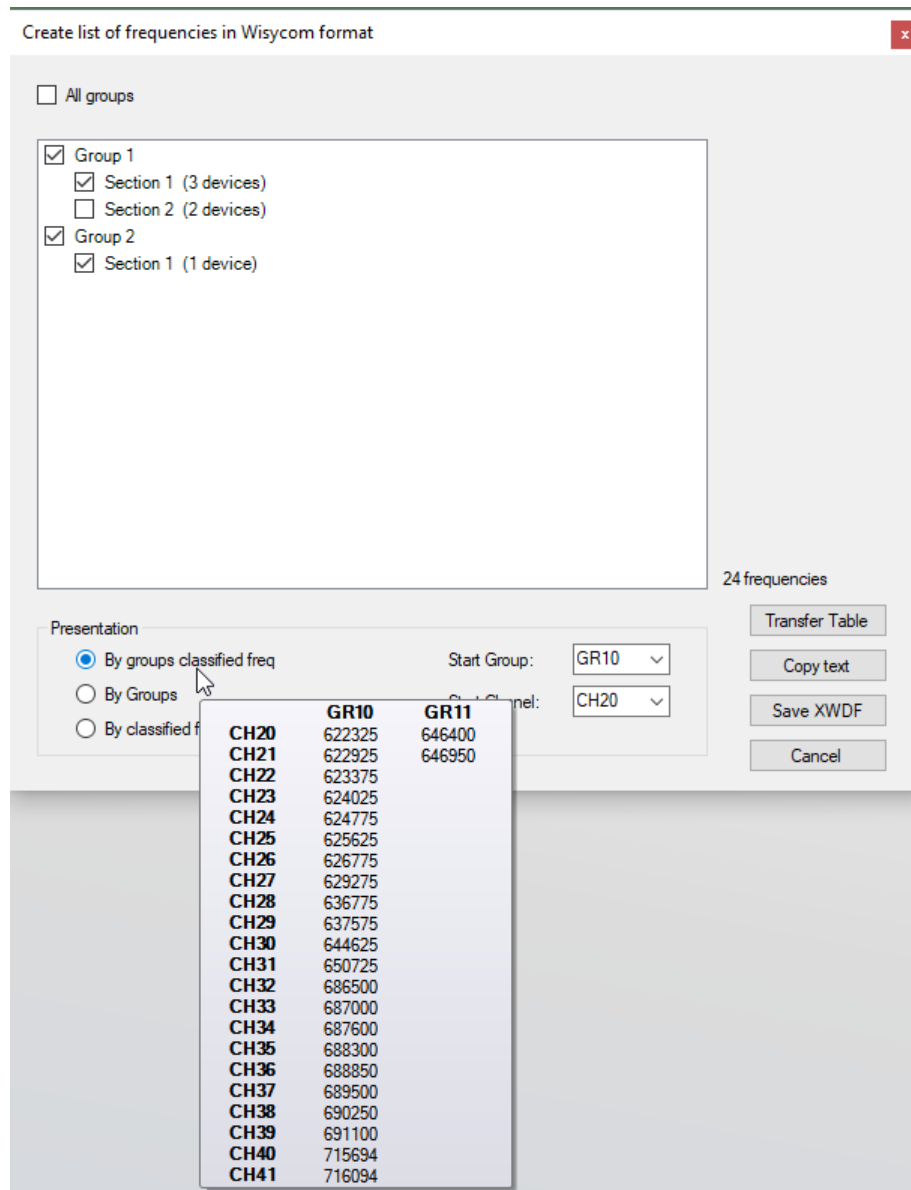


The frequencies of each group are classified.

There are three ways to transfer data to the Wisycom Frequency Editor:

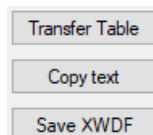

We can transfer the frequencies directly in the editor of Wisycom if no file is open, the reason is simple, EazyRF looks for the window with the title "Frequency Table":

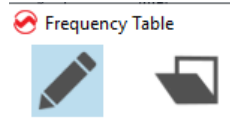

Second option, via the clipboard. This makes it possible to paste the frequencies if a file is open (command Ctrl + V).


Finally, the last option is the creation of a file in .xwdf format, format recognized by Wisycom.

And we get the result:

Frequency Table						
	Name	Exp (sel. By name)	GR09	GR10	GR11	GR12
Name			-	-	-	-
Description			-	-	-	-
CH14	-	NONE	70000	470000	470000	470000
CH15	-	NONE	70000	470000	470000	470000
CH16	-	NONE	70000	470000	470000	470000
CH17	-	NONE	70000	470000	470000	470000
CH18	-	NONE	70000	470000	470000	470000
CH19	-	NONE	70000	470000	470000	470000
CH20	-	NONE	70000	622325	646400	470000
CH21	-	NONE	70000	622925	646950	470000
CH22	-	NONE	70000	623375	470000	470000
CH23	-	NONE	70000	624025	470000	470000
CH24	-	NONE	70000	624775	470000	470000
CH25	-	NONE	70000	625625	470000	470000
CH26	-	NONE	70000	626775	470000	470000
CH27	-	NONE	70000	629275	470000	470000
CH28	-	NONE	70000	636775	470000	470000
CH29	-	NONE	70000	637575	470000	470000
CH30	-	NONE	70000	644625	470000	470000
CH31	-	NONE	70000	650725	470000	470000
CH32	-	NONE	70000	686500	470000	470000
CH33	-	NONE	70000	687000	470000	470000
CH34	-	NONE	70000	687600	470000	470000
CH35	-	NONE	70000	688300	470000	470000
CH36	-	NONE	70000	688850	470000	470000
CH37	-	NONE	70000	689500	470000	470000
CH38	-	NONE	70000	690250	470000	470000
CH39	-	NONE	70000	691100	470000	470000
CH40	-	NONE	70000	715694	470000	470000
CH41	-	NONE	70000	716094	470000	470000
CH42	-	NONE	70000	470000	470000	470000
CH43	-	NONE	70000	470000	470000	470000
CH44	-	NONE	70000	470000	470000	470000

2.12 Sennheiser – Shure – Wisycom – Lectrosonics Equipment

The purpose of the "Equipment" module is to transfer the "Frequencies - Descriptions" values of EazyRF devices to Sennheiser, Shure, Wisycom and Lectrosonics branded equipment using the programming software for these devices; module called by the command:

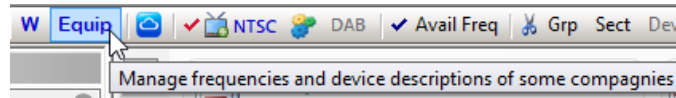


To get there, EazyRF reads the manufacturers' data files: .wsm for Sennheiser, .shw for Shure, .wshow for Wisycom and .wproj for Lectrosonics. The data of these files are in xml format, so readable (text format). EazyRF replaces the values of frequencies and descriptions of the data file by that of the devices used.

A correspondence must exist between the device names of the data document and the name used by EazyRF. This module makes it possible to link the devices of a Shure file, for example, with that of EazyRF.

Everything is done automatically according to some basic rules. The name of the manufacturer, the device model and the frequency bank must appear in the name of the EazyRF devices.

New lists of devices with the correct names are available on the EazyRF download site. You can use them or adapt your lists according to your choice, more details in section 2.10.5.

The module is divided into four sections: Sennheiser, Shure, Wisycom and Lectrosonics, and work similarly:

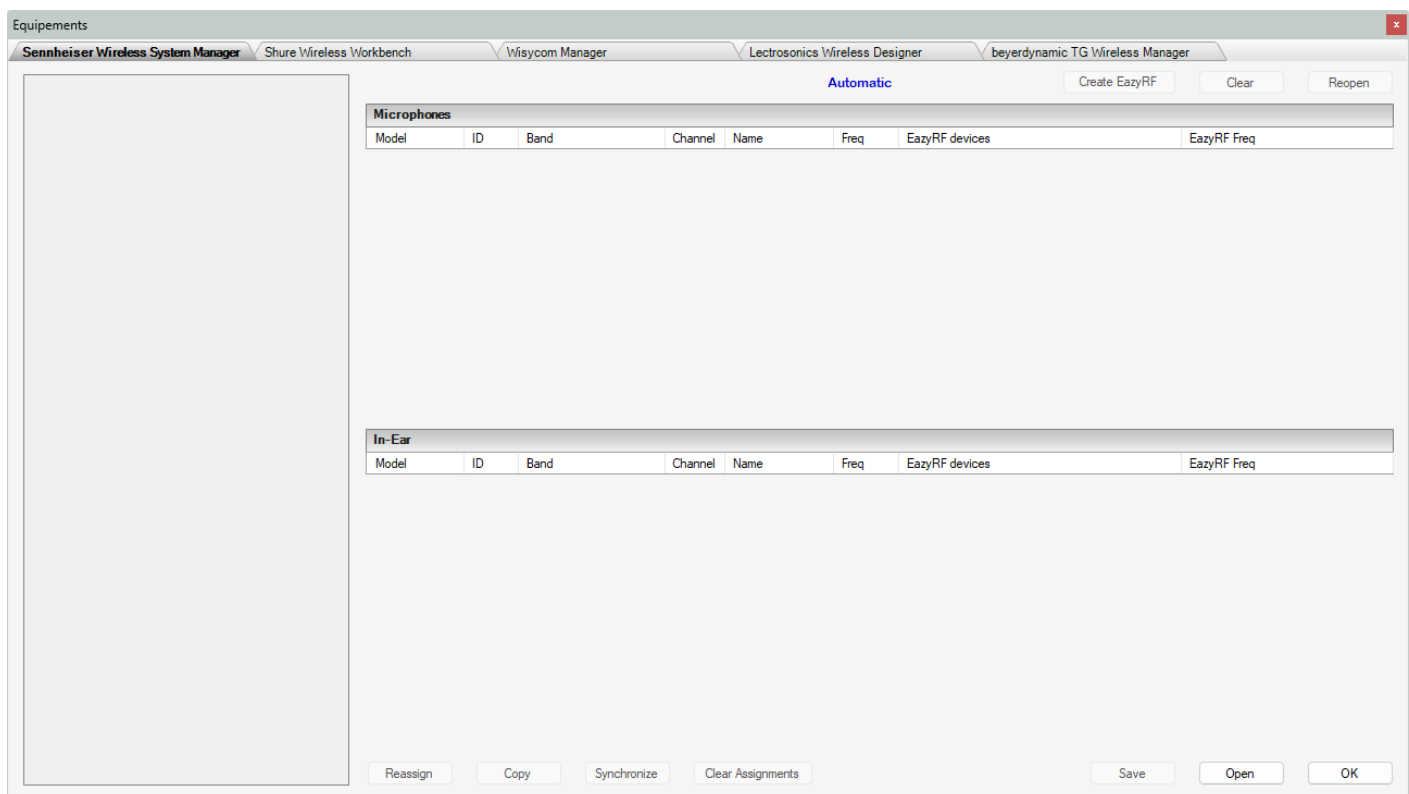

2.12.1 Sennheiser Equipment


Let's start from a simple example with this need:

Group 1		
Section 1		
#1 - Sennheiser EM2050 Aw		
Mary	518.500	22
Peter	519.000	22
#1 - Sennheiser EM 300-500 G4 Bw		
Jason	626.000	39
#1 - Sennheiser EM3732-II L		
Vox 1	548.500	27
Vox 2	548.900	27
Section 2		
#1 - Sennheiser SR2050 IEM Gw		
Mary	558.000	28
Peter	558.450	28
#1 - Sennheiser SR IEM G4 B		
Jason	626.450	40

So we need three receivers and two transmitters, all Sennheiser type.

We need to create the Sennheiser configuration file, either online or offline. If the file is created offline, it will need to be paired with the devices later. It's easier to work online though.

So let's prepare the equipment in the Sennheiser - Wireless System Manager software, which gives:

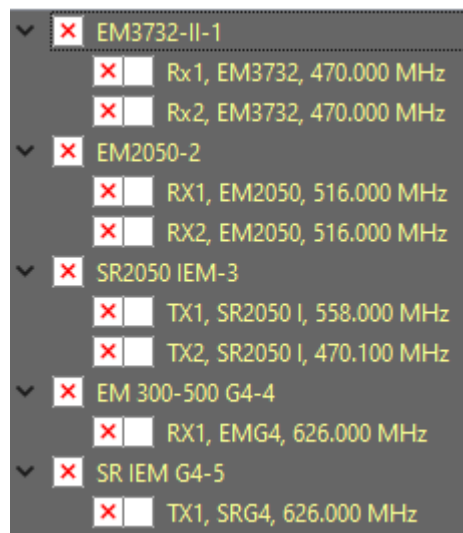

Let's leave the frequencies at the default values. The goal is to modify them with EazyRF.

Let's open the file from the EazyRF Equipment module:

Equipments

Sennheiser Wireless System Manager

Shure Wireless Workbench

Wiscom Manager

Lectrosonics Wireless Designer

beyerdynamic TG Wireless Manager

Group 1

Section 1

#1 - Sennheiser EM2050 Aw

518.500 - Mary

519.000 - Peter

#1 - Sennheiser EM 300-500 G4 Bw

626.000 - Jason

#1 - Sennheiser EM3732-II L

548.500 - Vox 1

548.900 - Vox 2

Section 2

#1 - Sennheiser SR2050 IEM Gw

558.000 - Mary

558.450 - Peter

#1 - Sennheiser SR IEM G4 B

626.450 - Jason

Sennh Guide-01.wsm 10/07/19 14:40:38

Automatic

Create EazyRF

Clear

Reopen

Microphones (5)

Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
EM2050	2	Aw (516.000 - 558.000)	Ch 1	EM2050	516.000	#1 - Sennheiser EM2050 Aw	518.500 - Mary
EM2050	2	Aw (516.000 - 558.000)	Ch 2	EM2050	516.000		519.000 - Peter
EM300-500G4	4	Bw (626.000 - 698.000)	Ch 1	EMG4	626.000	#1 - Sennheiser EM 300-500 G4 Bw	626.000 - Jason
EM3732	1	L (470.000 - 638.000)	Ch 1	EM3732	470.000	#1 - Sennheiser EM3732-II L	548.500 - Vox 1
EM3732	1	L (470.000 - 638.000)	Ch 2	EM3732	470.000		548.900 - Vox 2

In Ear (3)

Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
SR2050 IEM	3	Gw (558.000 - 626.000)	Ch 1	SR2050 I	558.000	#1 - Sennheiser SR2050 IEM Gw	558.000 - Mary
SR2050 IEM	3	Gw (558.000 - 626.000)	Ch 2	SR2050 I	558.000		558.450 - Peter
SRG4	5	B (626.000 - 668.000)	Ch 1	SRG4	626.000	#1 - Sennheiser SR IEM G4 B	626.450 - Jason

Reassign

Copy

Synchronize

Clear Assignments

Save

Open

OK

Let's take a closer look at the information. The left part displays the list of Sennheiser equipment that is part of the document:

Group 1

Section 1

#1 - Sennheiser EM2050 Aw

518.500 - Mary

519.000 - Peter

#1 - Sennheiser EM 300-500 G4 Bw

626.000 - Jason

#1 - Sennheiser EM3732-II L

548.500 - Vox 1

548.900 - Vox 2

Section 2

#1 - Sennheiser SR2050 IEM Gw

558.000 - Mary

558.450 - Peter

#1 - Sennheiser SR IEM G4 B

626.450 - Jason

The frequencies in blue means that they are affected.

The upper right shows the "Microphones" section, the receivers:

Microphones (5)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
EM2050	2	Aw (516.000 - 558.000)	Ch 1	EM2050	516.000	#1 - Sennheiser EM2050 Aw	518.500 - Mary
EM2050	2	Aw (516.000 - 558.000)	Ch 2	EM2050	516.000		519.000 - Peter
EM300-500G4	4	Bw (626.000 - 698.000)	Ch 1	EMG4	626.000	#1 - Sennheiser EM 300-500 G4 Bw	626.000 - Jason
EM3732	1	L (470.000 - 638.000)	Ch 1	EM3732	470.000	#1 - Sennheiser EM3732-II L	548.500 - Vox 1
EM3732	1	L (470.000 - 638.000)	Ch 2	EM3732	470.000		548.900 - Vox 2

The bottom right shows the list of In-Ear, the transmitters:

In Ear (3)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
SR2050 IEM	3	Gw (558.000 - 626.000)	Ch 1	SR2050 I	558.000	#1 - Sennheiser SR2050 IEM Gw	558.000 - Mary
SR2050 IEM	3	Gw (558.000 - 626.000)	Ch 2	SR2050 I	558.000		558.450 - Peter
SRG4	5	B (626.000 - 668.000)	Ch 1	SRG4	626.000	#1 - Sennheiser SR IEM G4 B	626.450 - Jason

Everything happened automatically because there is correspondence between the device names:

Model	ID	Band	EazyRF devices
EM2050	2	Aw (516.000 - 558.000)	#1 - Sennheiser EM2050 Aw
EM2050	2	Aw (516.000 - 558.000)	
EM300-500G4	4	Bw (626.000 - 698.000)	#1 - Sennheiser EM 300-500 G4 Bw
EM3732	1	L (470.000 - 638.000)	#1 - Sennheiser EM3732-II L
EM3732	1	L (470.000 - 638.000)	

Model	ID	Band	EazyRF devices
SR2050 IEM	3	Gw (558.000 - 626.000)	#1 - Sennheiser SR2050 IEM Gw
SR2050 IEM	3	Gw (558.000 - 626.000)	
SRG4	5	B (626.000 - 668.000)	#1 - Sennheiser SR IEM G4 B

The middle section is red because the name and the frequency do not correspond to the values of the EazyRF document, when they are identical, they are displayed in black.

The frequencies and their descriptions are not automatically copied to the data in the Sennheiser file to not overwrite them systematically.

The commands at the bottom of the module allow you to do this:

Reassign	Copy	Synchronize	Clear Assignments	Save	Open	OK
----------	------	-------------	-------------------	------	------	----

The "Copy" command transfers the frequencies and their descriptions to the Sennheiser data section:

Microphones (5)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
EM2050	2	Aw (516.000 - 558.000)	Ch 1	Mary	518.500	#1 - Sennheiser EM2050 Aw	518.500 - Mary
EM2050	2	Aw (516.000 - 558.000)	Ch 2	Peter	519.000		519.000 - Peter
EM300-500G4	4	Bw (626.000 - 698.000)	Ch 1	Jason	626.000	#1 - Sennheiser EM 300-500 G4 Bw	626.000 - Jason
EM3732	1	L (470.000 - 638.000)	Ch 1	Vox 1	548.500	#1 - Sennheiser EM3732-II L	548.500 - Vox 1
EM3732	1	L (470.000 - 638.000)	Ch 2	Vox 2	548.900		548.900 - Vox 2

In Ear (3)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
SR2050 IEM	3	Gw (558.000 - 626.000)	Ch 1	Mary	558.000	#1 - Sennheiser SR2050 IEM Gw	558.000 - Mary
SR2050 IEM	3	Gw (558.000 - 626.000)	Ch 2	Peter	558.450		558.450 - Peter
SRG4	5	B (626.000 - 668.000)	Ch 1	Jason	626.450	#1 - Sennheiser SR IEM G4 B	626.450 - Jason

The assignment of devices and frequencies can be done manually if desired:

#1 - Sennheiser EM3732-II L

#1 - Sennheiser EM3732-II L

#2 - Sennheiser EM3732-II L

548.500 - Vox 1

548.500 - Vox 1

548.900 - Vox 2

The mode of allocation of the matching EazyRF-Manufacturer devices is indicated in the upper part of the module:

Automatic


Manual

The allocation of frequencies and descriptions must absolutely be saved in the manufacturer's data file, under another name preferably, if not at the reopening of the EazyRF file, the assignment will not have followed. EazyRF does not save any data from the manufacturer file.

To clear a device from the assignment, select the last choice in the list, an empty line. To clear all assignments, use the "Clear Assignments" command.


The "Reassign" command allows you to redo an assignment automatically. The assignment order of devices of the same type, EM3732 for example, follows the order of appearance in a section. If you want to assign specific frequencies to a device, move a device to a section and "Reassign".

The "Synchronize" command automatically finds the value of the Sennheiser frequency in the EazyRF list or the frequency description. You can select the option with this screen:

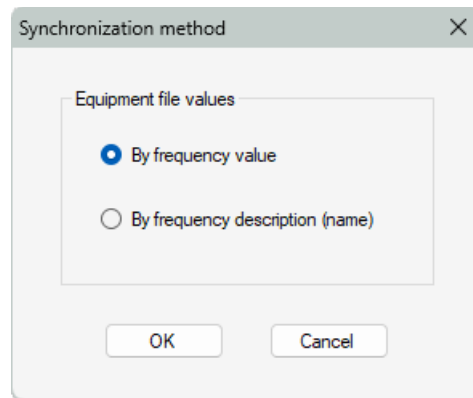


This pairing becomes necessary when the order of the Sennheiser devices is changed by "Wireless System Manager".

After doing the desired assignment, simply save the data to a Sennheiser file with the "Save" command and then open the new file in Sennheiser WSM:

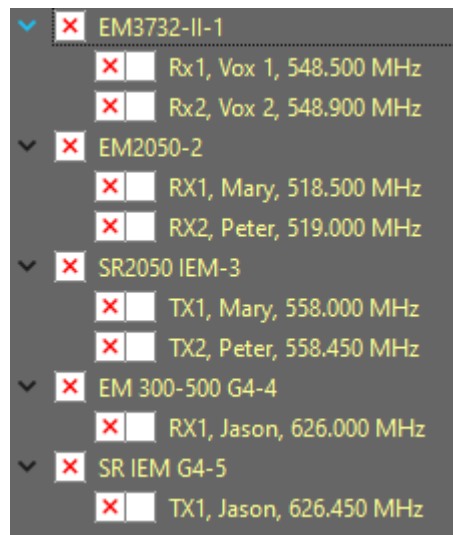

What gives the expected result, the frequencies and their descriptions are assigned to the right devices and sent to the right equipment.

The upper right contains 3 other commands:

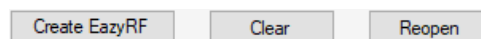

The "Reopen" command is used to open the data file again, if modified, for example.

"Delete" deletes all data and assignment.

Finally, "Create EazyRF" allows you to create EazyRF devices from the data file, if needed.

2.12.2 Shure Equipment

The procedure is identical as that used in Section 2.10.1 with the Sennheiser, in summary:

Need:

Group 2		
Section 1		
#1 - Shure AXT400 J5		
Annick	578.050	32
Lora	578.550	32
#1 - Shure ULXD4D L50		
Mark	632.000	40
Jim	632.500	41
#1 - Shure AD4Q K55		
Jojo	606.150	36
Tom	606.550	36
Brit	607.100	36
Judy	614.500	38
Section 2		
#1 - Shure PSM 1000 G11		
Jojo	482.500	16
Tom	483.000	16
#1 - Shure PSM 1000 J8A		
Brit	554.000	27
Judy	554.550	28

Shure configuration file (.shw):

Model	Channel Name	Device ID	Band	G & Ch	Frequency	Zone
Microphone (8)						
AD4D-B	Shure	[AD4D-B]	K55	G:- Ch:-	Find Best	Default
AD4D-B	Shure	[AD4D-B]	K55	G:- Ch:-	Find Best	Default
AD4D-B	Shure	[AD4D-B]	K55	G:- Ch:-	Find Best	Default
AD4D-B	Shure	[AD4D-B]	K55	G:- Ch:-	Find Best	Default
AXT400 A	Shure	[AXT400A]	J5	G:- Ch:-	Find Best	Default
AXT400 A	Shure	[AXT400A]	J5	G:- Ch:-	Find Best	Default
ULXD4D	Shure	[ULXD4D]	L50	G:- Ch:-	Find Best	Default
ULXD4D	Shure	[ULXD4D]	L50	G:- Ch:-	Find Best	Default
In Ear Monitor (4)						
PSM1000	Shure	[P10T]	J8A	G:- Ch:-	Find Best	Default
PSM1000	Shure	[P10T]	J8A	G:- Ch:-	Find Best	Default
PSM1000	Shure	[P10T]	G11	G:- Ch:-	Find Best	Default
PSM1000	Shure	[P10T]	G11	G:- Ch:-	Find Best	Default

Loading .shw file into Equipment module - Shure:

Microphones (8)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
AD4D-B	AD4D-B 1	K55 (606.125 - 693.875)	Ch 1	Shure		#1 - Shure AD4Q K55	606.150 - Jojo
AD4D-B	AD4D-B 1	K55 (606.125 - 693.875)	Ch 2	Shure			606.550 - Tom
AD4D-B	AD4D-B 2	K55 (606.125 - 693.875)	Ch 1	Shure		#1 - Shure AD4Q K55	607.100 - Brit
AD4D-B	AD4D-B 2	K55 (606.125 - 693.875)	Ch 2	Shure			614.500 - Judy
AXT400 A	AXT400A	J5 (578.000 - 638.000)	Ch 1	Shure		#1 - Shure AXT400 J5	578.050 - Annick
AXT400 A	AXT400A	J5 (578.000 - 638.000)	Ch 2	Shure			578.550 - Lora
ULXD4D	ULXD4D 1	L50 (632.000 - 696.000)	Ch 1	Shure		#1 - Shure ULXD4D L50	632.000 - Mark
ULXD4D	ULXD4D 1	L50 (632.000 - 696.000)	Ch 2	Shure			632.500 - Jim

In Ear (4)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
PSM1000	P10T	G11 (479.125 - 541.875)	Ch 1	Shure		#1 - Shure PSM 1000 G11	482.500 - Jojo
PSM1000	P10T	G11 (479.125 - 541.875)	Ch 2	Shure			483.000 - Tom
PSM1000	P10T	J8A (554.000 - 615.875)	Ch 1	Shure		#1 - Shure PSM 1000 J8A	554.000 - Brit
PSM1000	P10T	J8A (554.000 - 615.875)	Ch 2	Shure			554.550 - Judy

Device name correspondence:

Model ▲	ID	Band	EazyRF devices
AD4D-B	AD4D-B 1	K55 (606.125 - 693.875)	#1 - Shure AD4Q K55
AD4D-B	AD4D-B 1	K55 (606.125 - 693.875)	
AD4D-B	AD4D-B 2	K55 (606.125 - 693.875)	#1 - Shure AD4Q K55
AD4D-B	AD4D-B 2	K55 (606.125 - 693.875)	
AXT400 A	AXT400A	J5 (578.000 - 638.000)	#1 - Shure AXT400 J5
AXT400 A	AXT400A	J5 (578.000 - 638.000)	
ULXD4D	ULXD4D 1	L50 (632.000 - 696.000)	#1 - Shure ULXD4D L50
ULXD4D	ULXD4D 1	L50 (632.000 - 696.000)	

Model ▲	ID	Band	EazyRF devices
PSM1000	P10T	G11 (479.125 - 541.875)	#1 - Shure PSM 1000 G11
PSM1000	P10T	G11 (479.125 - 541.875)	
PSM1000	P10T	J8A (554.000 - 615.875)	#1 - Shure PSM 1000 J8A
PSM1000	P10T	J8A (554.000 - 615.875)	

Only the number of receivers vary between the AD4D (2) and AD4Q (4) models.

Copy data:

Microphones (8)							
Model ▲	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
AD4D-B	AD4D-B 1	K55 (606.125 - 693.875)	Ch 1	Jojo	606.150	#1 - Shure AD4Q K55	606.150 - Jojo
AD4D-B	AD4D-B 1	K55 (606.125 - 693.875)	Ch 2	Tom	606.550		606.550 - Tom
AD4D-B	AD4D-B 2	K55 (606.125 - 693.875)	Ch 1	Brit	607.100	#1 - Shure AD4Q K55	607.100 - Brit
AD4D-B	AD4D-B 2	K55 (606.125 - 693.875)	Ch 2	Judy	614.500		614.500 - Judy
AXT400 A	AXT400A	J5 (578.000 - 638.000)	Ch 1	Annick	578.050	#1 - Shure AXT400 J5	578.050 - Annick
AXT400 A	AXT400A	J5 (578.000 - 638.000)	Ch 2	Lora	578.550		578.550 - Lora
ULXD4D	ULXD4D 1	L50 (632.000 - 696.000)	Ch 1	Mark	632.000	#1 - Shure ULXD4D L50	632.000 - Mark
ULXD4D	ULXD4D 1	L50 (632.000 - 696.000)	Ch 2	Jim	632.500		632.500 - Jim

In Ear (4)							
Model ▲	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
PSM1000	P10T	G11 (479.125 - 541.875)	Ch 1	Jojo	482.500	#1 - Shure PSM 1000 G11	482.500 - Jojo
PSM1000	P10T	G11 (479.125 - 541.875)	Ch 2	Tom	483.000		483.000 - Tom
PSM1000	P10T	J8A (554.000 - 615.875)	Ch 1	Brit	554.000	#1 - Shure PSM 1000 J8A	554.000 - Brit
PSM1000	P10T	J8A (554.000 - 615.875)	Ch 2	Judy	554.550		554.550 - Judy

Save data in Shure .shw document, the result:

Model	Channel Name	Device ID	Band	G & Ch	Frequency
Microphone (8)					
AD4D-B	Brit	[AD4D-B]	K55	G:- Ch:-	607.100 MHz
AD4D-B	Judy	[AD4D-B]	K55	G:- Ch:-	614.500 MHz
AD4D-B	Jojo	[AD4D-B]	K55	G:- Ch:-	606.150 MHz
AD4D-B	Tom	[AD4D-B]	K55	G:- Ch:-	606.550 MHz
AXT400 A	Annick	[AXT400A]	J5	G:- Ch:-	578.050 MHz
AXT400 A	Lora	[AXT400A]	J5	G:- Ch:-	578.550 MHz
ULXD4D	Mark	[ULXD4D]	L50	G:- Ch:-	632.000 MHz
ULXD4D	Jim	[ULXD4D]	L50	G:- Ch:-	632.500 MHz
In Ear Monitor (4)					
PSM1000	Jojo	[P10T]	G11	G:- Ch:-	482.500 MHz
PSM1000	Tom	[P10T]	G11	G:- Ch:-	483.000 MHz
PSM1000	Brit	[P10T]	J8A	G:- Ch:-	554.000 MHz
PSM1000	Judy	[P10T]	J8A	G:- Ch:-	554.550 MHz

2.12.3 Wisycom Equipment

The procedure is identical as that used in Section 2.10.1 with the Sennheiser, in summary:

Need:

Group 3		
Section 1		
#1 - Wisycom MRK960		
Choir 1	549.650	27
Choir 2	550.300	27
Choir 3	551.350	27
Choir 4	555.500	28
Choir 5	566.500	30
Choir 6	567.600	30
Choir 7	569.500	30
Choir 8	570.300	30
Section 2		
#1 - Wisycom MTK952		
Choir 1	470.000	
Choir 4	470.600	14

Wisycom configuration file (.wshow):

N°	Model	Name	Freq MHz	Gr Ch	Link	Type	Serial
1	1 MRK960		470.000	CH01 GR00	192.168.10.121	RX1	V4000059
2	1 MRK960		470.000	CH02 GR00	192.168.10.121	RX2	V4000059
3	2 MRK960		470.000	CH01 GR00	192.168.10.122	RX1	V4000060
4	2 MRK960		470.000	CH02 GR00	192.168.10.122	RX2	V4000060
5	3 MRK960		470.000	CH01 GR00	192.168.10.123	RX1	V4000061
6	3 MRK960		470.000	CH02 GR00	192.168.10.123	RX2	V4000061
7	4 MRK960		470.000	CH01 GR00	192.168.10.124	RX1	W0900002
8	4 MRK960		470.000	CH02 GR00	192.168.10.124	RX2	W0900002
9	5 MTK952A		525.000	Gr 00 Ch 01	192.168.10.205	Tx1	W2400003
10	5 MTK952A		525.000	Gr 00 Ch 02	192.168.10.205	Tx2	W2400003

Loading .wshow file into devices module - Wisycom:

Microphones (8)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
MRK960	1	470.000 - 840.000	CH01 GR00		470.000	#1 - Wisycom MRK960	549.650 - Choir 1
MRK960	1	470.000 - 840.000	CH02 GR00		470.000		550.300 - Choir 2
MRK960	2	470.000 - 840.000	CH01 GR00		470.000	#1 - Wisycom MRK960	551.350 - Choir 3
MRK960	2	470.000 - 840.000	CH02 GR00		470.000		555.500 - Choir 4
MRK960	3	470.000 - 840.000	CH01 GR00		470.000	#1 - Wisycom MRK960	566.500 - Choir 5
MRK960	3	470.000 - 840.000	CH02 GR00		470.000		567.600 - Choir 6
MRK960	4	470.000 - 840.000	CH01 GR00		470.000	#1 - Wisycom MRK960	569.500 - Choir 7
MRK960	4	470.000 - 840.000	CH02 GR00		470.000		570.300 - Choir 8

In Ear (2)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
MTK952A	12	470.000 - 800.000	CH01 GR00		525.000	#1 - Wisycom MTK952	470.000 - Choir 1
MTK952A	12	470.000 - 800.000	CH02 GR00		525.000		470.600 - Choir 4

The matching of the equipment names is pretty obvious.

Copy data:

Microphones (8)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
MRK960	1	470.000 - 840.000	CH01 GR00	Choir 1	549.650	#1 - Wisycom MRK960	549.650 - Choir 1
MRK960	1	470.000 - 840.000	CH02 GR00	Choir 2	550.300		550.300 - Choir 2
MRK960	2	470.000 - 840.000	CH01 GR00	Choir 3	551.350	#1 - Wisycom MRK960	551.350 - Choir 3
MRK960	2	470.000 - 840.000	CH02 GR00	Choir 4	555.500		555.500 - Choir 4
MRK960	3	470.000 - 840.000	CH01 GR00	Choir 5	566.500	#1 - Wisycom MRK960	566.500 - Choir 5
MRK960	3	470.000 - 840.000	CH02 GR00	Choir 6	567.600		567.600 - Choir 6
MRK960	4	470.000 - 840.000	CH01 GR00	Choir 7	569.500	#1 - Wisycom MRK960	569.500 - Choir 7
MRK960	4	470.000 - 840.000	CH02 GR00	Choir 8	570.300		570.300 - Choir 8

In Ear (2)							
Model	ID	Band	Channel	Name	Freq	EazyRF devices	EazyRF Freq
MTK952A	12	470.000 - 800.000	CH01 GR00	Choir 1	470.000	#1 - Wisycom MTK952	470.000 - Choir 1
MTK952A	12	470.000 - 800.000	CH02 GR00	Choir 4	470.600		470.600 - Choir 4

Save data in Wisycom document .wshow, the result:

N°	Model	Name	Freq MHz	Gr Ch	Link	Type	Serial
1	1 MRK960	Choir 1	549.650	CH01 GR00	192.168.10.121	RX1	V4000059
2	1 MRK960	Choir 2	550.300	CH02 GR00	192.168.10.121	RX2	V4000059
3	2 MRK960	Choir 3	551.350	CH01 GR00	192.168.10.122	RX1	V4000060
4	2 MRK960	Choir 4	555.500	CH02 GR00	192.168.10.122	RX2	V4000060
5	3 MRK960	Choir 5	566.500	CH01 GR00	192.168.10.123	RX1	V4000061
6	3 MRK960	Choir 6	567.600	CH02 GR00	192.168.10.123	RX2	V4000061
7	4 MRK960	Choir 7	569.500	CH01 GR00	192.168.10.124	RX1	W0900002
8	4 MRK960	Choir 8	570.300	CH02 GR00	192.168.10.124	RX2	W0900002
9	5 MTK952A	Choir 1	470.000	Gr 00 Ch 01	192.168.10.205	Tx1	W2400003
10	5 MTK952A	Choir 4	470.600	Gr 00 Ch 02	192.168.10.205	Tx2	W2400003


2.12.4 Lectrosonics Equipment

The procedure is identical as that used in Section 2.10.1 with the Sennheiser, in summary:

Need:

Group 4		
Section 1		
#1 - Lectrosonics VRM2WB B1		
Mary	540.200	25
Paul	541.050	25
#1 - Lectrosonics VRM2WB C1		
Kim	615.100	38
Jessy	615.800	38
Section 2		
#1 - Lectrosonics M2T A1B1		
Kim	506.500	20
Jessy	506.900	20

Lectrosonics configuration file (.wproj):

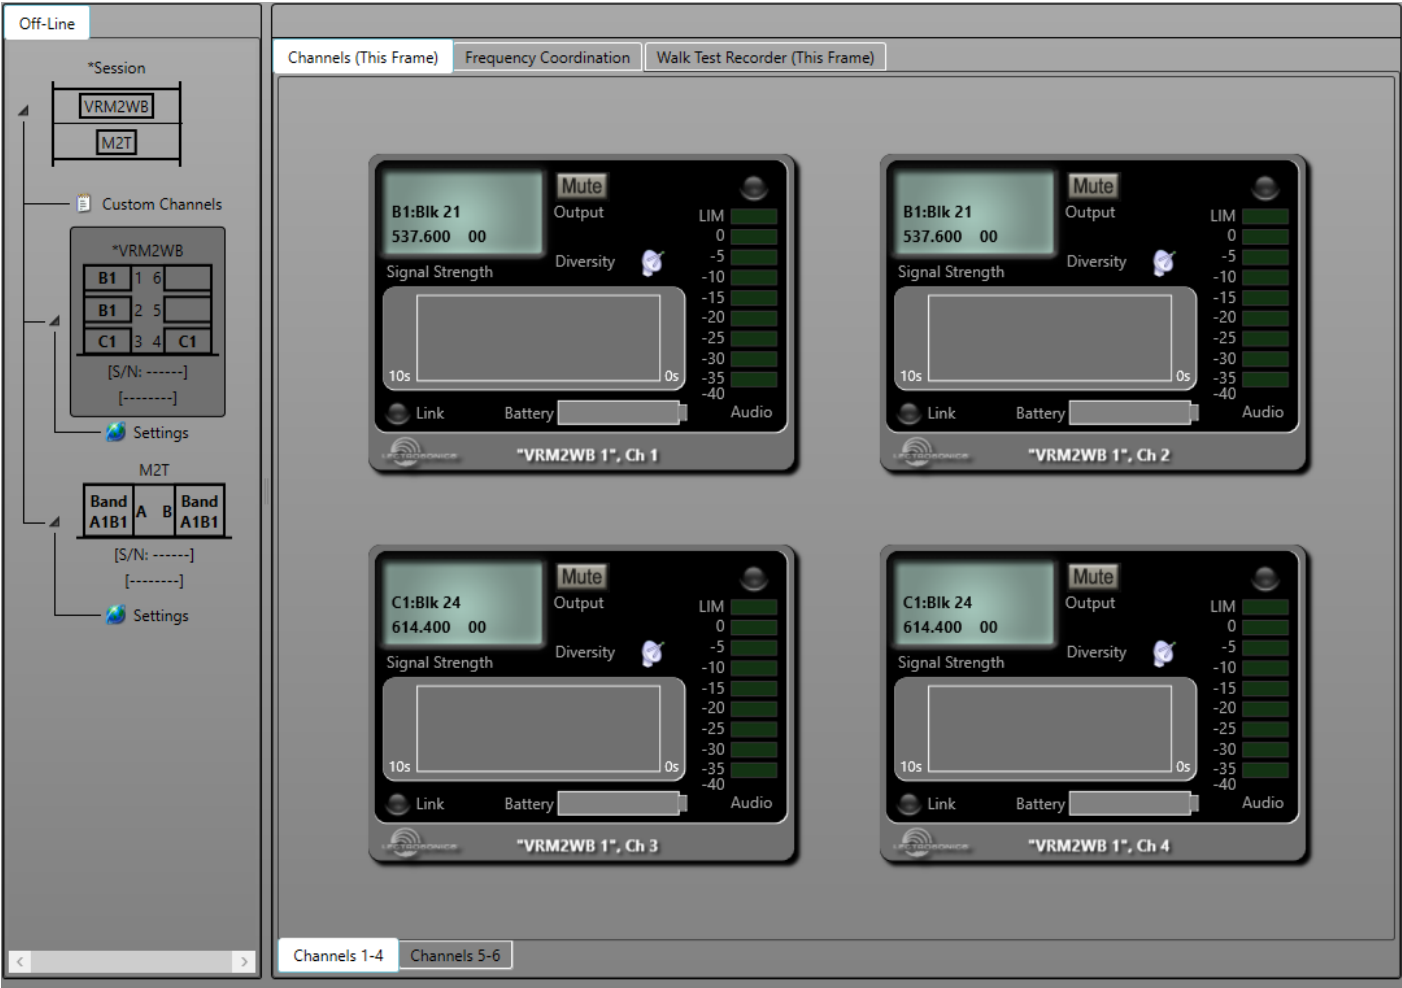

Loading .wproj file in Equipment module - Lectrosonics:

Microphones (4)							
Model	ID	Band	Ch	Name	Freq	EazyRF devices	EazyRF Freq
VRM2WB	1	B1 (537.600 - 614.375)	1		537.600	#1 - Lectrosonics VRM2WB B1	540.200 - Mary
VRM2WB	1	B1 (537.600 - 614.375)	2		537.600		541.050 - Paul
VRM2WB	1	C1 (614.400 - 691.175)	3		614.400	#1 - Lectrosonics VRM2WB C1	615.100 - Kim
VRM2WB	1	C1 (614.400 - 691.175)	4		614.400		615.800 - Jessy

In Ear (2)							
Model	ID	Band	Ch	Name	Freq	EazyRF devices	EazyRF Freq
M2T	1	A1B1 (470.100 - 614.375)	1		470.100	#1 - Lectrosonics M2T A1B1	506.500 - Kim
M2T	1	A1B1 (470.100 - 614.375)	2		470.100		506.900 - Jessy

The matching of the equipment names is pretty obvious.

Copy data:

Microphones (4)							
Model	ID	Band	Ch	Name	Freq	EazyRF devices	EazyRF Freq
VRM2WB	1	B1 (537.600 - 614.375)	1	Mary	540.200	#1 - Lectrosonics VRM2WB B1	540.200 - Mary
VRM2WB	1	B1 (537.600 - 614.375)	2	Paul	541.050		541.050 - Paul
VRM2WB	1	C1 (614.400 - 691.175)	3	Kim	615.100	#1 - Lectrosonics VRM2WB C1	615.100 - Kim
VRM2WB	1	C1 (614.400 - 691.175)	4	Jessy	615.800		615.800 - Jessy

In Ear (2)							
Model	ID	Band	Ch	Name	Freq	EazyRF devices	EazyRF Freq
M2T	1	A1B1 (470.100 - 614.375)	1	Kim	506.500	#1 - Lectrosonics M2T A1B1	506.500 - Kim
M2T	1	A1B1 (470.100 - 614.375)	2	Jessy	506.900		506.900 - Jessy

Save data in Lectrosonics .wproj document, the result:





2.12.5 List Devices and Names


The correspondence between the names of EazyRF devices and Sennheiser, Shure, Wisycom and Lectrosonics equipment is essential for the proper functioning of this module.

A list of suitable names exists on the EazyRF download site:

<http://www.eazyrf.com/DownloadDevices2019.html>.

For updates on the device list, see section 10.5.

For a name to be recognized, the name of the manufacturer must be present, as well as the model of the device and the frequency band, for example Shure AD4D K53, or an evening device based on this name:

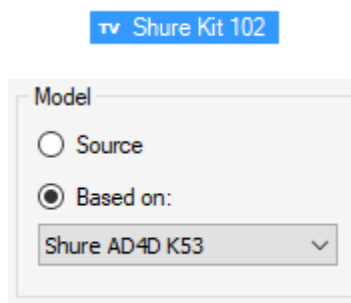

This device name is valid because it is a Shure AD4D K53 set.


Better still, you can download the new names, update the list of devices, then change only the model setting, in the device editor, from basic model to based.

You can also change the name of your device to include the necessary credentials, in which case the old name is retained, and when you open a document containing the old name, it is automatically changed to the new one. , a temporary message tells you.

It is also possible to add to the description of the device the missing elements, for example if # 1 - Shure Axient J5 is not recognized, AD4D # 1 - Shure Axient J5 will be recognized as Shure AD4D J5 because all identifiers are present.


2.13 Background color – Group/Section/Device/Frequencies

One of the background colors of each group, section, and device can be changed in most panes. You can also change the background color of the frequencies in the global, detailed pane and in the device editor (no matter where it is called). To do this, simply double-click at the top of the group (at the bottom of the title area), at the top of a section (at the bottom of the title area), or in the top area. of a device:

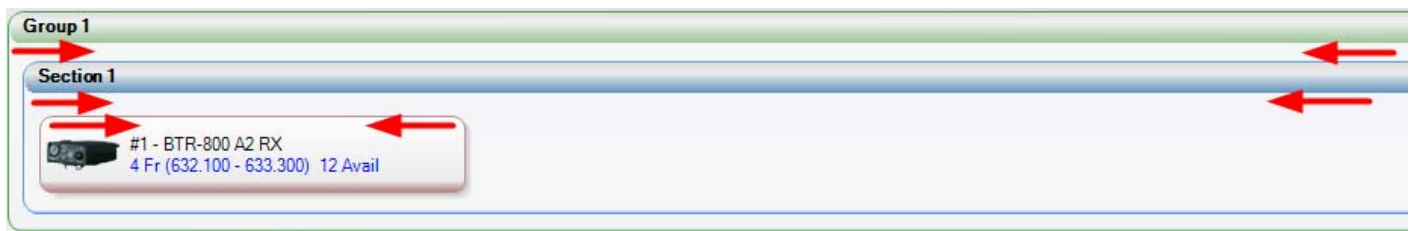

To change the background color of one or more frequencies, several methods exist, either by the global view, the detailed view, the device editor and the list of the contents of the document, more details in the following sections.

The color editor:

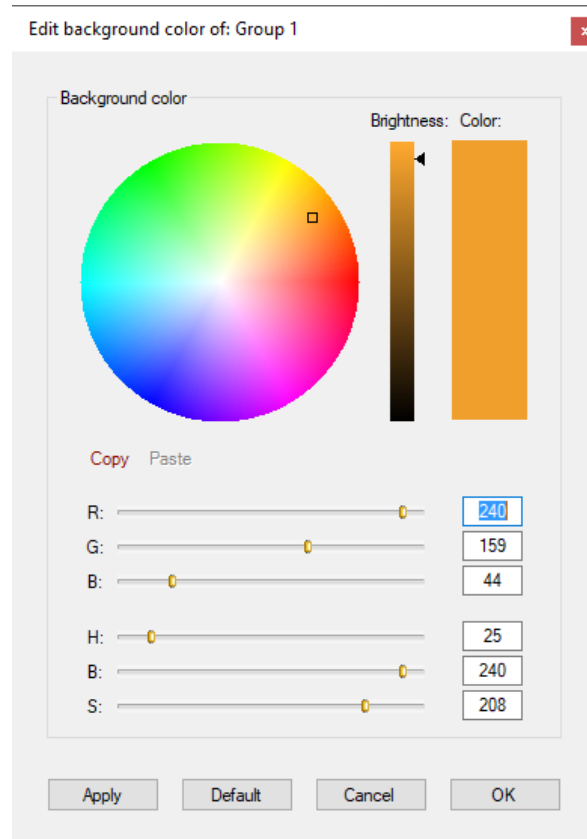

The "Apply" command allows the same color to be applied to a selection of devices (the selection of devices can be done on several sections of the same group). When the device selection is multiple, the displayed color is the color of the device that was double-clicked.

The "Default" button recalls the basic color used by EazyRF.

"Cancel" restores the color(s) used when calling the editor.

The "Copy/Paste" commands allow you to copy a color and apply it elsewhere.

The purpose of this command is to emphasize certain details and not to create a multitude of colors:



2.13.1 Frequency Background Color - Global and Detailed View

First a frequency or more must be selected before being able to call the background color editor. This can be called in two ways, either by double-clicking on a section of the frequency header (global view), or by right-clicking on the frequencies (size of the area - 30 %):

8 Freq	
578.000	31
578.300	32
578.700	32
579.200	32
579.550	32
580.000	32
580.550	32
582.150	32

8 Freq		
578.000	31	
578.300	32	
578.700	32	
579.200	32	
579.550	32	
580.000	32	
580.550	32	
582.150	32	

Change Background color

With as result for example:

8 Freq	
578.000	31
578.300	32
578.700	32
579.200	32
579.550	32
580.000	32
580.550	32
582.150	32

The background color of the selected frequency is displayed when launching the editor.

2.13.2 Background Color Frequencies - Device Editor

We can do the same treatment with the device editor in the global pane:

Device Edition

Description: #1

Device: A1-128K Lav, Hand (1-8) Micros

Start: 578.000 Stop: 638.000 Increment: 0.025

Tolerance 2 TX: 100

Tolerance 3 TX: 50

Separation: 300

Image Freq: 10.70

Filter: 16.00

TV Channels: 35 (596-602 MHz ...)

Tolerance 5th: 50

Auto Start: ☐ Descending order: ☐ 5th Order Evaluation (if Global): ☐

TX Power Level: 1 1-50 mw Random

Fr Nbr: 8 Protected: ☐ Manual: ☐ Avail Freq: ☒ Clear

+ Ctrl = 1 Col

No	Description	Freq	Intermodulation
1		578.000 31	
2		578.300 32	
3		578.700 32	
4		580.000 32	
5		580.000 32	
6		580.550 32	
7		582.150 32	
8			

33 Avail Freq


- 32 582.900
- 32 583.550
- 33 584.650
- 33 586.700
- 32 587.300
- 32 592.000
- 34 593.150
- 36 602.500
- 36 602.900
- 36 603.200
- 36 604.100
- 36 604.550
- 36 604.900
- 36 605.400
- 36 606.350
- 38 614.500

Change Background color

OK Cancel

The background color editor can be called either by the right mouse button or by double-clicking on the frequency header (full area).

The background colors of the group/section/device/frequency are displayed in the device list of a document in the panes: Intermodulation, Spectrum View, On Tour and Classification:

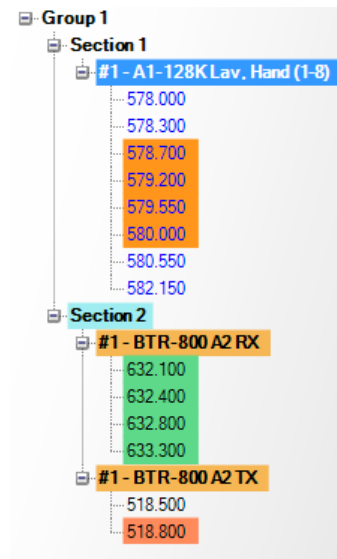


The background colors of groups, sections, and devices can be changed from this list.

In addition, the background color of the frequencies can be changed wherever the device editor can be called.

2.13.3 Frequency Background Color - Document List



You can also call the background color editor via the list of the contents of a document in the Intermodulations and On Tour (as well as Multi-Scenes) panes:

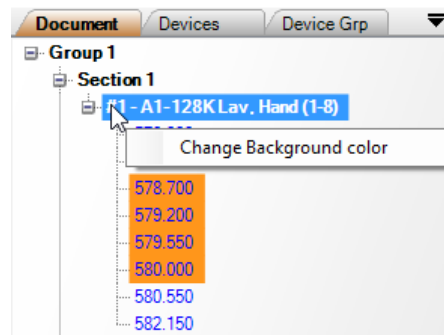

2.14 Group / Section menu


2.14.1 Collapse / expand

From the global and detailed views, a menu is accessible with the right mouse button on the group header:

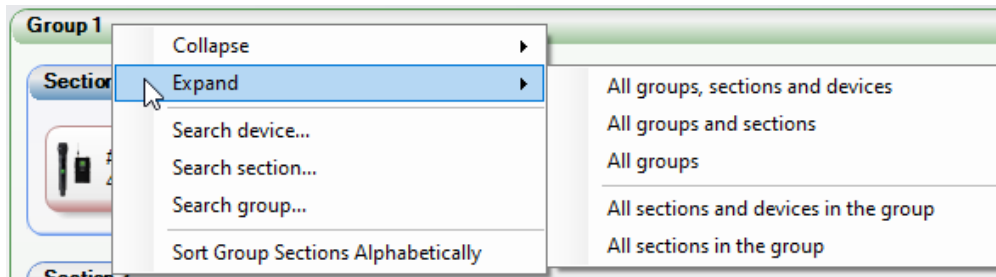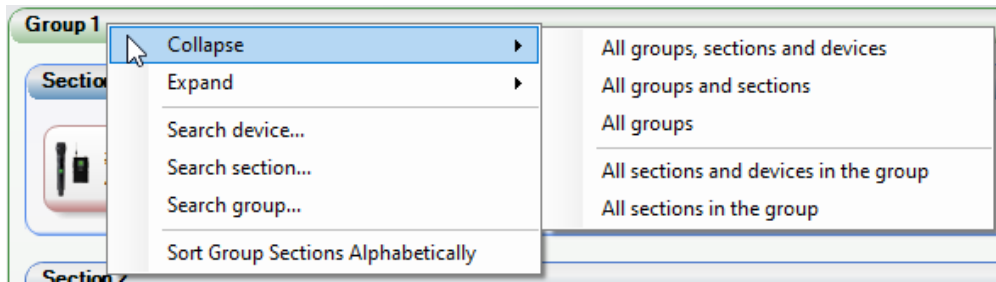

It is thus possible to apply the expand / collapse function to all groups, sections or devices of the document, of a group or of a section.

The "Detailed View" is used to manage the expand/collapse of devices in a section:

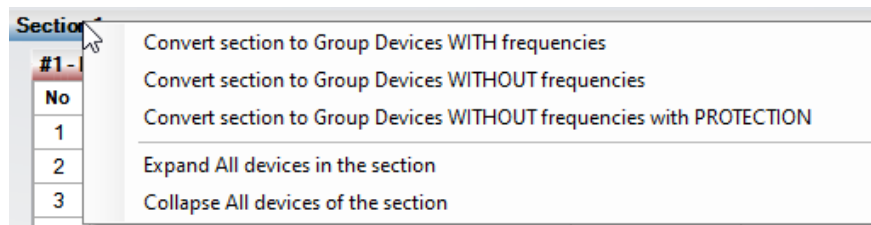

2.14.2 Search Device, Section or Group

The "Search device..." function allows you to find a device by entering part of its name:

Search Device		
Q sh		
Device	Section	Group
#1 - Shure AD4D G53	Section 1	Group 1
#1 - Shure AD4Q G56	Section 2	Group 1
#1 - Shure PSM 1000 J8J	Section 2	Group 1
#1 - Shure AD4D	Section 2	Group 1
#1 - Shure UR4D	Section 1	Group 2
#1 - Shure UR4D	Section 1	Group 2

Selecting a device in the list displays the device in the document even if the group or section is in collapsed:

Group 1

Section 1

Section 2

TV

#1 - Shure AD4Q G56

4 Fr (486.500 - 525.400) 41 Avail

Group 2

Group 3


Group 4

Search Device

Q sh

Device
#1 - Shure AD4D G53
#1 - Shure AD4Q G56
#1 - Shure PSM 1000 J8J
#1 - Shure AD4D G55
#1 - Shure UR4D G1
#1 - Shure UR4D H4

2.14.3 Classification of section names in alphabetical order

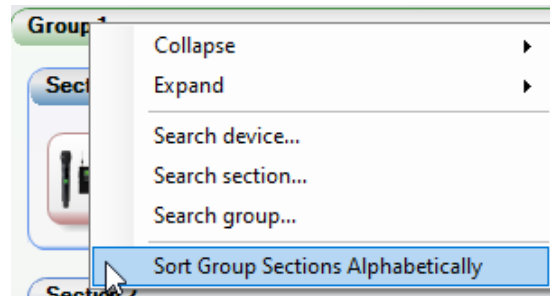

2.15 Evaluate commands



2.15.1 Evaluate Frequencies list

This command restarts the calculation of intermodulations manually to check whether a change has not occurred.

2.15.2 Evaluate Devices

This allows the calculation of the frequencies of unprotected devices to be redone in automatic mode.

2.15.3 Manual Evaluation

This operation launches an editor allowing to perform intermodulation calculations for frequencies independent of those of the document, the goal is to display the values of the intermodulations:

2.15.4 Recalculate (frequencies)

It goes without saying that this command is not intended to find a solution when adding to an event already in operation. Its purpose is to find new frequencies, either when reusing a previous plan or during planning and the solution is not found at first glance.

127

Let's take a simple theoretical example:

Group 1

Section 1

- #1 - Sennheiser EM3732-II A TV 8 Fr (478.500 - 483.000) 0 Avail
- #1 - Shure AD4Q G55 TV 8 Fr (483.700 - 573.300) 4 Avail
- #1 - Shure AD4D G54 TV 0/2 Fr 0 Avail

Section 2

- #1 - Sennheiser Evolution G2 Grp A IEM TV 6 Fr (518.025 - 522.975) 0 Avail
- #1 - IFB Lectrosonics T4-R1a, Block 23 1 Fr (588.800) 3 Avail

Group 2

Section 1

- #1 - Shure ADX5D K54 12 Fr (606.350 - 644.300) 6 Avail
- #1 - Sennheiser EM9046 A4 TV 8 Fr (534.500 - 539.000) 0 Avail

Section 2

- #1 - Sennheiser SR300 IEM G3 B 8 Fr (626.000 - 630.850) 10 Avail
- #1 - Shure PSM 1000 J8J TV 8 Fr (554.600 - 570.300) 5 Avail


Group 3

Section 1

- #1 - BTR-80N H3 RX 4 Fr (650.100 - 651.300) 10 Avail
- #1 - BTR-80N H3 TX 2 Fr (500.100 - 500.400) 0 Avail

The Shure AD4D G54 device has just been added and no frequencies are available.

If we take a look at the frequency spectrum, we can see that the frequency band used by the device is not overused:

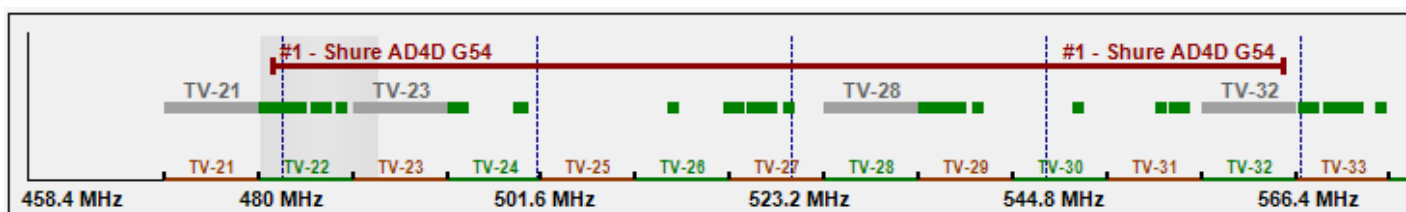

So maybe a recalculation of the devices would allow a rearrangement of frequencies. The "Recalculate" module allows you to do this:

Recalculate the frequencies of the devices in the document

Evaluation method


☒ Freq Range
 ☐ In order
 ☐ Random
 ☐ Number of freq per section
 ☐ Independent device and freq range

☒ All groups
 Order of evaluation. Use the left margin to change Ascending/Descending.
 11 Devices, 65/67 Freq

Devices	Scene	Freq Range
Devices list (67 Fr)		
#1 - BTR-800 H3 RX (4 Fr)	Groupe 3 - Section 1 (6 Fr)	650.100 - 667.900
#1 - BTR-800 H3 TX (2 Fr)		500.100 - 517.900
#1 - Sennheiser EM9046 A4 (8 Fr)	Groupe 2 - Section 1 (20 Fr)	534.000 - 558.000
#1 - IFB Lectrosonics T4-R1a, Block 23 (1 Fr)	Groupe 1 - Section 2 (7 Fr)	588.800 - 614.300
#1 - Sennheiser Evolution G2 Gp A IEM (6 Fr)		518.025 - 554.000
#1 - Sennheiser SR300 IEM G3 B (8 Fr)	Groupe 2 - Section 2 (16 Fr)	626.000 - 668.000
#1 - Shure ADX5D K54 (12 Fr)	Groupe 2 - Section 1 (20 Fr)	606.000 - 662.875
#1 - Shure PSM 1000 J&J (8 Fr)	Groupe 2 - Section 2 (16 Fr)	554.250 - 625.750
#1 - Shure AD4D G54 (0/2 Fr)	Groupe 1 - Section 1 (18 Fr)	479.125 - 564.875
#1 - Sennheiser EM3732-II A (8 Fr)		470.000 - 560.000
#1 - Shure AD4Q G55 (8 Fr)		470.125 - 636.000

☐ Exclude devices with number of desired frequencies
 ☐ Random Freq
 Evaluate


EazyRF displays by default the list of devices according to the frequency bandwidth of each device less the spaces occupied by the television channels, that is the option "Freq Range" of the "Evaluation method". So, devices with limited bandwidth will be re-evaluated first and so on. Let's do an assessment:

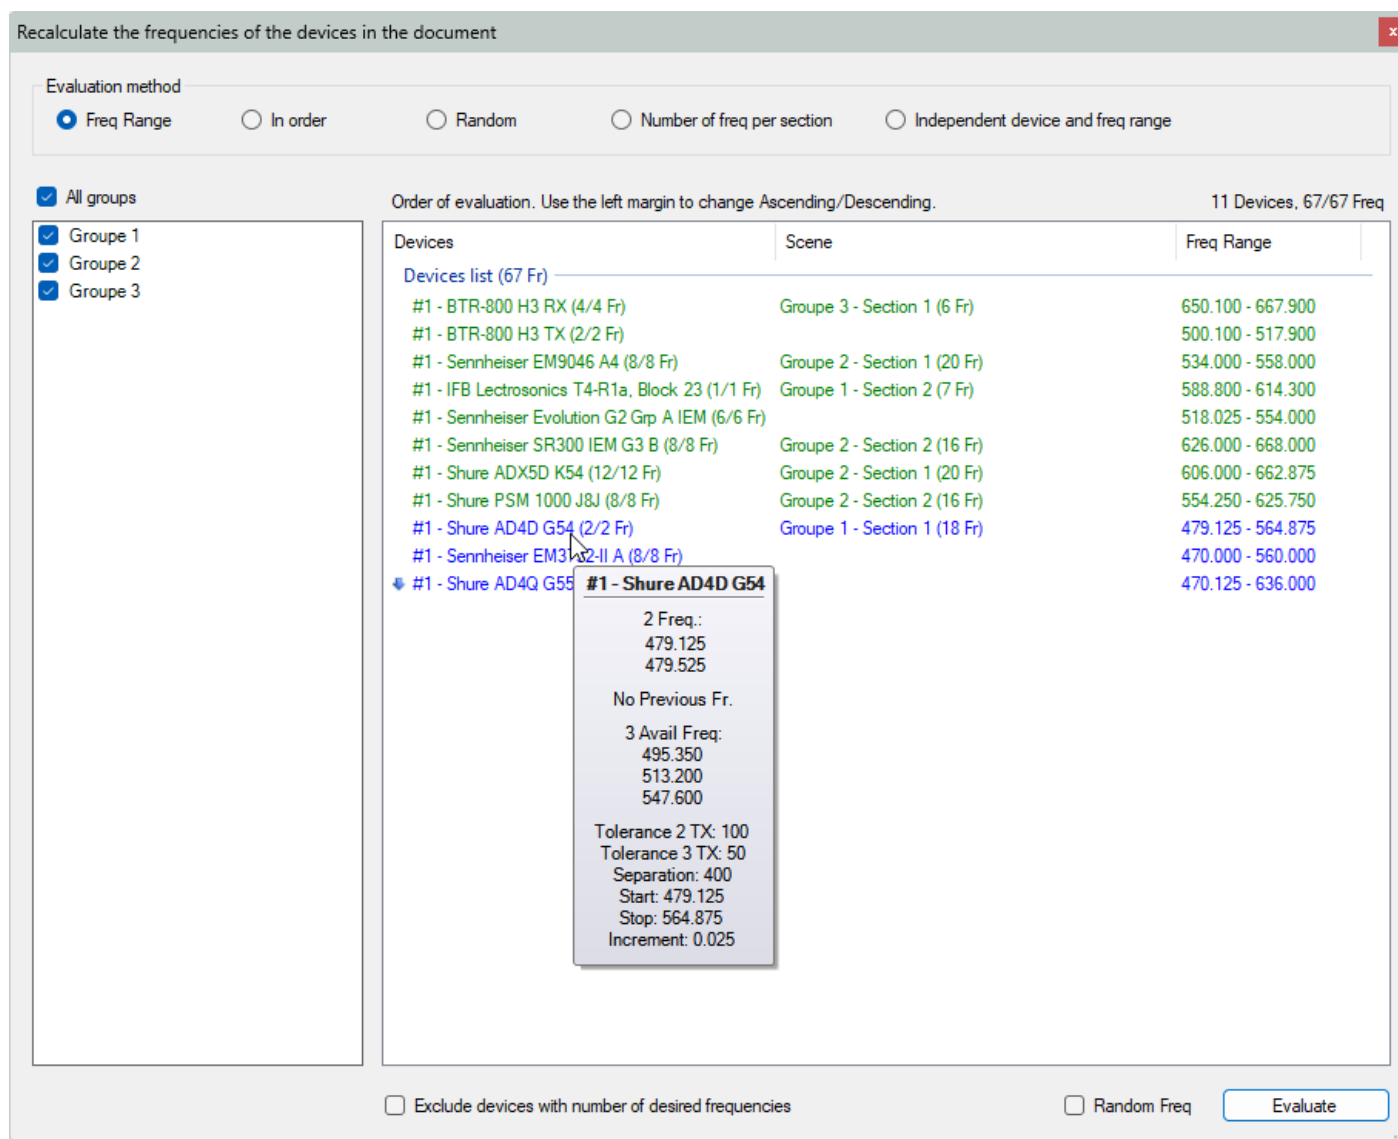

We can see that all devices now have their frequencies. The color of the device name indicates the status of the changes: green = reassessment without changes, blue = reassessment with frequency changes, and red = the desired number of frequencies was not found.

Different evaluation methods exist: by "Freq Range", seen previously, "In Order", according to the order of appearance in the groups / sections, "Random", in an undefined order based on chance and finally, by "Number of freq by sections" and by "Devices of independent groups with frequency range".

The devices can be recalculated in descending order using the left margin of the device name:

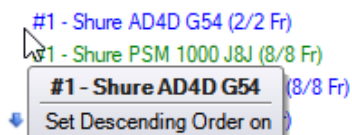

All groups can be recalculated or selected as needed:

☐ All groups

☒ Group 1

☐ Group 2

☒ Group 3

Finally, in the lower part of the window there are some additional options:

☐ Exclude devices with number of desired frequencies


☐ Random Freq

Evaluate

The "Exclude devices with number of desired frequencies" option allows you to exclude devices whose frequencies have already been found from re-evaluation. It goes without saying that this option is of no use for a single device, a certain number is required for a tangible result.

The option "Random Freq" recalculates the frequencies of the devices randomly, so never the same result twice.

Each device on the list can be selected and the monitoring is done in the views thus allowing to have a better idea of a solution (descending order for example):

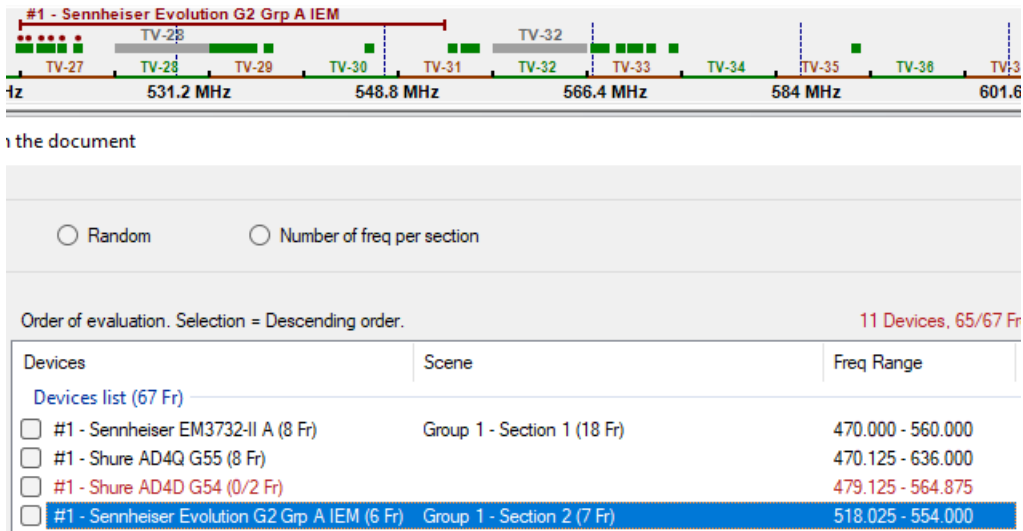

2.15.5 Clear (data)

This tool allows you to erase part of the data from a document:

Clear document data

☒ All groups

☒ HF
☒ IEM
☒ Freq SOS

Please note, this operation is final, there is no cancellation possible.

☐ Clear frequencies from all devices, even protected

☐ Clear frequencies descriptions for all devices

☐ Reset the evaluation parameters of all devices to the basic values, except the number of frequencies

☐ Reset the number of frequencies to the base value

☐ Remove Off Groups, Sections and Devices

☐ Remove protection from all devices (Protected) Put On

☐ Clear all scans data

☐ Clear all Interferences

☐ Clear all TV channels (and digital radio if applicable)

Cancel

Select all

Unselect all

Execute

First, you select which groups will be affected, or all groups. No device is erased, only its data.

Then you have the choice to erase either the frequencies of the devices of the selected groups, or the descriptions of the frequencies, or to put the evaluation parameters back to their basic values (except the number of frequencies), or to replace the number of frequencies to the default number, either to remove the deactivation (power off) of the groups, sections and devices, and finally, or to remove or put on the protection on the devices of the groups. These functions can be combined.

When all the groups are selected, you have the choice to erase the global data of the document, either the scans, the list of interference or the list of TV channels (and digital radio channels for France).

This function is final, no undo option exists. For this reason, if your document has not been saved beforehand, when you launch the "Execute" command, a window asks you if you want to save it:

EazyRF

Document New modified, do you want to save it?

Yes

No

2.16 Shortcuts

There are some keyboard shortcuts to perform certain commands:

Delete or Backspace: erase one cell (or several)

Ctrl + F: Add Fixe Device

Ctrl + V: Add Variable Device

Ctrl + G: Add Group

Ctrl + S: Add Section

Ctrl + Z: Undo command

Ctrl + Y: Redo command

Ctrl + A: Enable/Disable Auto-Increment of the device

Arrow Left, Right, Up and Down: Move the selection to another device in a section

3 - Detailed View

The "Detailed View" is a different representation of the data of the "Global View". It allows the detailed display of devices frequencies:

The screenshot displays the EasyRF V4.50.210820 software interface. The main window is titled 'Test Guide 4.50 Vue Détaillée-01'. The 'Detailed View' tab is active, showing a list of devices on the left and a central table of frequencies and intermodulations. The right sidebar contains device details and options.

List of Devices (Left Panel):

- A1-101K Lav. Hand (1-2)
- A1-101K Lav. Hand (1-2) #2E
- A1-102K Lav. Hand (1-2)
- A1-103K Lav. Hand (1-2)
- A1-104K Lav. Hand (1-2)
- A1-105K Lav. Hand (1-2)
- A1-106K Lav. Hand (1-2)
- A1-107K Lav. Hand (1-2)
- A1-108K Lav. Hand (1-2)
- A1-108K Lav. Hand (1-2) #2
- A1-108K Lav. Hand (1-2) #3
- A1-111K Lav. Hand (1-8)
- A1-112K Lav. Hand (1-8)
- A1-116K Lav. Hand (1-4)
- A1-117K Lav. Hand (1-4)
- A1-118K Lav. Hand (1-8)
- A1-119K Lav. Hand (1-8)
- A1-120K Lav. Hand (1-8)
- A1-121K Lav. Hand (1-8)
- A1-122K Lav. Hand (1-8)
- A1-123K Lav. Hand (1-8)
- A1-125K Lav. Hand (1-2)
- A1-126K Lav. Hand (1-8)
- A1-127K Lav. Hand (1-8)
- A1-128K Lav. Hand (1-8)
- A1-128K Lav. Hand (1-8) #2
- A1-128K Lav. Hand (1-8) #3
- A1-201K
- A1-202K
- AKG DMS700 B1
- AKG IVM4 IEM 835
- AKG WMS4000 835
- AKG WMS450 BS-A
- AKG WMS450 BS
- AKG WMS4500 B4
- Appareil XYZ

Central Table (Section 1):

No	Description	Frequency	Intermodulation	Comment
1		548.500	27	
2		548.800	27	

Right Sidebar (Group - Section - Device):

- Group: Groupe 1
- Section: Section 1
- Dev Description: #1
- Device: Sennheiser 3732-C
- Wished Freq Nb: 2
- Type: Micros
- Variables Freq Dev:
 - Tolerance 2 TX: 100
 - Tolerance 3 TX: 50
 - Separation: 300
 - Image: 10.70
 - Filter: 16.00
 - Start: 548.000
 - Stop: 638.000
 - Increment: 0.005
- Options (Dev):
 - Protected
 - Priority
 - Minimum Evaluation
 - Descending order
 - ☒ Avail Freq
 - ☒ Auto Start

The zone of "Details" finds itself to the right and in vertical format instead of being in the bottom in horizontal (global view).

The toolbar is the same as in "Global View".

The indicators of the devices are not all presents because the detail of the Frequencies and the Intermodulations makes their presence unnecessary.

An additional column, "Comment", allows adding information. In the case of devices with Fixed frequencies, the channel number is displayed (CH-02 for example).

The "Intermodulation" column displays the details of intermodulation and mouse can identify the source of these frequencies:

Section 1				
#1 - BTR-800 A2 RX 4 Freq (2 Avail)				
No	Description	Frequency	Intermodulation	Comment
1		632.100 41		
2		632.400 41		
3		632.850 41	25 kHz - 638.000 & 641.250 & 646.425	
4		633.450 41		
#1 - Shure UHF-R L3 8 Freq (21 Avail) TV				
1		638.000 41	25 kHz - 632.850 & 641.250 & 646.425	
2		638.350 42		
3		638.850 42		
4		639.500 42		
5		640.300 42		
6		641.250 42	25 kHz - 632.850 & 638.000 & 646.425	
7		641.950 42		
8		646.425	25 kHz - 632.850 & 638.000 & 641.250	

The "Comment" column shows the channel number of Lectrosonics devices:


#1 - IFB Lectrosonics T4-R1a, Block 25 4 Freq (5 Avail)				
1		647.600 43		Ch 4C
2		649.300 43		Ch 5D
3		650.600 44		Ch 6A
4		653.400 44		Ch 86

The editor of devices is called by double-clicking on the title area of the device.

The Global view allows to have an overall view of devices whereas the Detailed view allows to see better frequencies of devices.

4 - Frequencies Plan

View "Frequencies Plan" shows the data but does not allow editing of frequencies. It lets you customize the presentation (color, type characters, size ...):

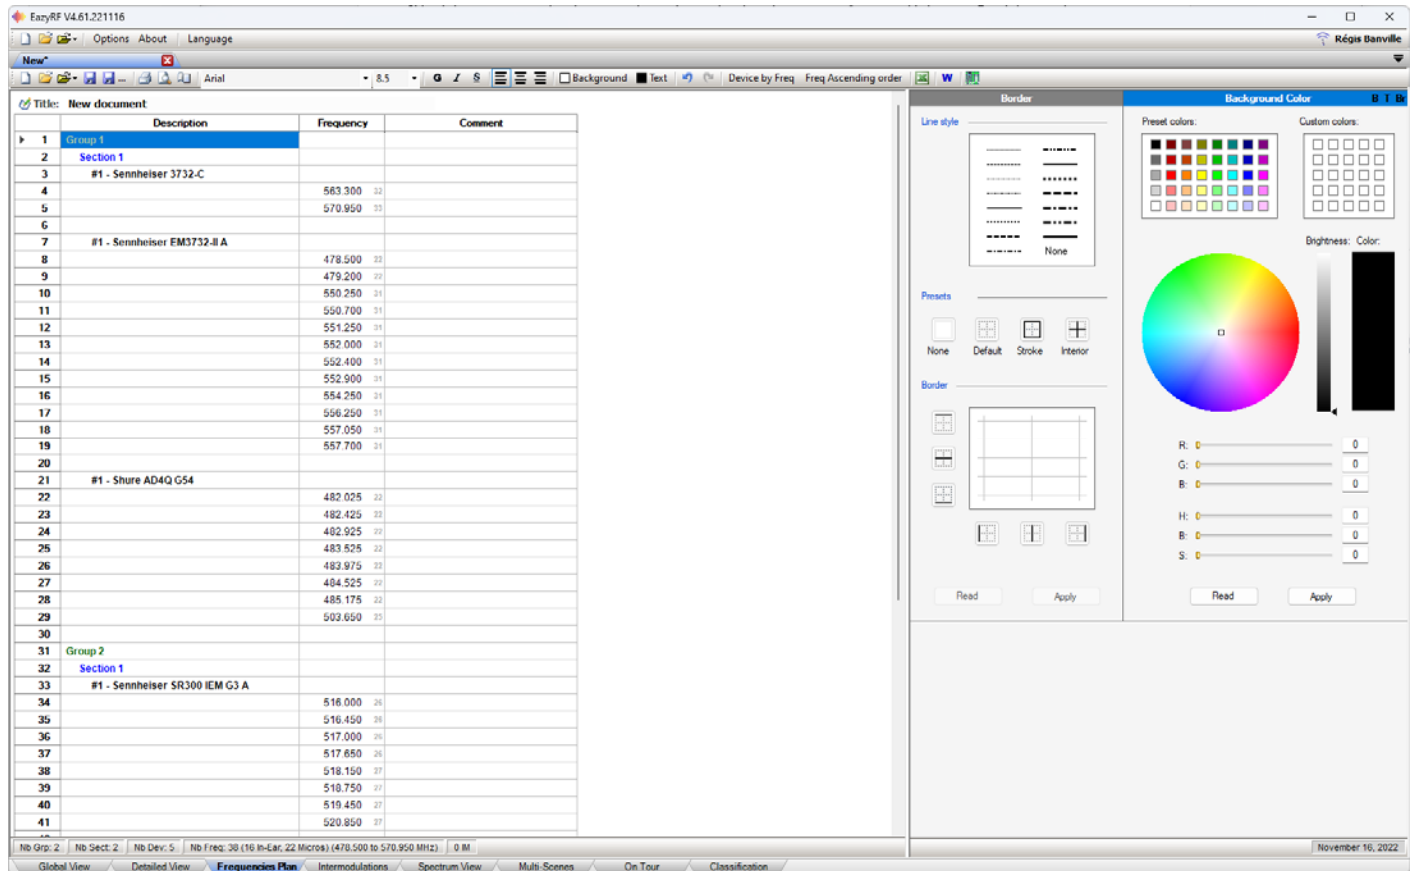

The Toolbar is adapted to the edition of the shape of the text, text color and background color:



The editor allows to add borders:

#1 - Shure UHF-R J5		
	578.000	31
	578.300	32
	578.700	32
	579.200	32
	579.550	32
	580.000	32
	580.550	32
	582.150	32

The editor has the usual commands "Undo" and "Redo".

The column width can be changed.

The devices can be classified by order of frequency with the command: "Device By Freq"

	Description	Frequency	Comment
1	#1 - Sennheiser 3732-A		
2		470.000	
3		470.300	14
4		470.700	14
5		471.200	14
6		471.550	14
7		472.000	14
8		472.550	14
9		474.150	14
10		474.900	14
11		482.500	16
12		483.100	16
13		484.150	16
14	#1 - BTR-800 A2 TX		
15		518.500	22
16		518.800	22
17	#1 - Sennheiser 3732-C		
18		548.500	27
19		548.800	27
20	#1 - Shure UHF-R J5		
21		578.000	31
22		578.300	32
23		578.700	32
24		579.200	32
25		579.550	32
26		580.000	32
27		580.550	32
28		582.150	32
29	#1 - BTR-800 A2 RX		
30		632.100	41
31		632.400	41
32		632.800	41
33		633.300	41

The frequencies can be classified in ascending order with the command "Freq. Ascending order"

	Description	Frequency	Comment
1		470.000	#1 - Sennheiser 3732-A - Section 1
2		470.300	#1 - Sennheiser 3732-A - Section 1
3		470.700	#1 - Sennheiser 3732-A - Section 1
4		471.200	#1 - Sennheiser 3732-A - Section 1
5		471.550	#1 - Sennheiser 3732-A - Section 1
6		472.000	#1 - Sennheiser 3732-A - Section 1
7		472.550	#1 - Sennheiser 3732-A - Section 1
8		474.150	#1 - Sennheiser 3732-A - Section 1
9		474.900	#1 - Sennheiser 3732-A - Section 1
10		482.500	#1 - Sennheiser 3732-A - Section 1
11		483.450	#1 - Sennheiser 3732-A - Section 1
12		484.550	#1 - Sennheiser 3732-A - Section 1
13		518.500	#1 - BTR-800 A2 TX - Section 1
14		518.800	#1 - BTR-800 A2 TX - Section 1
15		548.500	#1 - Sennheiser 3732-C - Section 1
16		548.800	#1 - Sennheiser 3732-C - Section 1
17		578.500	#1 - Shure UHF-R J5 - Section 1
18		578.800	#1 - Shure UHF-R J5 - Section 1
19		579.200	#1 - Shure UHF-R J5 - Section 1
20		579.700	#1 - Shure UHF-R J5 - Section 1
21		580.050	#1 - Shure UHF-R J5 - Section 1
22		580.500	#1 - Shure UHF-R J5 - Section 1
23		581.050	#1 - Shure UHF-R J5 - Section 1
24		582.650	#1 - Shure UHF-R J5 - Section 1
25		632.100	#1 - BTR-800 A2 RX - Section 1
26		632.400	#1 - BTR-800 A2 RX - Section 1
27		632.800	#1 - BTR-800 A2 RX - Section 1
28		633.300	#1 - BTR-800 A2 RX - Section 1

4.1 Transfer to Excel

EazyRF allows you to export data to an Excel spreadsheet:

Export to Excel

Selection

Workbooks:
Classeur1

Worksheets:
Feuil1

Line: 1 Column: A


ANFR transfer

☐ ANFR type ☒ Separation ☐ 300 kHz

Cancel Export


Simply choose the workbook, the worksheet and the destination cell.

If the frequencies are listed in ascending order, the data can be transferred to Excel in a format compatible with the ANRF's Frequencies Blockchain:




See <https://www.anfr.fr/l-anfr/politique-dinnovation/blockchain-des-frequences/> for more information.

In order for the transfer to Excel to work properly, the same language module must be installed in Windows and Excel:

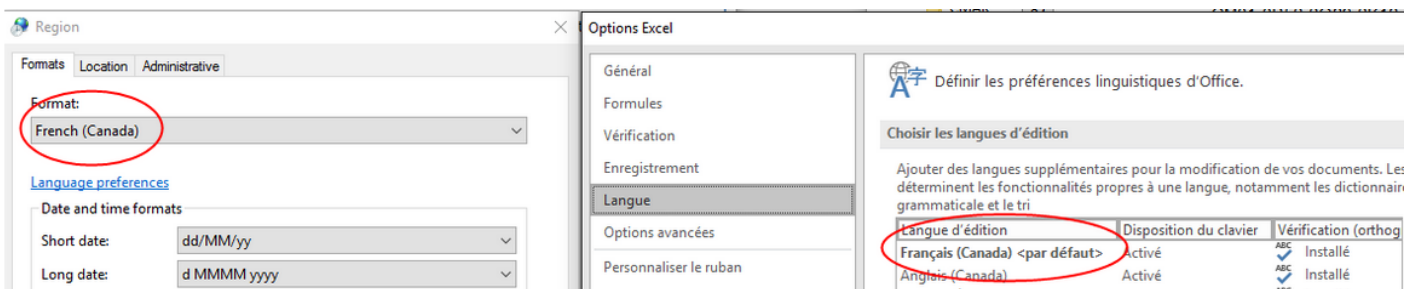


In addition, Excel must be started in administrator mode (shortcut settings, advanced). For a document to be visible, it must be opened directly by Excel and not by double clicking in File Explorer.

4.2 Transfer to Wisycom Manager




And as in Global View, you can transfer frequencies to Wisycom Manager, see section 2.10.

4.3 Create list of markers for WinRadio



This function allows you to save the list of frequencies in ascending order in csv format to be used as markers in WinRadio; csv format: ID,Frequency,Name,Colour. The background color of the frequency cells is used as the color for the markers.

4.4 Create list of markers for Shure WWB7



A list of frequencies in ascending order in csv format can also be created to be used as markers for the Shure Wireless Workbench 7.

4.5 View detachment to a window (2nd screen)

The "Frequencies Plan" view can be detached from the EazyRF application towards a window on a 2nd screen or overlaid with EazyRF if a 2nd screen is not connected.

To activate this function, double-click on the name of the view:



The name of the view is displayed in red to indicate that it is detached:



To return to standard mode, either close the window or redo a double click on the name of the pane (in red).


The "Intermodulations", "Spectrum View" and "On Tour" views can also be detached.

If more than one view is detached, a simple click on the name of the view will bring it to the foreground.

Obviously, the content of the detached views is synchronized with the changes made no matter where they are made.

5 - Intermodulations


View "Intermodulation" displays the list of devices of the document with an overview of frequencies and a detailed vision of frequencies and intermodulations:

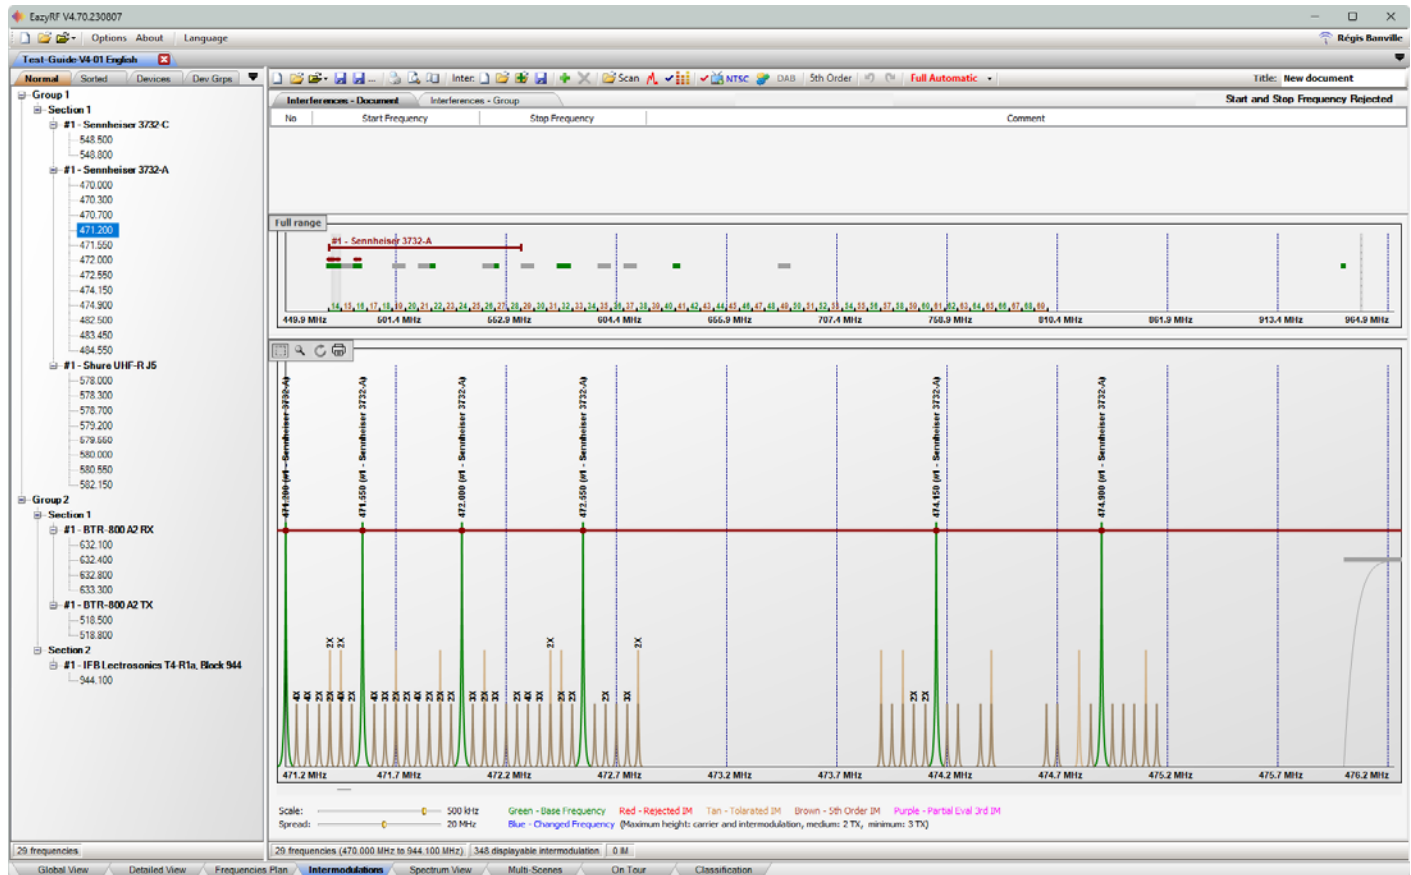

The editor of devices can be called by double-clicking the name of a device or a frequency in the device list (left part of the view).

Areas of interference can be defined with the right mouse button.

5.1 Toolbar

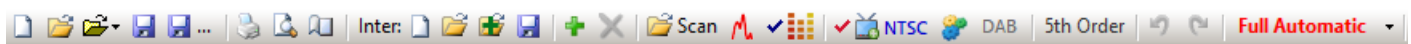

The toolbar contains items already examined in global/detailed views: file management, printing, TV channels, local options, undo/redo commands and method of calculation.

Some additional items concern interferences which we shall see in the section 5.6.


Finally, the title of the document can be found on the bar to get a little space (instead of in the document area).

5.2 Devices

The left part of the window consists of four components:



"Normal" pane displays the list of devices of the document in the order of global/detailed view. The "Sorted" section classifies devices in ascending order of frequency:

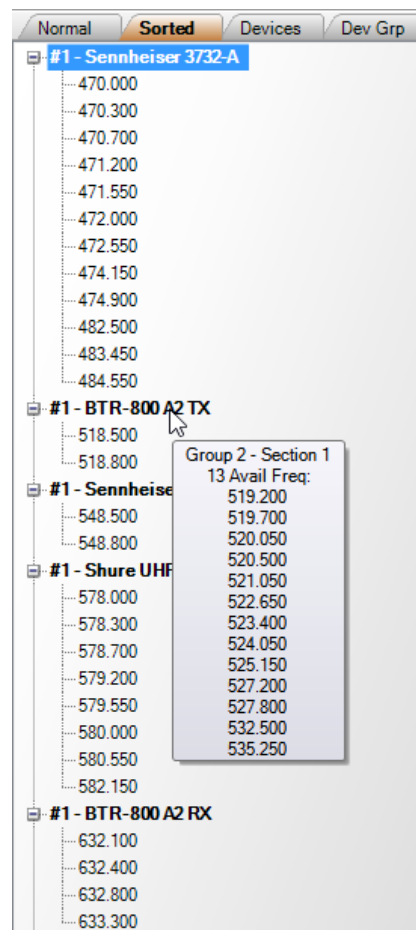

Information follow the mouse cursor: available frequencies, changes...

Tabs "Variables" and "Fixed" display the list of devices like the "Global View". It is thus allowed to add a device to the document:

The image displays two side-by-side screenshots of a software interface, likely for signal analysis or device management. Both windows have tabs for 'Normal', 'Sorted', 'Devices', and 'Dev Grp'.

Left Window (Normal view):


- Tab: **Devices**
- List of devices (558 total):
 - beyerdynamic TG 1000 A
 - beyerdynamic TG 1000 A #2
 - beyerdynamic TG 1000 B
 - beyerdynamic TG 1000 C
 - beyerdynamic TG 1000 D
 - beyerdynamic TG 1000 D P2
 - beyerdynamic TG 1000 E
 - BTR-800 A2 RX
 - BTR-800 A2 TX
 - BTR-800 A2 TX #2
 - BTR-800 A3 RX
 - BTR-800 A3 TX
 - BTR-800 A4 RX
 - BTR-800 A4 TX
 - BTR-800 B3 RX
 - BTR-800 B3 TX
 - BTR-800 B4 RX
 - BTR-800 B4 TX
 - BTR-800 B6 RX
 - BTR-800 B6 TX
 - BTR-800 C3 RX
 - BTR-800 C3 TX
 - BTR-800 C4 RX
 - BTR-800 C4 TX
 - BTR-800 C6 RX
 - BTR-800 C6 TX
 - BTR-800 E88 RX** (selected)
 - BTR-800 E88 TX
 - BTR-800 F1 RX
 - BTR-800 F1 TX
 - BTR-800 F2 RX
 - BTR-800 F2 TX
 - BTR-800 F3 RX
 - BTR-800 F3 TX
 - BTR-800 F4 RX
 - BTR-800 F4 TX
 - BTR-800 H1 RX
 - BTR-800 H1 TX
 - BTR-800 H2 RX
 - BTR-800 H2 TX
- Details pane (bottom):

Var Device	BTR-800 E88 RX
Based on	Basic model
Type	BTR-800
Nb Freq Simult	4
Tolerance 2 TX	100
Tolerance 3 TX	50
Separation	300
Start	470.100
Stop	487.900
- Status bar: 558 Devices

Right Window (Dev Grp view):

- Tab: **Dev Grp**
- List of device groups (11 total):
 - (2) BTR-800 A2
 - (2) BTR-800 A3
 - (2) BTR-800 A4
 - (2) BTR-800 B3
 - (2) BTR-800 B4
 - (2) BTR-800 B6
 - (2) BTR-800 C3
 - (2) BTR-800 C4
 - (2) BTR-800 C6
 - (2) BTR-800 E88
 - (4) Théâtre ABC
- Details pane (bottom):
 - BTR-800 A2 RX
 - BTR-800
 - 632.100-649.900 MHz
 - 4 Freq
 - BTR-800 A2 TX
 - BTR-800
 - 518.100-535.900 MHz
 - 2 Freq
- Status bar: 11 Devices Groups


In the details pane "Normal" the following menu appears by clicking the right mouse button:

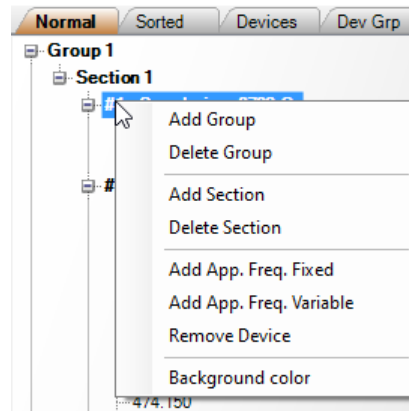


It is thus possible to manage groups, sections, and devices as in the global and detailed views so avoiding moving from a window to the other one. This operation is not possible in the component "Sorted".

5.3 Global Frequencies

The overall representation of the frequency spectrum occupied by the document is displayed in the right middle section:

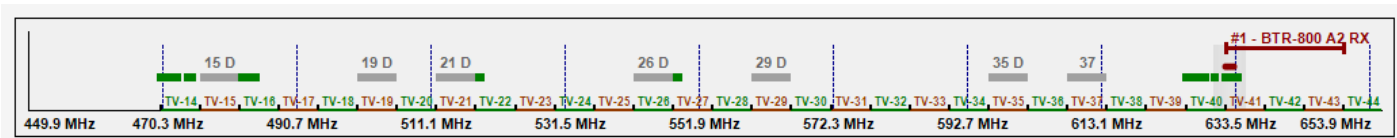


The selected device is displayed by its name and the space occupied by the Start to Stop frequencies of the device:

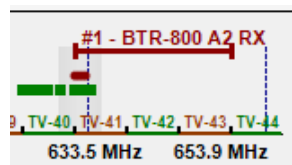


The zone in degraded grey represents the space occupied by the detailed section.


To view a section directly in detail, click on a point or draw the area to be enlarged with the left mouse button:

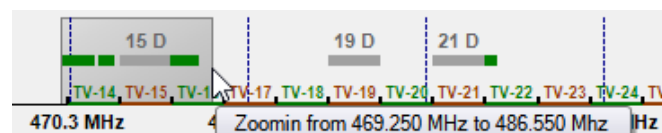

A zone of interferences takes shape when dragging with the right mouse button:

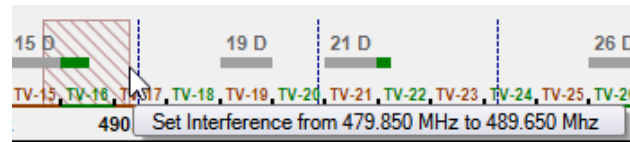


Finally, the "Full range" command allows you to enlarge the viewing area when frequencies in MHz and GHz are used:

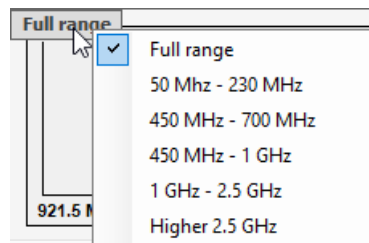


5.4 Detailed Frequencies



The detailed zone shows a section of the global zone with the graphic representation of the frequencies and the intermodulations:

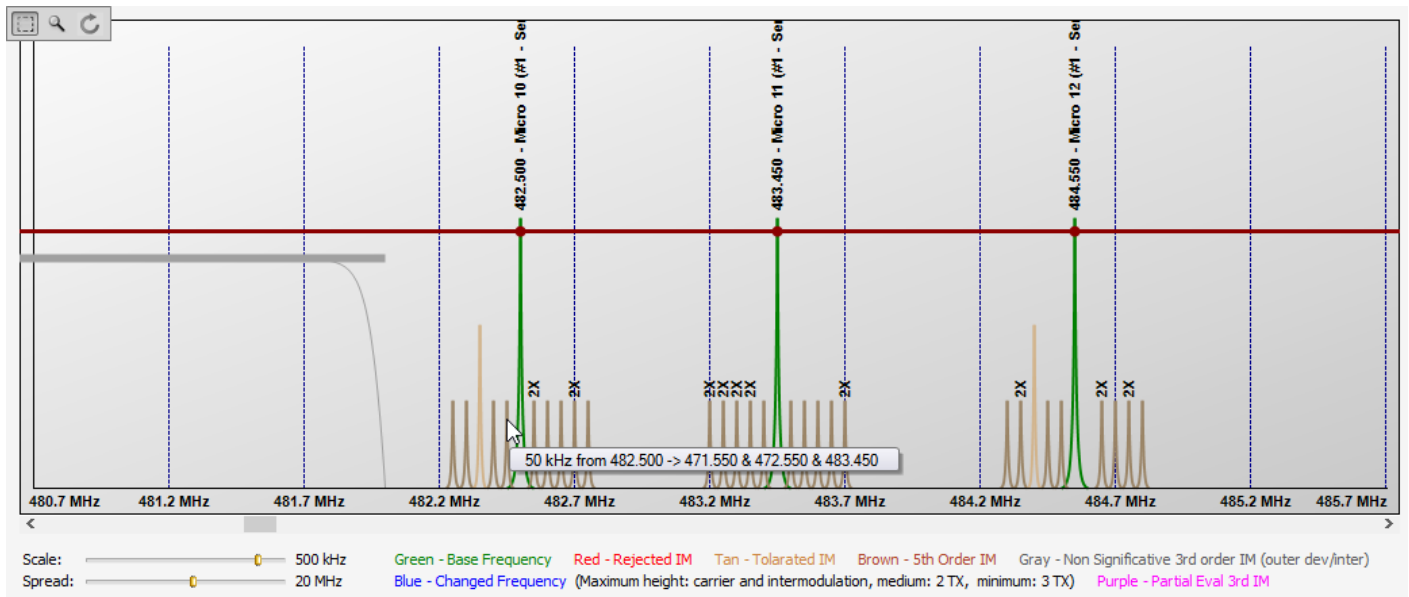


The mouse cursor shows the detail of every intermodulation:


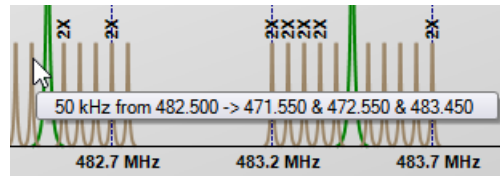



From this zone, the frequencies can be selected and moved:

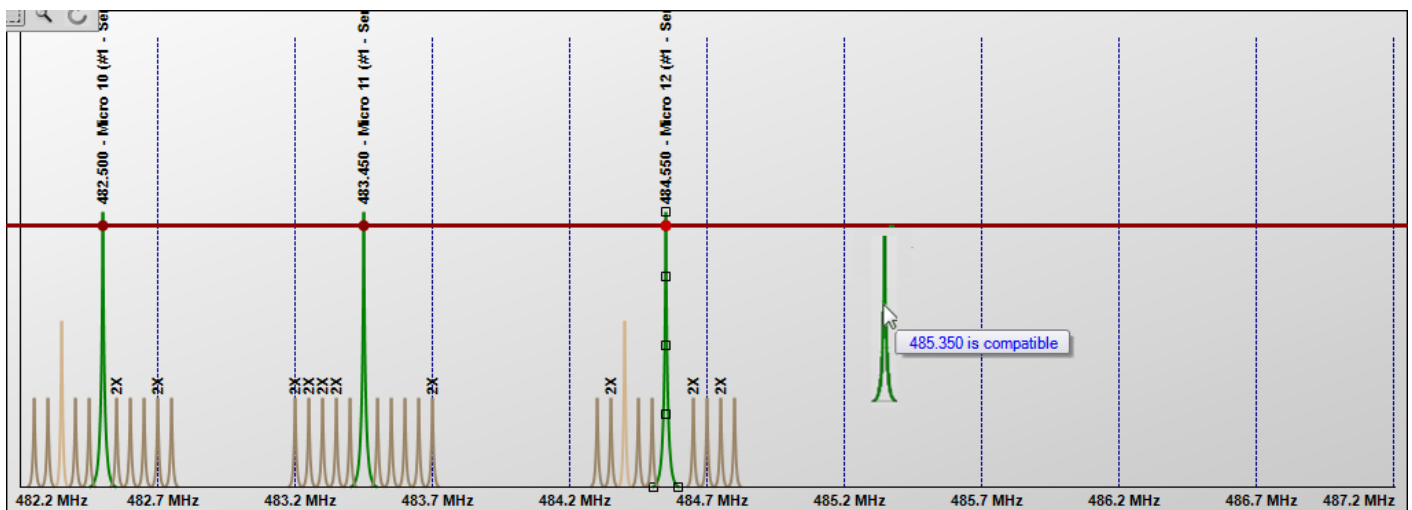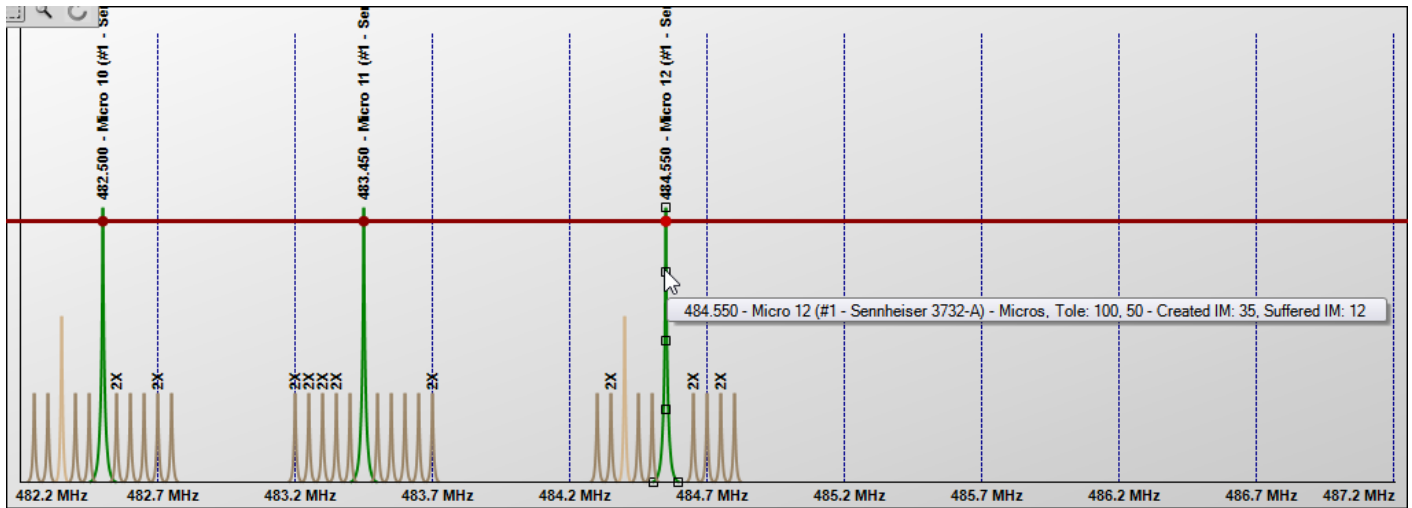

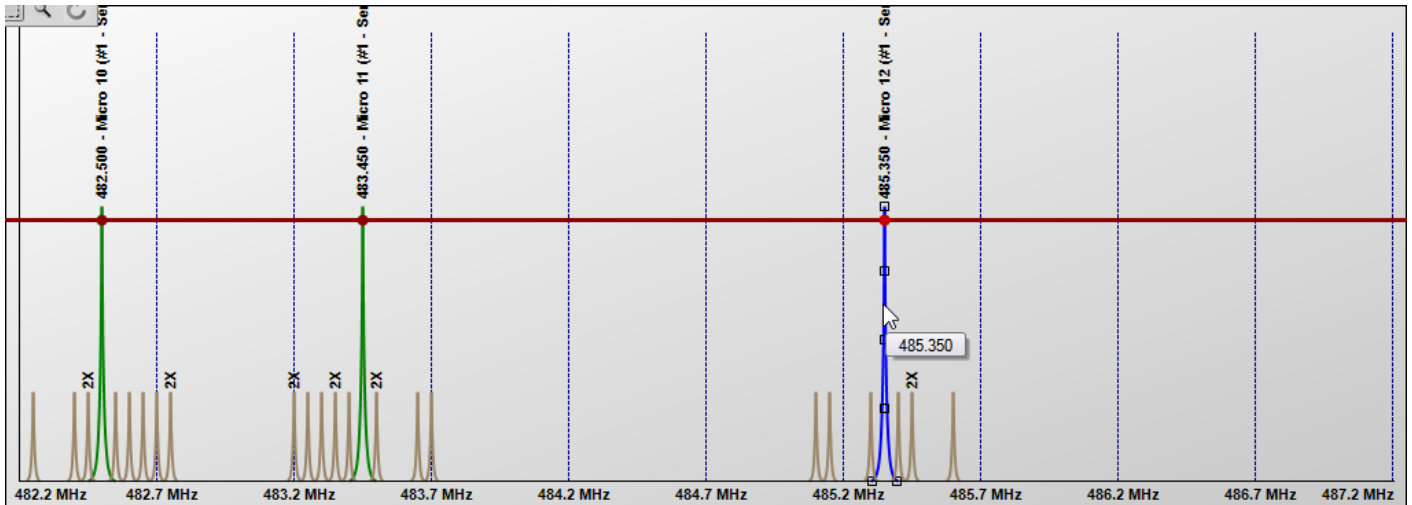

A group of frequencies can also be selected and moved by dragging the mouse or by selecting the frequencies one by one by holding the touch Ctrl between every selection:

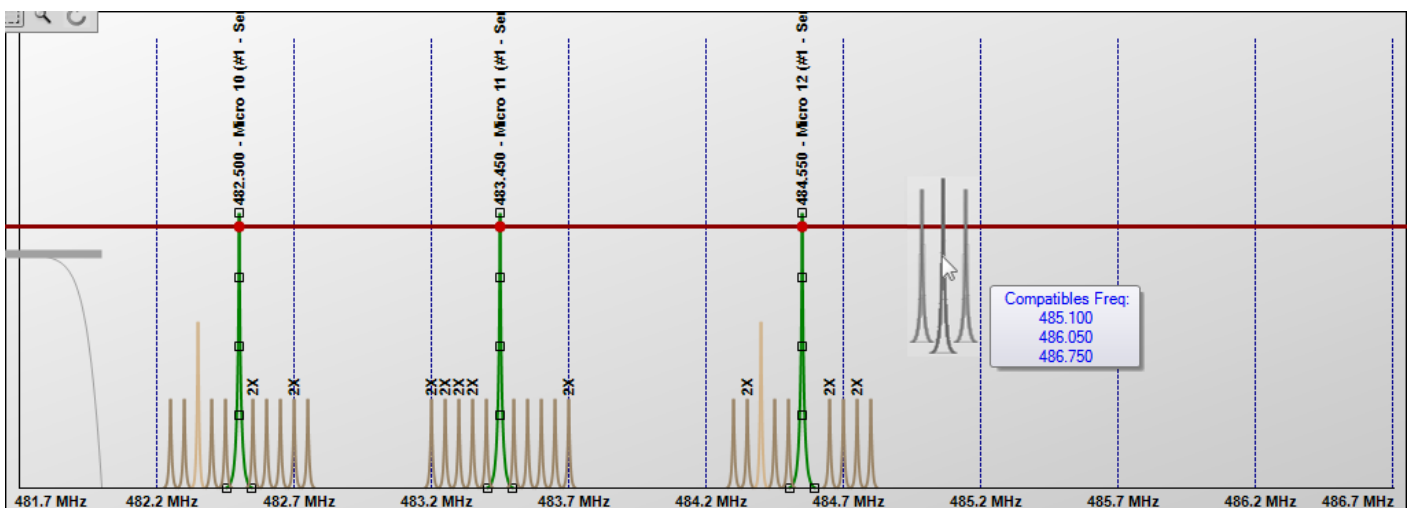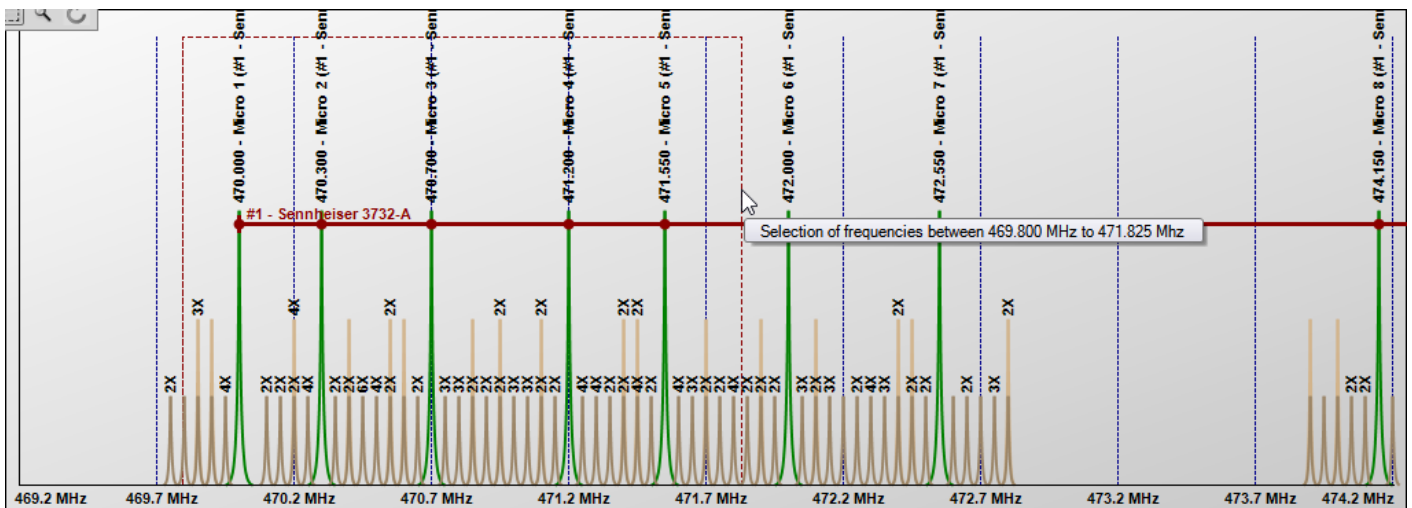

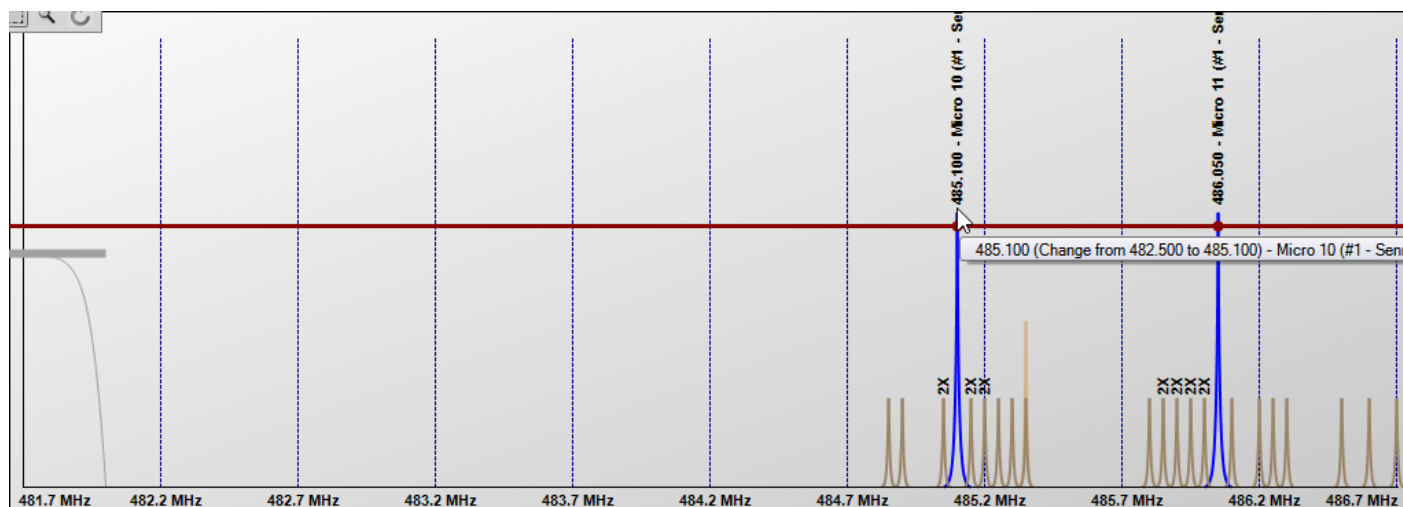

The commands:




The first two allow you to make either a selection or an enlargement in the detailed area. The third command recalculates the intermodulations and refreshes the display.

Finally the last command displays the spectrum management module 470-614 MHz for the ATSC video standard and the 470-694 MHz spectrum for the SECAM video standard. See section 5.10 for more information.

5.5 Scale and Spread

The bottom of the detailed zone possesses two controls:




The control "Scale" allows to enlarge or to decrease the detailed vision of the frequencies. Beyond 5 MHz between two steps, there is not enough space to draw adequately the frequencies and the intermodulations. Thus only a block represents every frequency.

The control "Spread" allows to increase/decrease the area added to the overall spectrum size.


5.6 Interferences

An interference region is a region of the spectrum excluded when allocating frequencies. So if unwanted modulations are observed, we can define an area not to assign frequencies in it. This is an area, so there is no evaluation of intermodulation, only a rejection of frequencies.

To create an interference area, use the right mouse button and hold it down by enlarging the area:

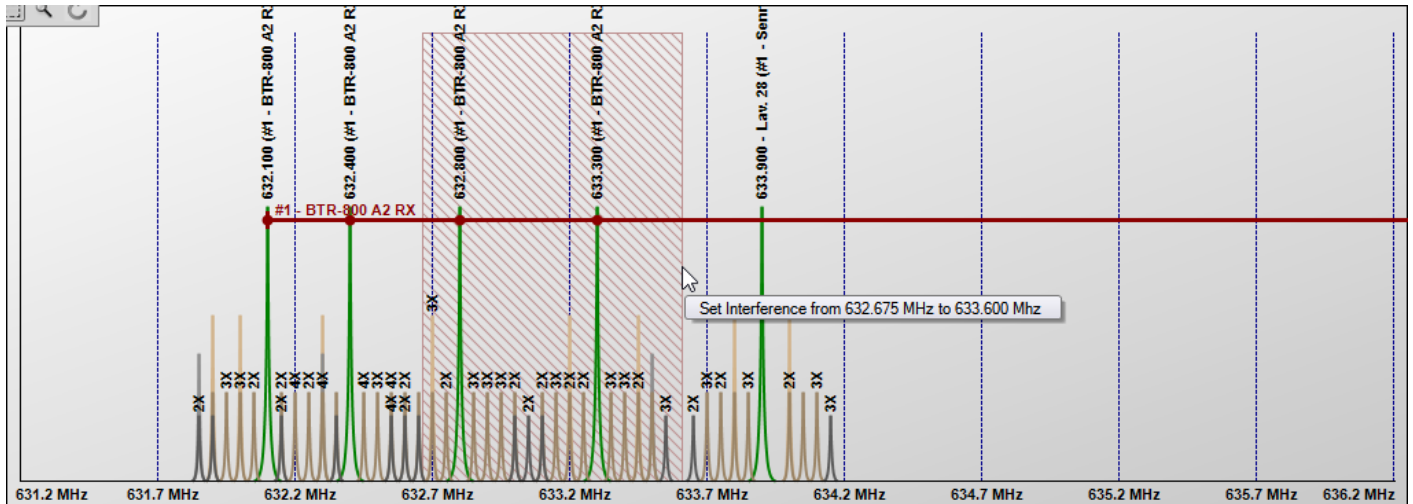

In this case, this operation causes the recalculation of frequencies (full automatic mode):

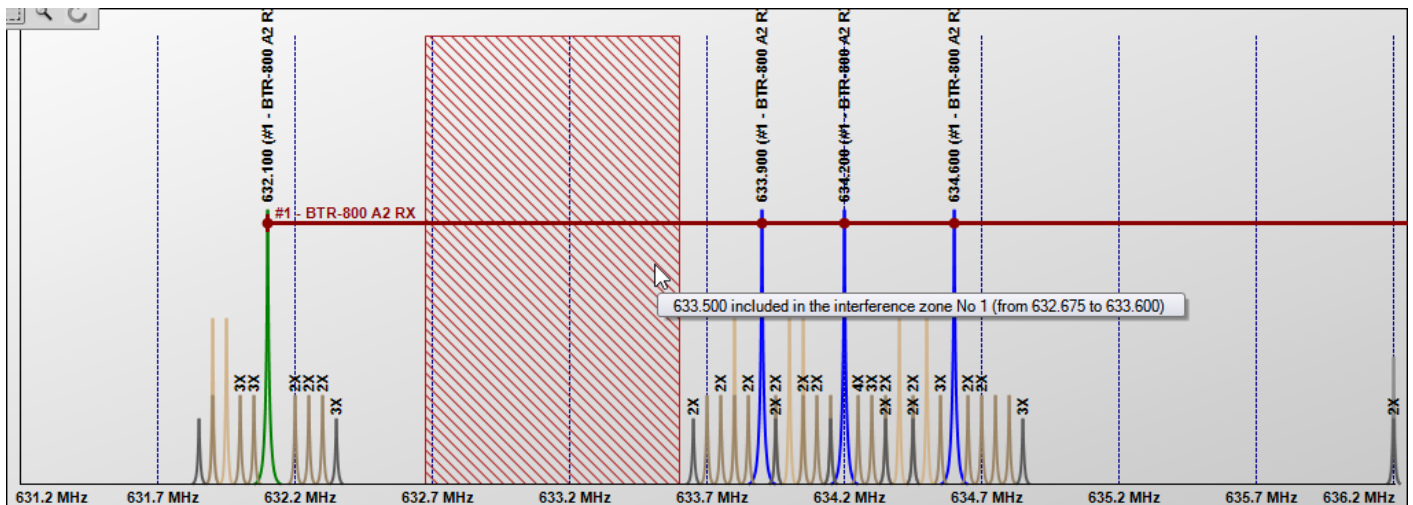


This can be done in the overall frequency range or in the detail area.


The upper right part of the window displays detailed interference:

Interferences - Document		Interferences - Group		1 interference	Start and Stop Frequency Rejected
No	Start Frequency	Stop Frequency	Comment		
1	632.675	633.600			

The Start and Stop frequencies can be changed directly.

To add interference manually, use . You can enter a sequence of values (without evaluation between each data) by using the "+" key on the numeric keypad or the "+ / =" key on a standard keyboard.

To delete an area, select it from the list and use the tool:




These interferences can be saved and retrieved later from the toolbar:



The command  allows to add a file to the existing list while the open command erases the data previously.

The "Scan" command can be used to import interference from a file created by a frequency scanner:

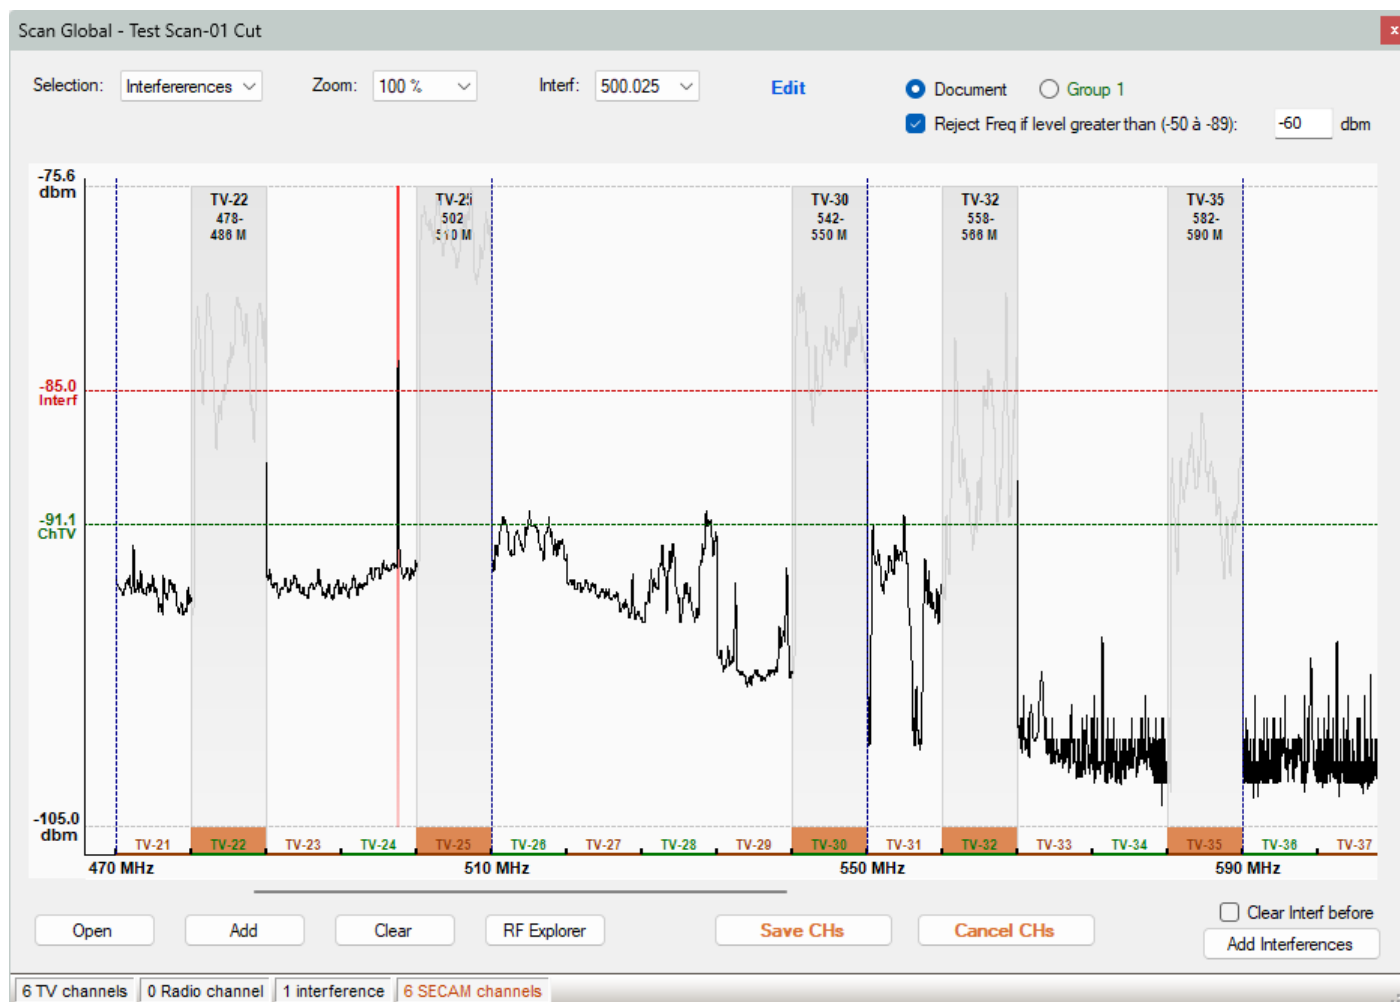


The "Add" command does not erase the data before opening a file. The "Delete" command is used to destroy the data. The data is saved with the document, so if it is no longer needed, it should be deleted.

The command "RF Explorer" allows to read the data directly from the RF Explorer scanner. See section 5.6.2 for operation.

The "Edit" command allows modification of the sample data, see section 5.6.1 for more details.

Since version 4.70 of EazyRF, samples can be added to each group and are managed by:

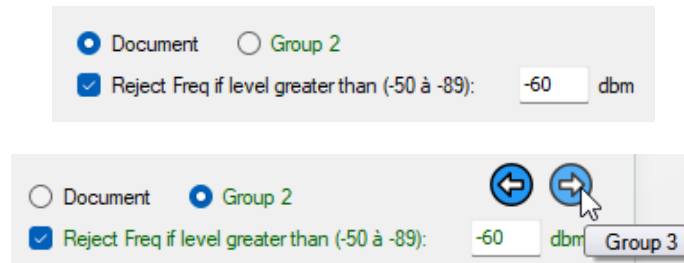

If a scan file is assigned to a group, it takes priority over the document scan file, so a group without a sample file uses the document file.


The next/previous buttons allow you to travel from one group to another without leaving the editor.

The activation of the "Reject Frequencies if level" and the detection level are now accessible by this module instead of the module "Document parameters" in order to manage the document and the groups.


The frequency rejection level is adjusted separately for each group and for the document.

Enabling or disabling TV channels affects document and groups. If the Document/Group selector is assigned to groups, only the channels belonging to the group can be modified. Always save TV channel changes.

The detection threshold of frequency reject according to scan level has been removed from the "Document options":

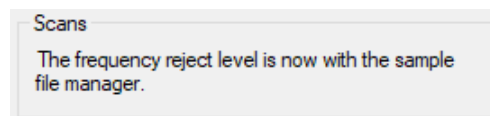

The interference detection is done in accordance with the exclusion zone on each side of a TV channel, depending on the parameter of the document:

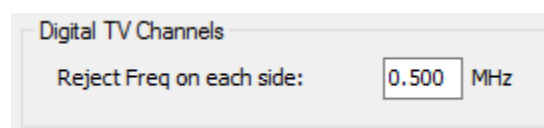


Two lines (red and green) can be used to adjust the interference detection threshold (red), while the green adjusts the threshold for detecting the TV channels. To move the lines, it is necessary to drag the indicator text of the level:




An interference can be deselected by clicking on the red vertical line. To add one manually, click on a line of the graph.

Two selection modes exist, either the selection of interferences or TV channels. The first command at the top of the window allows you to change the mode. The sampling values included in the selected TV channels are excluded from the interference detection.

To navigate directly to an interference value, make a selection from the drop-down list at the top of the window to the right:

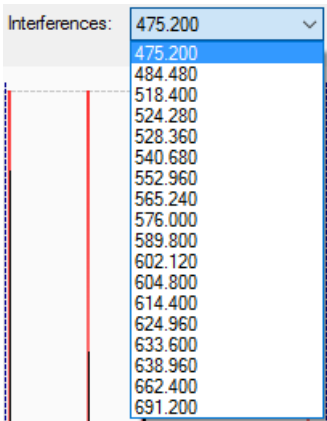


Finally, after making the desired choice, finish with the command "Add Interference" to insert the data in the current list. You can clear the list before copying the interferences:

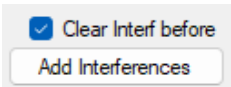

The interferences are added to the document or to the group according to the "Document / Group" selection:

Interferences - Document		Interferences - Group		9 interferences	Start and Stop Frequency Rejected
No	Start Frequency	Stop Frequency	Comment		
1	500.025	500.025			
2	532.825	532.825			
3	533.075	533.075			
4	533.275	533.275			
5	533.325	533.325			

The TV channels of the document are displayed in orange:

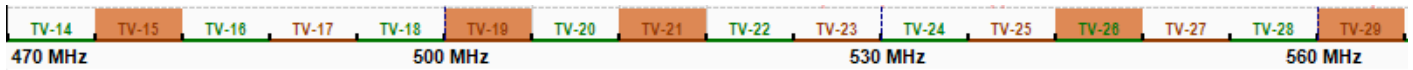

TV channels can be selected or not by clicking on the channel no. After making changes to the document channels, the "Save CHs" command becomes accessible. You must save the changes before leaving the editor.

The selection of TV channels for interference detection is different from that of TV channels in the document and is not linked. It is not done automatically because sampling does not necessarily cover the whole range.

The sampling data is shared with the Channel Scan module.



The data is also saved with the document. If they are no longer useful, it would be nice to erase them.

The sampling data can be superimposed on intermodulations with the tool

Indicators on the header of the groups of the global and detailed views display the presence of TV channels, a sample file or an interference list for a group:




By positioning the mouse pointer over one of these indicators, the content is displayed:

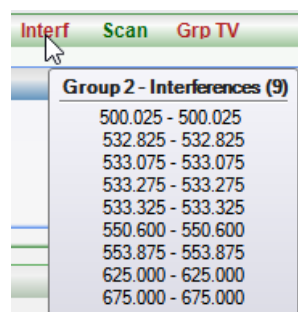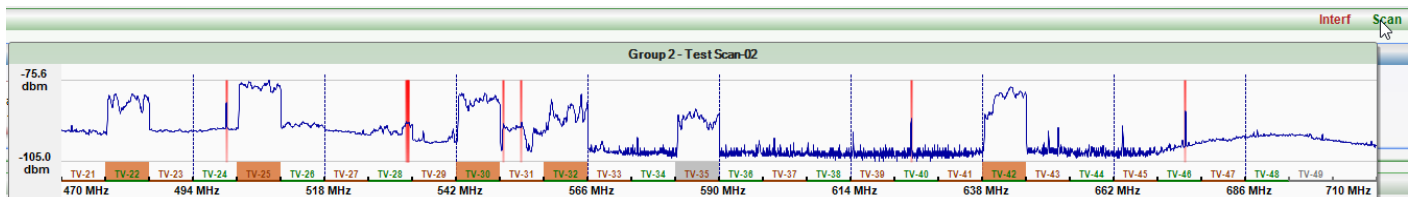



5.6.1 Sampling edition

The "Edit" command calls the sampling editor:

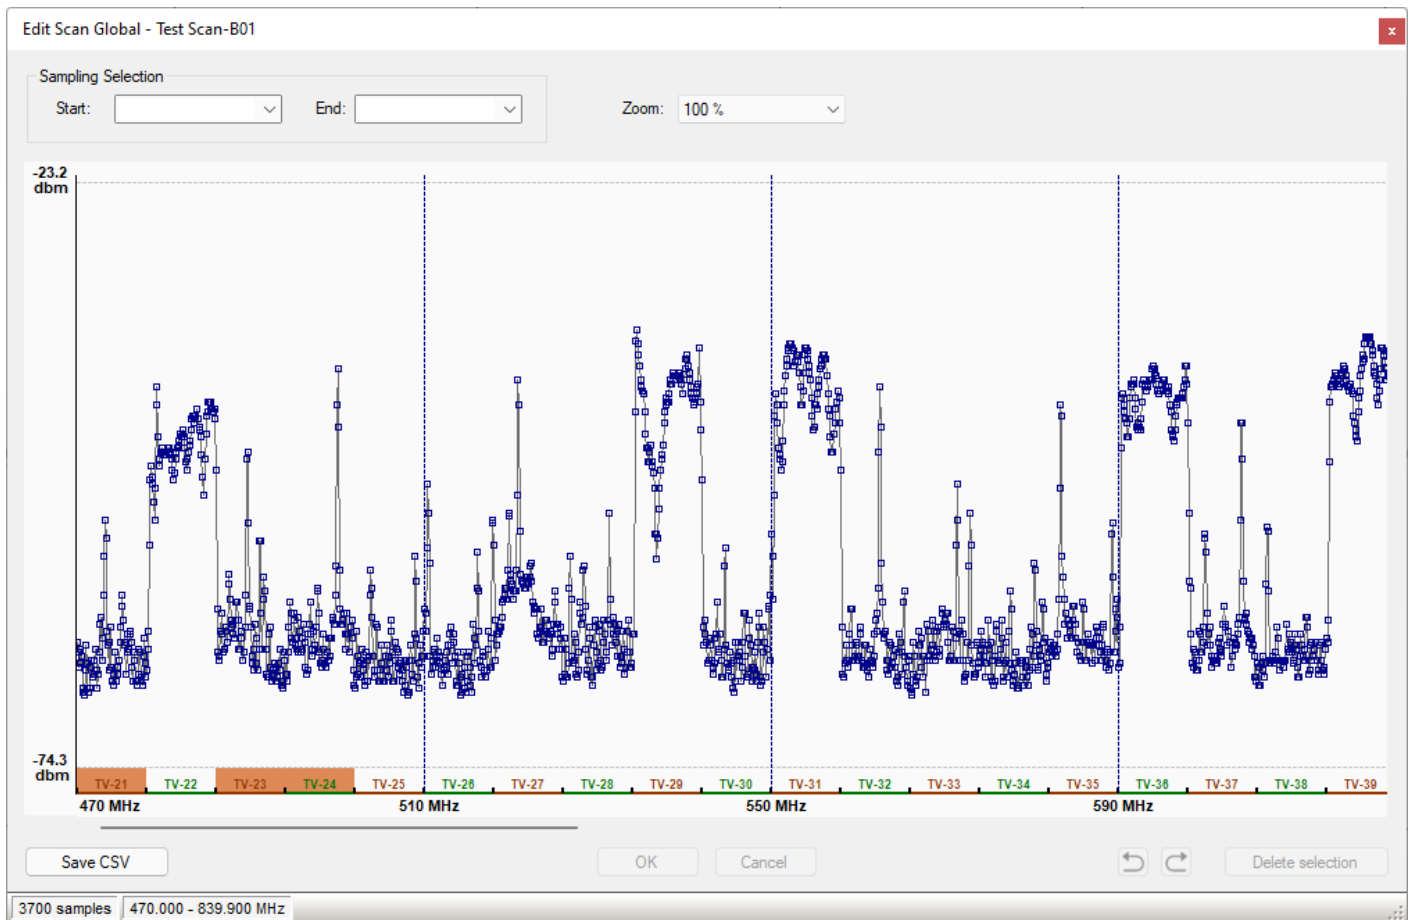


The lower information bar displays the total number of samples in the file, as well as the frequency range covered.

The editor allows you to select a region of the spectrum (or a single sample) and erase it. You can select a region by pressing the left mouse button on the starting frequency and dragging the mouse to the right to extend the selection. It goes without saying that it is not easy to a frequency precisely with the mouse (the zoom can help), but this is not important, because the drop-down lists for the start and end of the selection allow you select the desired frequencies:

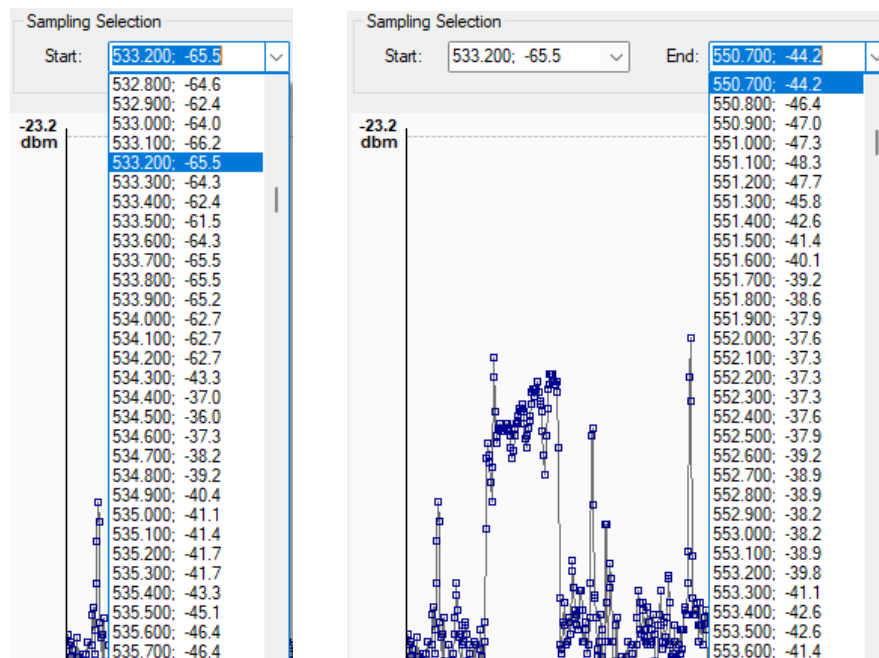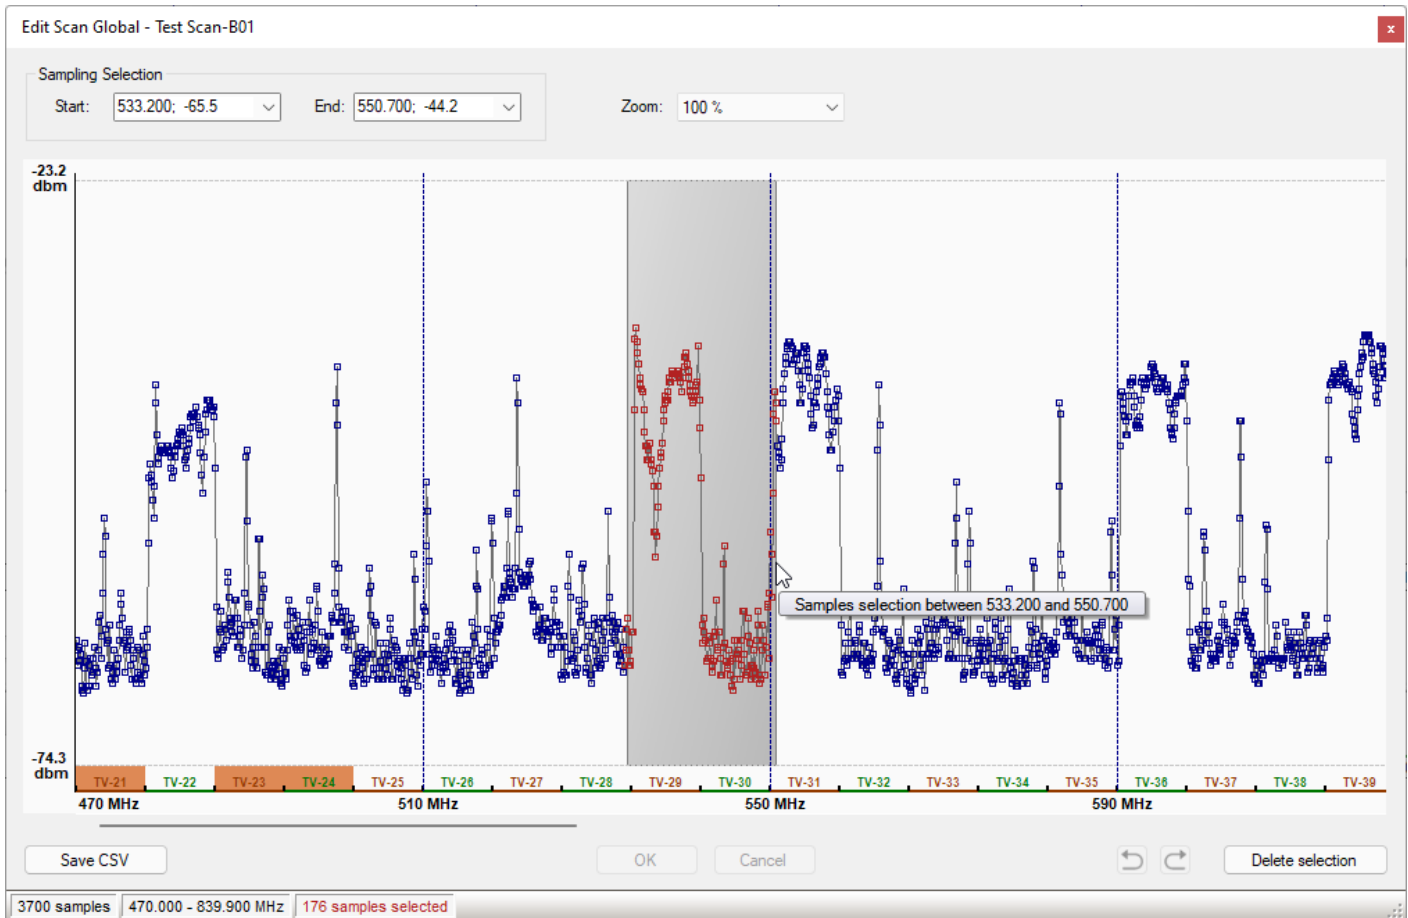

The editor has its own undo/redo system, the "Undo" command allows you to undo a series of operations:

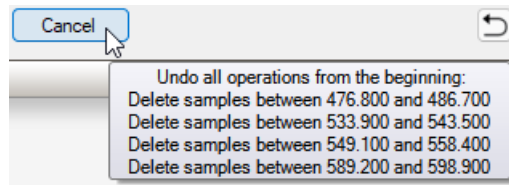


Changes can be undone until a new sample file is uploaded, regardless of changes made to the document.

The modified sample file can be saved separately, in EazyRF CSV format.


Reminder:

EazyRF reads the sample files and finds the minimum and maximum sample value (as well as the minimum and maximum frequencies). There is no magnitude scale for the sample values, EazyRF automatically adjusts to give a full-scale view of the sample values. This can sometimes give unexpected results, let's take an example:

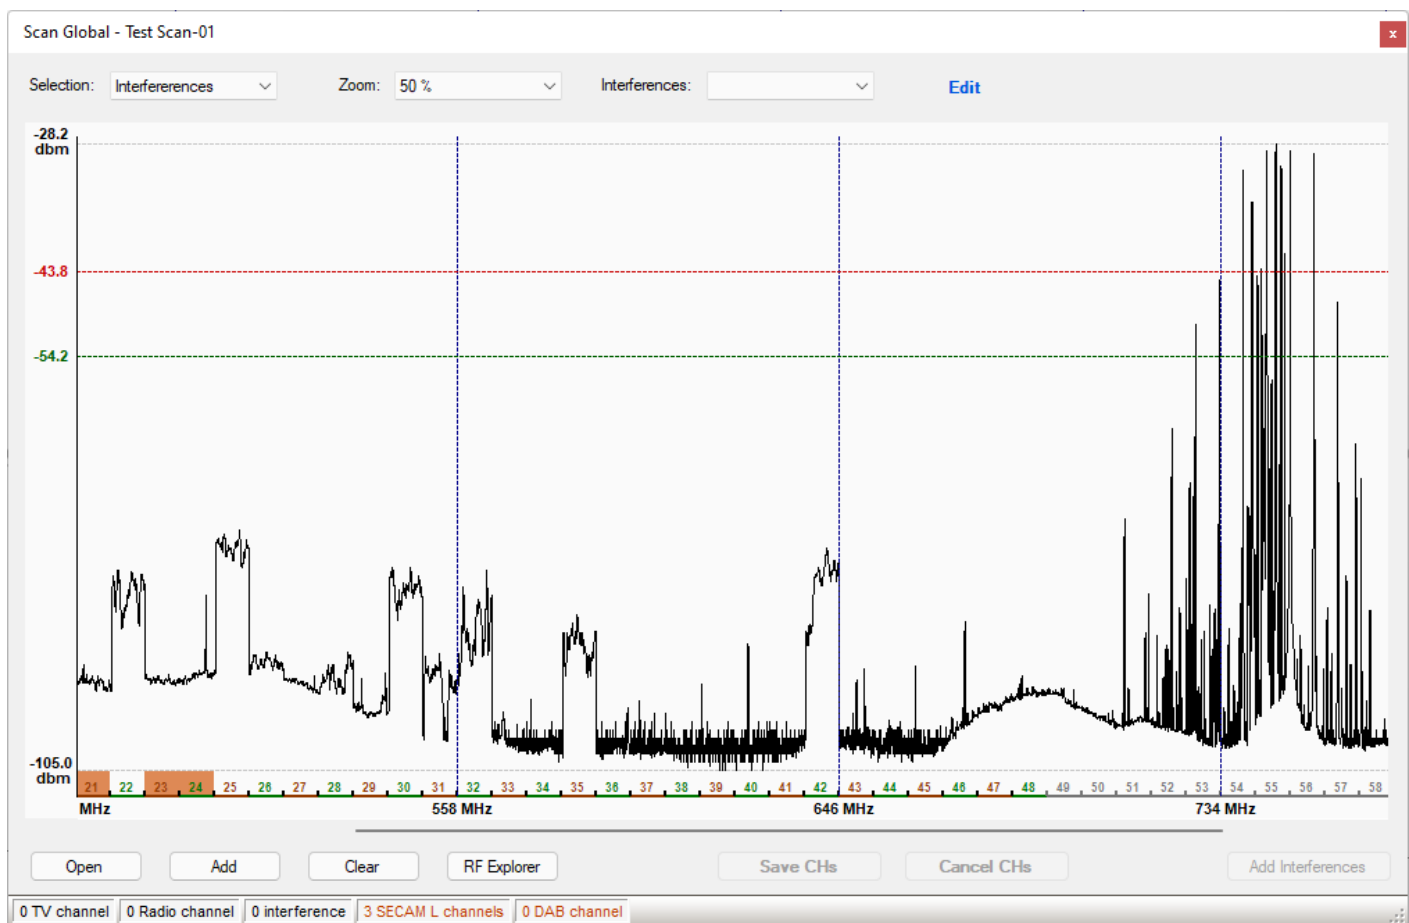


We see that there is a lot of activity in the 710 to 770 MHz range, as this part of the spectrum is no longer accessible for our needs, let's try to erase it to see the difference. Before proceeding, take note of the values for the maximum

level (-28.2 dbm), minimum level (-105.0 dbm), and interference detection (-43.8 dbm) and TV channel detection (-54.2 dbm) thresholds.

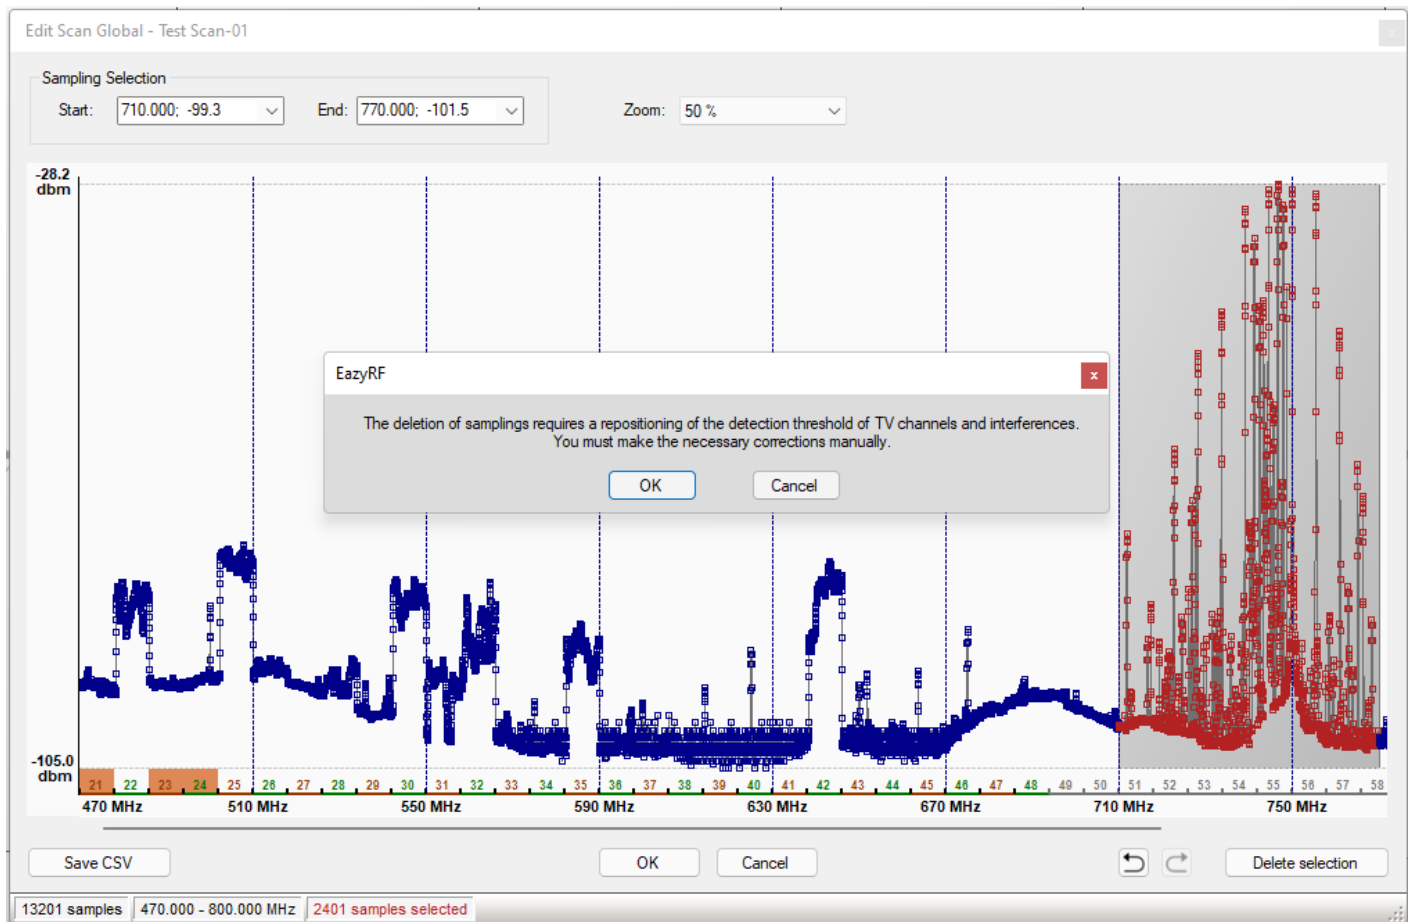

First of all, EazyRF advises us that this change will cause a repositioning of the detection thresholds of TV channels and interference. Let's look at the result to understand:

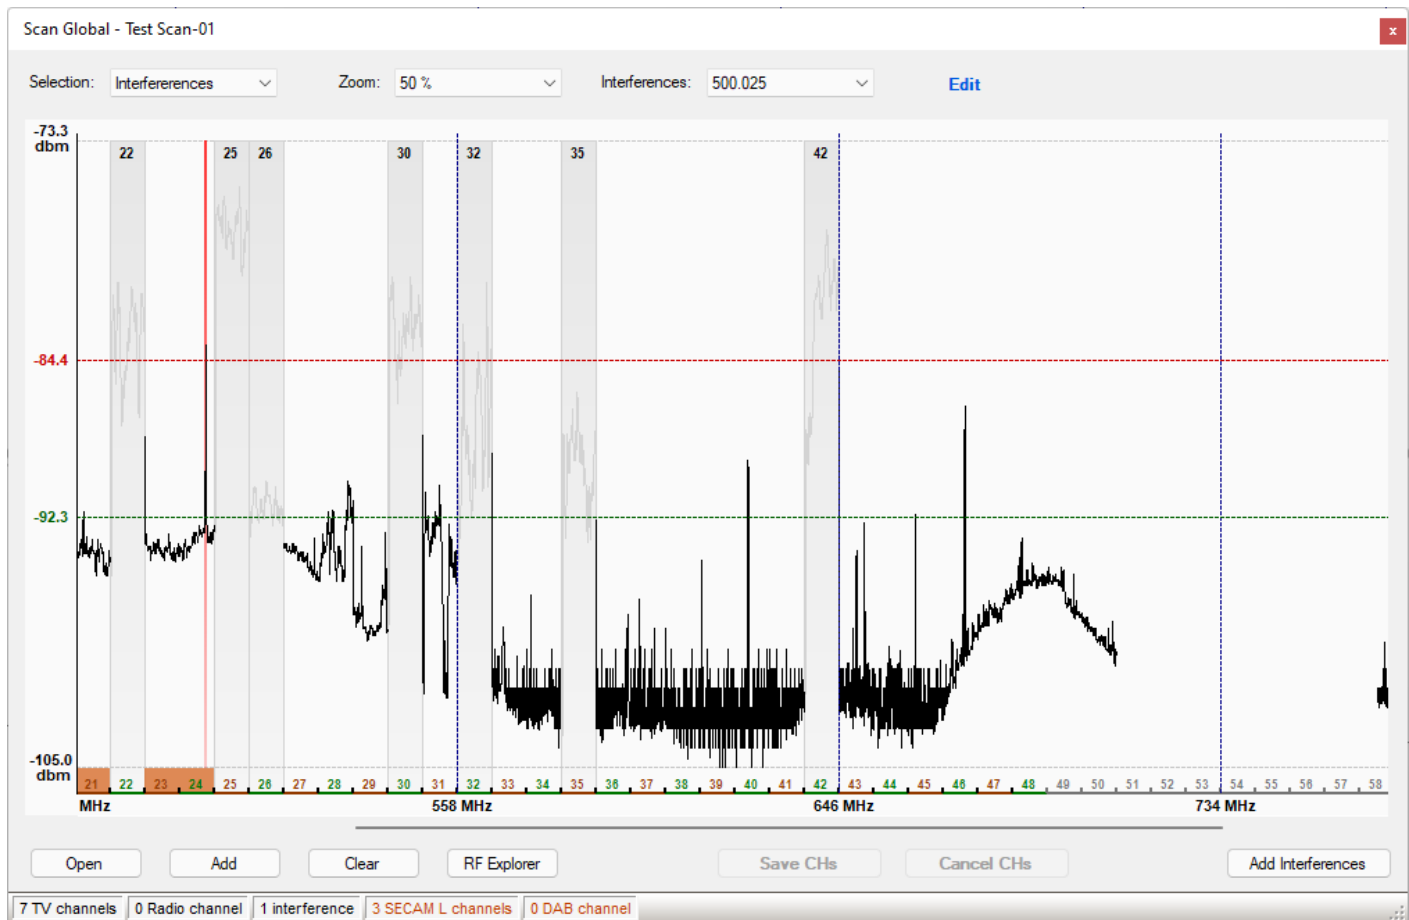

Minimum and maximum sampling values are now -105.0 and -73.3 dbm. It goes without saying that the old detection thresholds, i.e. -43.8 for interference and -54.2 for TV channels no longer make sense, they are higher than the new maximum value -73.3 dbm. In this case, EazyRF proposes values based on a percentage of the sampling extent, i.e. 40% for TV channels and 65% for interference.

This change in the scope of the sampling values is major, it goes without saying that such a modification in an already configured environment is not desirable. This is a change that must be made at the start of the configuration because all the frequency calculations of devices that depend on certain sampling levels will no longer have any meaning, or even worse, will be erroneous.

N.B. Sampling values in dbm or dbu do not really matter but should not be used together.


5.6.2 RF Explorer

The RF Explorer scanner can be managed by EazyRF. EazyRF can open .rfe files created by RF Explorer, as well as files exported in .csv format (single signal or cumulative).

The RF Explorer (or PLUS) do not allow managing a range of frequencies with precise sampling, only 112 samplings for a given range is allowed.

To overcome this constraint, EazyRF uses a public library to communicate with RF Explorer directly (RFExplorer-for-.NET). Thanks to the developers.

Here is this tool:

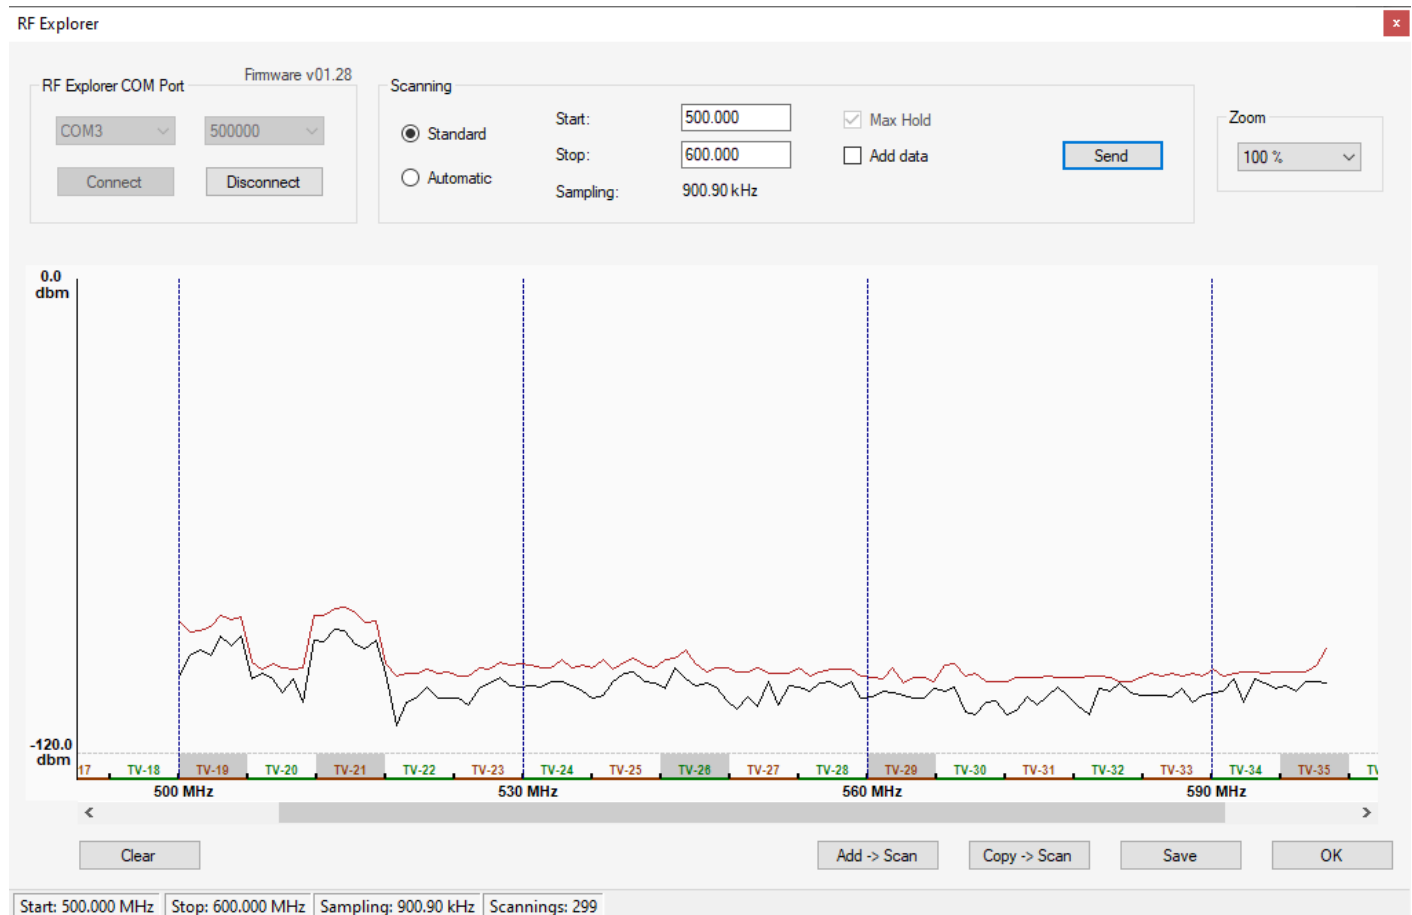


At launch, EazyRF automatically connects to the first RF Explorer connected to a USB port. The communication is done by serial port at the speed of 500000 bits / sec (not modifiable).

Two types of scanning exist:


This is a close-up of the 'Scanning' control panel. It features two radio buttons: 'Standard' (selected) and 'Automatic'. To the right, there are input fields for 'Start: 500.000', 'Stop: 600.000', and 'Sampling: 900.90 kHz'. Further right are checkboxes for 'Max Hold' (checked) and 'Add data' (unchecked), followed by a 'Send' button.

Standard scanning is the classic operating mode of the RF Explorer. A start and stop frequency are set and RF Explorer determines the sampling value. RF Explorer uses 112 samplings over the defined frequency range. In fact, it is 111 steps, so for a range of 100 MHz, we obtain a sampling of 900.90 kHz.

This is not a sufficient precision. EazyRF has therefore created an automatic mode of operation to define the sampling:

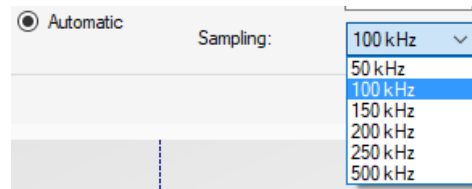

From the "Start" and "Stop" values, EazyRF reprograms RF Explorer in frequency intervals to obtain the desired result. Therefore, for a 500 MHz to 700 MHz scan at 100 kHz sampling, RF Explorer must be reprogrammed 18 times, from 500.000 MHz to 511.100 MHz for a first reading, then from 511.200 MHz to 522.300 MHz, and so on. The result:

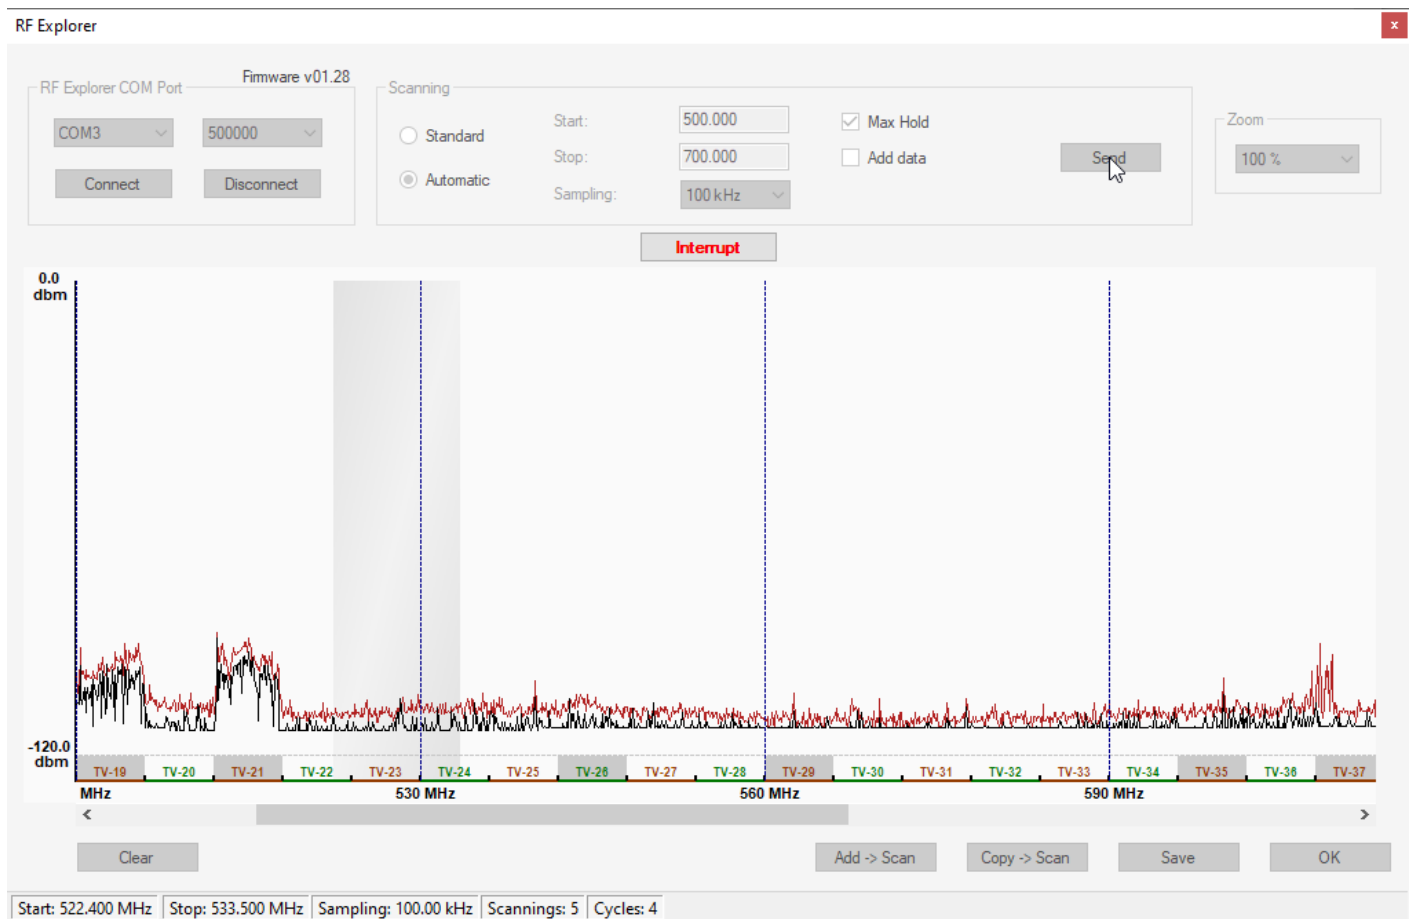


After having defined the sampling frequencies, it is necessary to launch the operation by the command "Send".

EazyRF is monopolized by this operation and you must terminate it with the "Interrupt" command:

Interrupt

At this moment, you get:

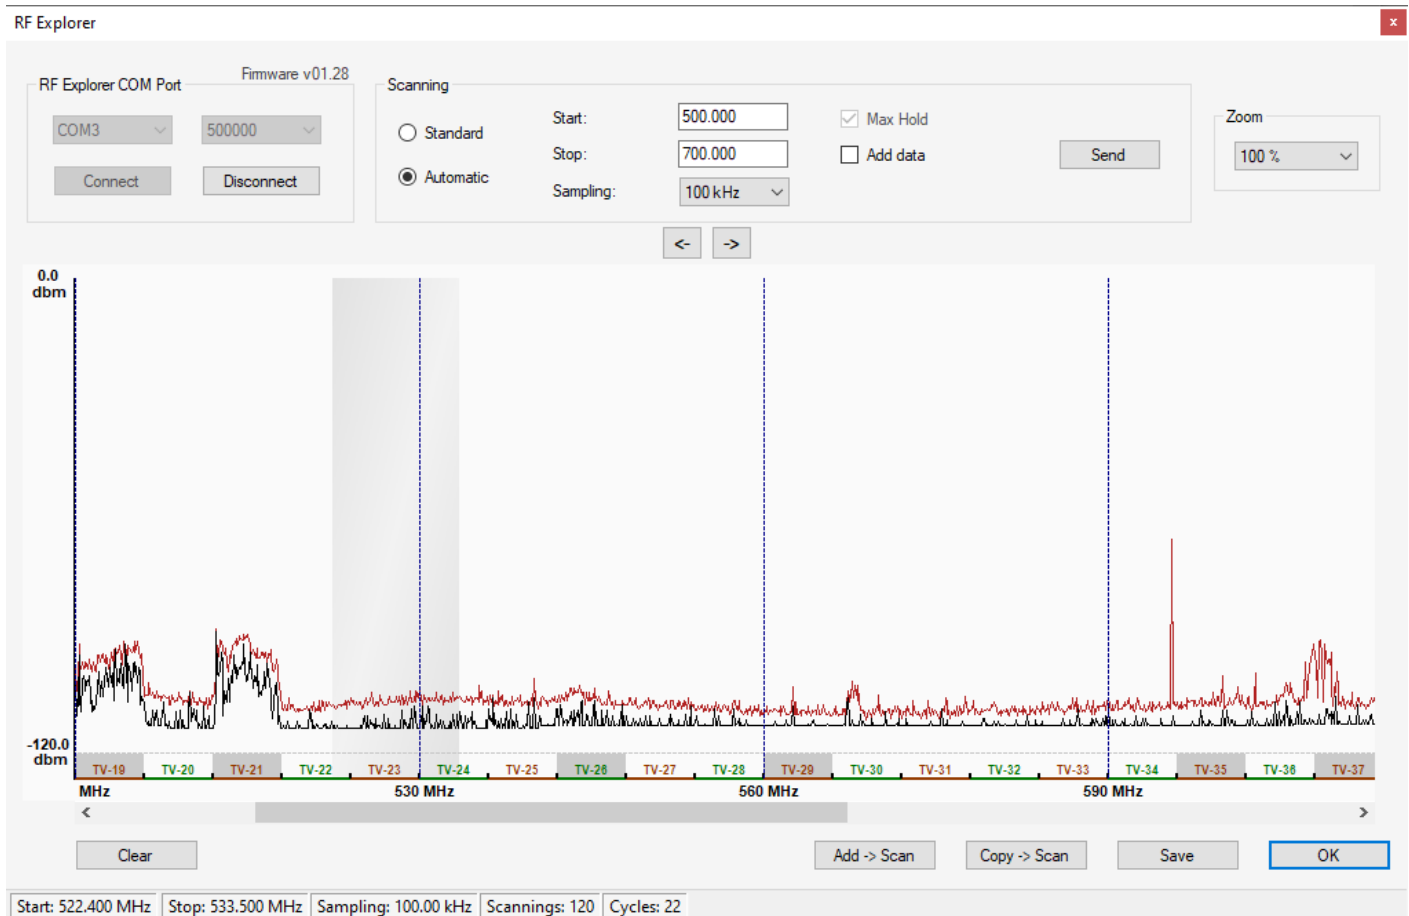


The commands:



allow you to move forward or backward manually from one sweep section to another.

The "Zoom" command allows you to enlarge or reduce the display.

Finally, the commands at the bottom of the window:

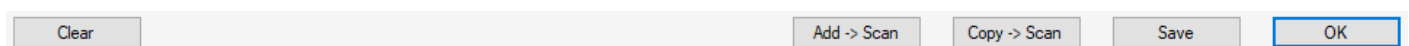


"Clear" resets the data, display and samples.

"Add -> Scan" allows to add the sampling to the previous module ("Scan"), while the command "Copy -> Scan" erases the data of the "Scan" module and replaces it with those of RF Explorer.


"Save" creates a data file in CSV format.

5.7 Scans File Manager


The command:

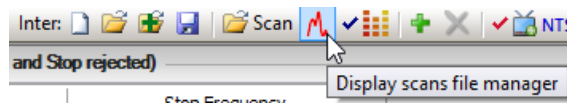

Display the scans file manager section below the details of the intermodulations.

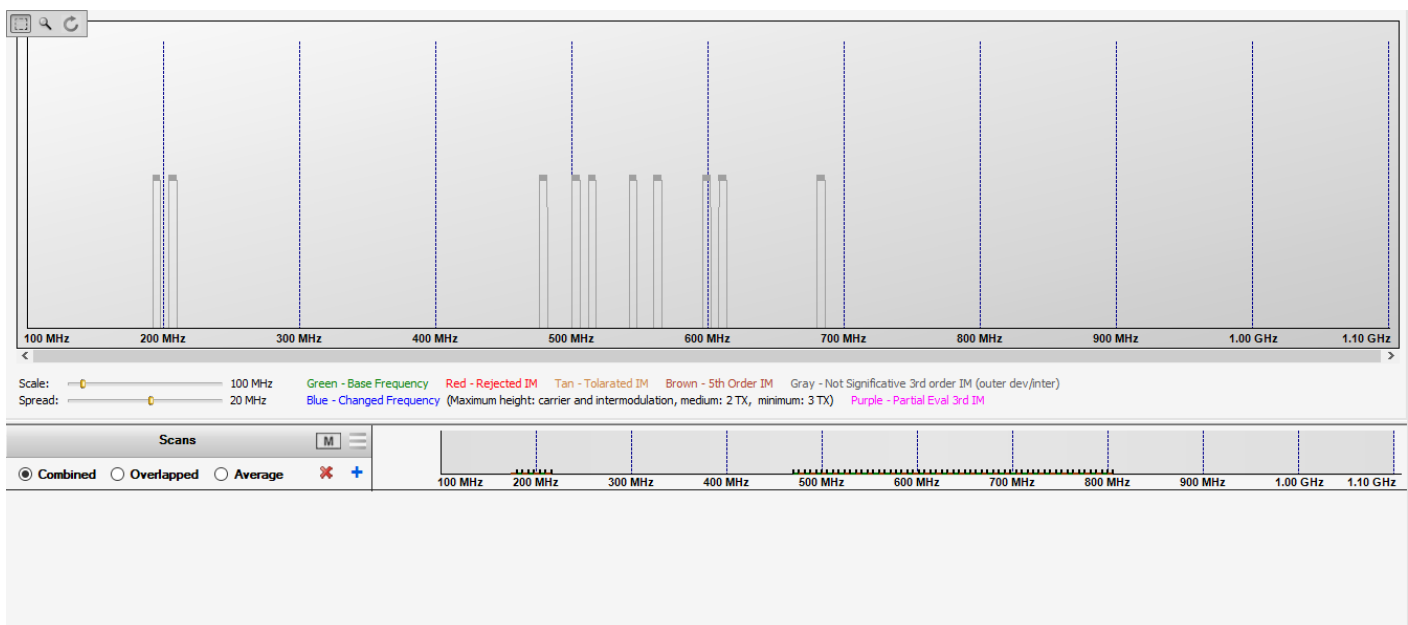


Adding scans files is done with the command '+':




The 'X' command erases the files list.


Let's take an example:

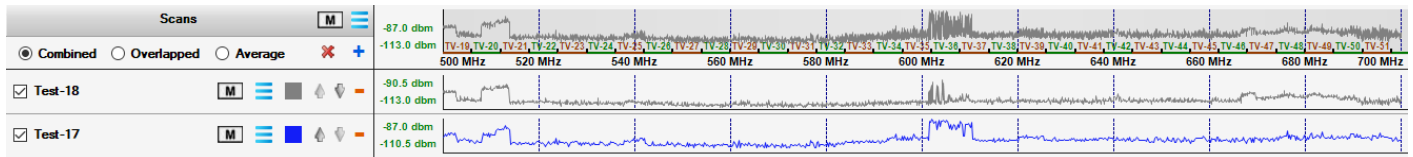

The upper part of the scans displays the combination of files, either in "Combined" mode, as above, or "Overlapped" mode:

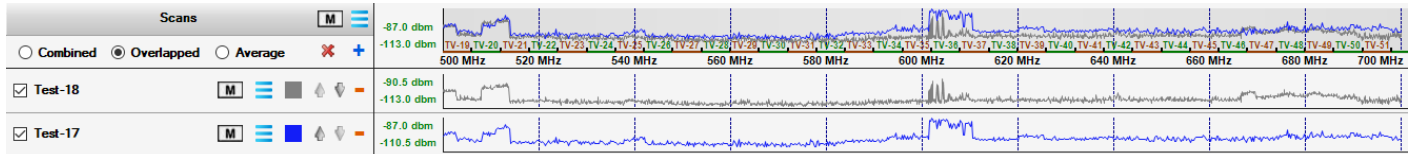


Or, in 'Average' mode:

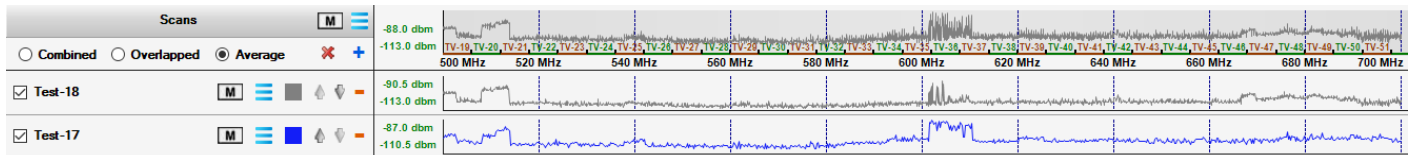


In 'Combined' mode, only the peak value is displayed, whilst in 'Average' mode, the average of the values is displayed.

Let's take a closer look at the file list:

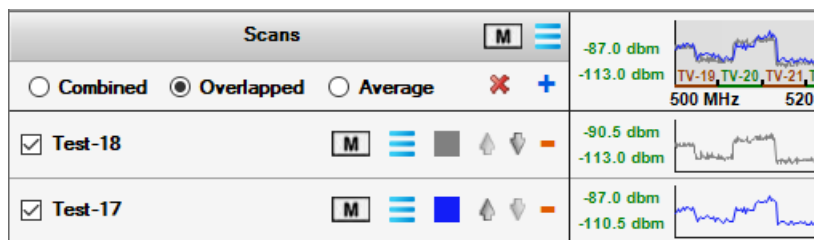

Each item in the list can be activated or deactivated in the global section. The command '-' allows you to delete a file. The order of the files can be changed with the arrows "Up" and "Down". The color of the trace can also be changed.

The menu command allows you to manage the integration of these files into the system:

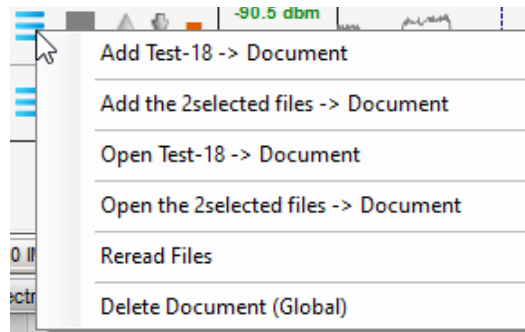


As in the standard scans manager, the "Add" command adds a file to the document, while the "Open" command erases the data before adding it. It is allowed to add all selected files simultaneously.

The "Reread Files" command allows you to read files again if changes have been made.

The "Delete" command deletes the data present in the document.


Finally, the command 'M' for 'Monitor' allows you to add one or more files overlapped on the global or detailed view:

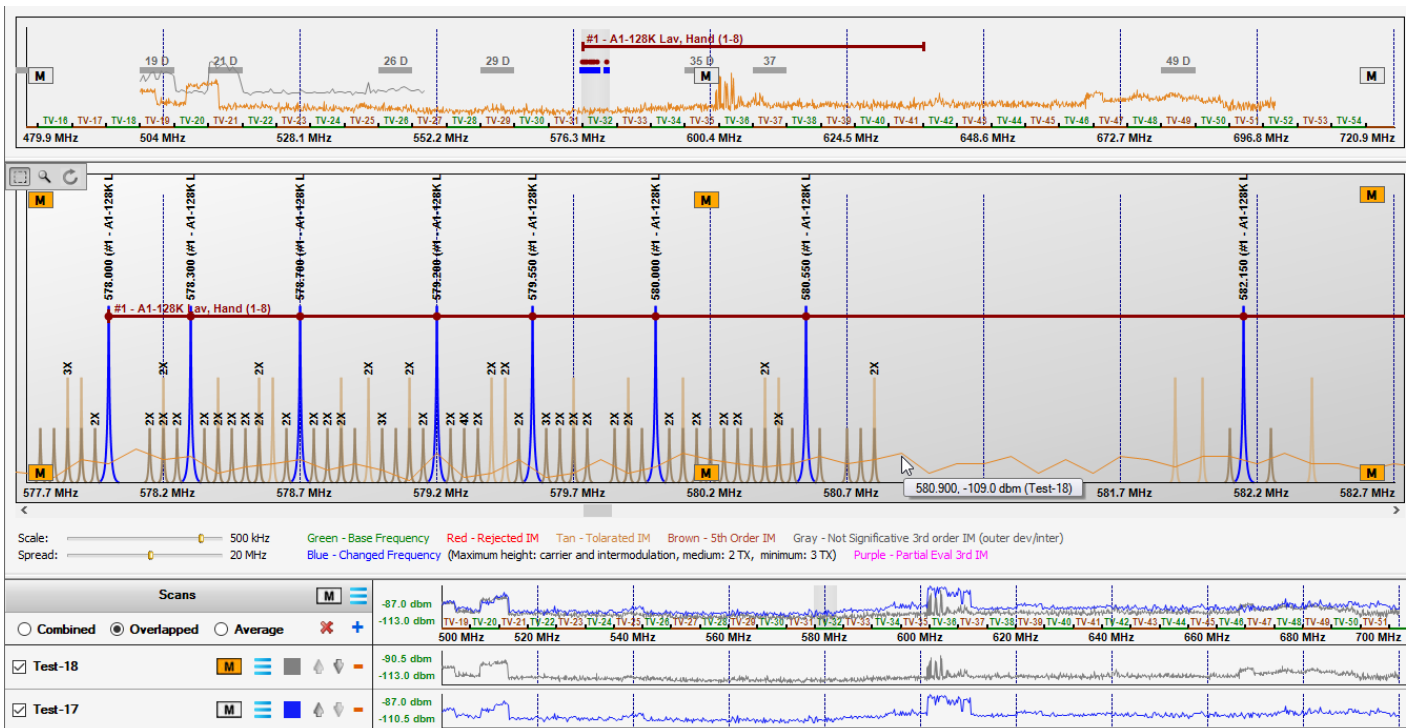

The objective is to compare a more recent scan compared to that integrated into the document. In addition, you have access to all the functions of moving, zoom-in, etc. Flashing orange lights indicate that you are in 'Monitor' mode and that the data displayed are not all present in the document. A single click on the flashing indicator close the preview.

A double click on the 'M' button on the file list allows to select or unselect all the files.


The combined part of the scans has its own menu:

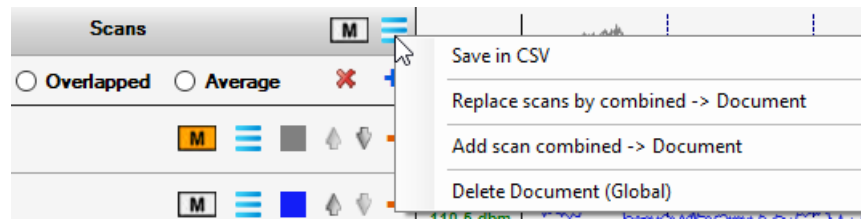

It is thus allowed to save the combination of samplings or to integrate it into the document. The save command is not allowed in 'Overlapped' mode.

You can also preview the result with the 'Monitor' command.

Finally, the upper part of the sampling area displays the space occupied by the detailed area (as in the overview):

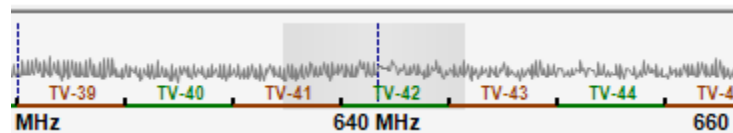

A click in the band of any scan allows to move the detailed area on this region of the spectrum.

5.8 Print

It is possible to print the graphical representation of global and detailed frequencies area with intermodulations. The printing is done in full screen portrait or landscape mode (by default) depending on the desired paper source. The values of frequencies of start and stop are the same, but the graphical representation is adjusted to the size of paper and the application window size does not influence.

5.9 View detachment to a window (2nd screen)

The "Intermodulations" view can be detached from the EazyRF application towards a window on a 2nd screen or overlayed with EazyRF if a 2nd screen is not connected.

To activate this function, double-click on the name of the view:



The name of the view is displayed in red to indicate that it is detached:



To return to standard mode, either close the window or redo a double click on the name of the pane (in red).

The "Frequencies Plan", "Spectrum View" and "On Tour" views can also be detached.

If more than one view is detached, a simple click on the name of the view will bring it to the foreground.

Obviously, the content of the detached views is synchronized with the changes made no matter where they are made.

5.10 Frequencies spectrum manager

The frequencies spectrum manager is called by the last command in the detailed intermodulation section:



Which give:



470-614 MHz Spectrum

x

Le Grand Show

Régis Banville

December 03, 2022

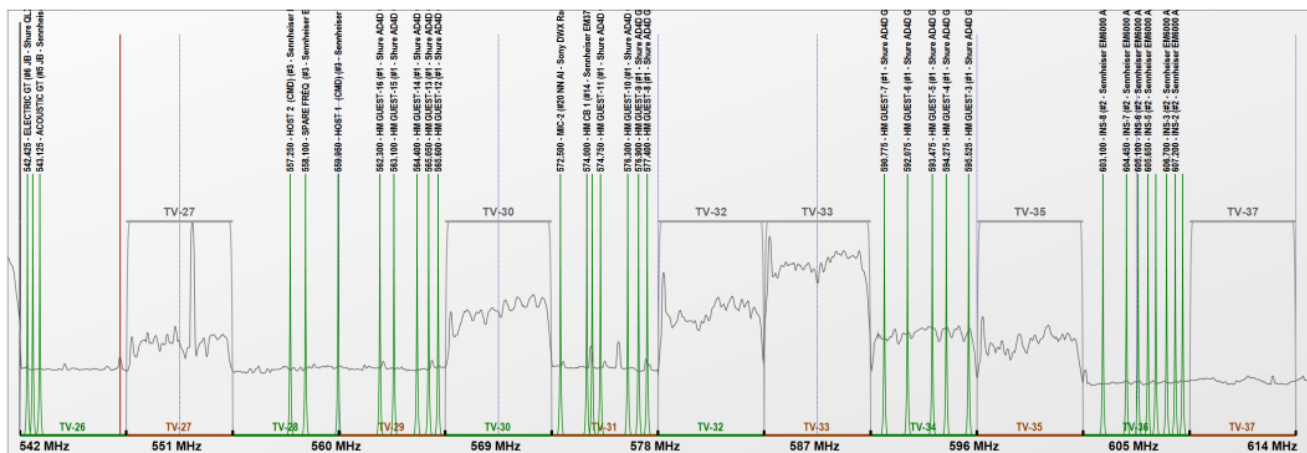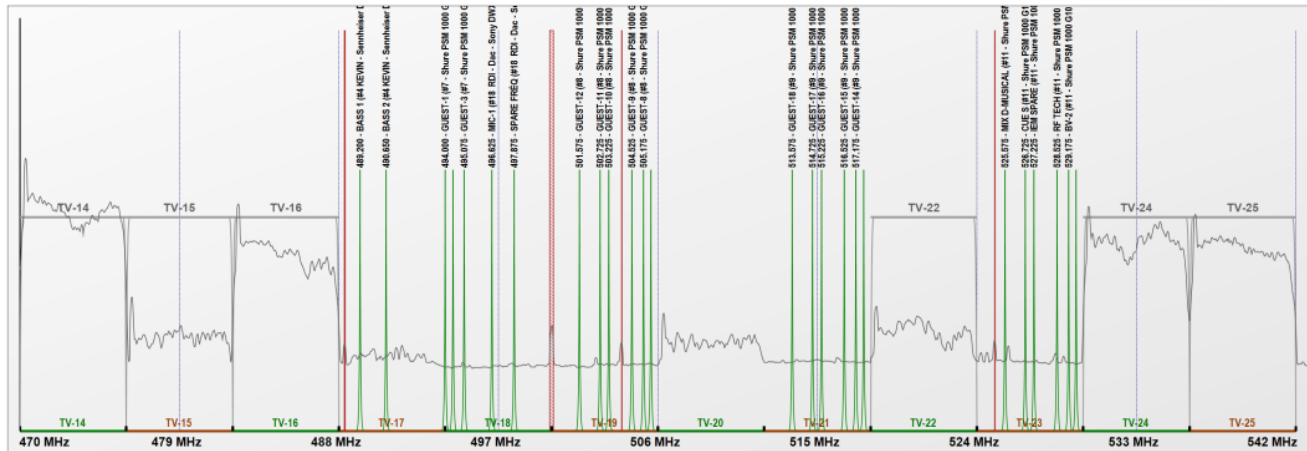

470-614 MHz Spectrum - Space occupied by 12 TV channels: 72 MHz. With safety margins: 81.6 MHz on the 144 MHz available, i.e. 56.7 %.

☐ Duplex Gap

Print

Save as PDF

Copy Clipboard

The spectrum displayed corresponds to the frequency band reserved for commercial use between 470 and 700 MHz. The “Duplex Gap” option expands the band to the permitted region at the top.



In North America, the base area available is 470 MHz to 614 MHz with a duplex gap of 614 to 616 MHz and another of 653 to 663 MHz. EazyRF displays the 470 MHz to 668 MHz zone with the duplex gap activated.

470-614 MHz Spectrum

Le Grand Show

Régis Banville

December 03, 2022

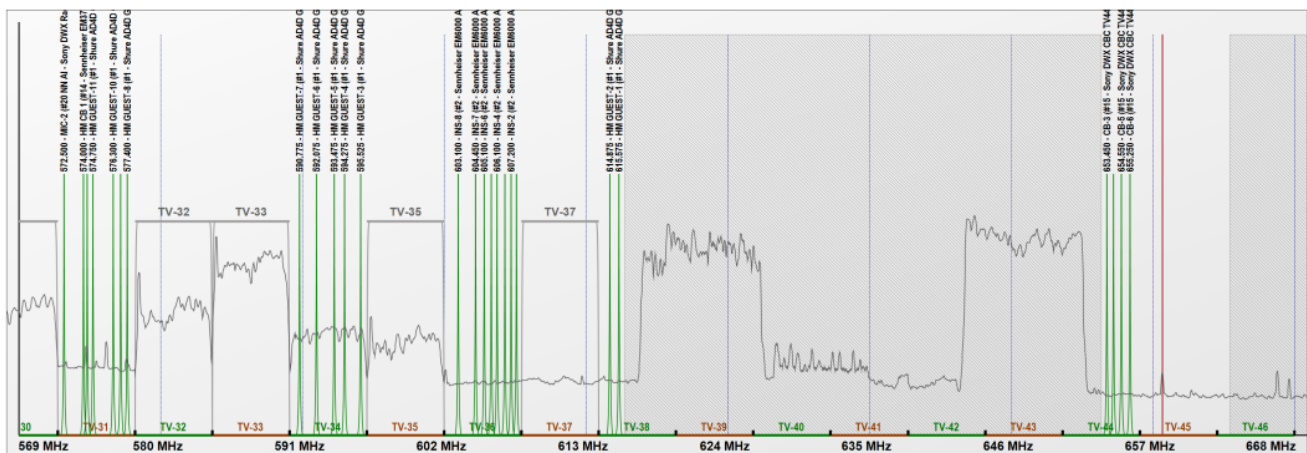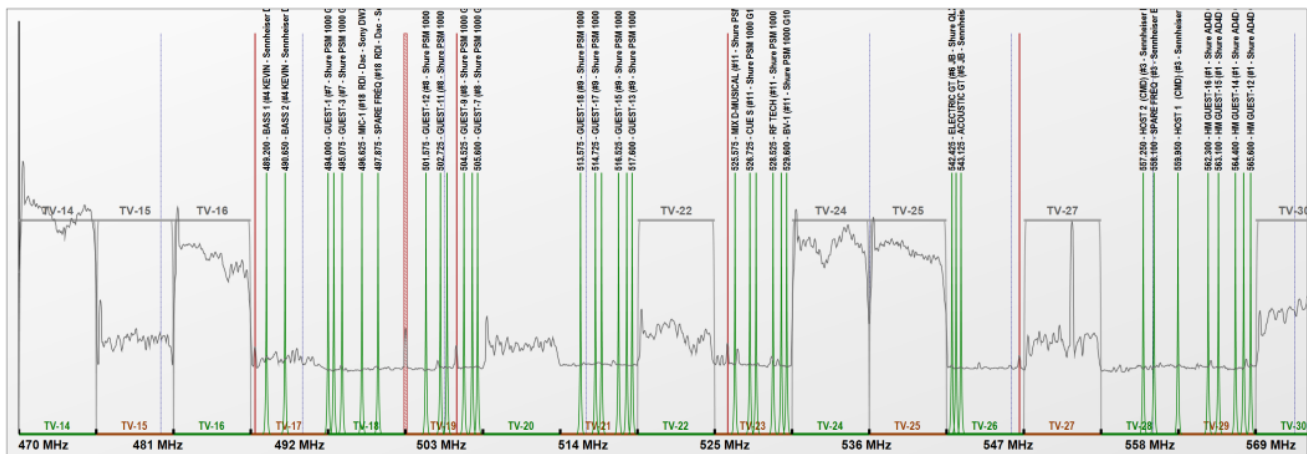

470-614 MHz Spectrum - Space occupied by 12 TV channels: 72 MHz. With safety margins: 81.6 MHz on the 144 MHz available, i.e. 56.7 %.

☒ Duplex Gap


Print

Save as PDF


Copy Clipboard

In Europe, the base area available is 470 MHz to 694 MHz with a duplex gap of 822 to 830 MHz.

470-694 MHz Spectrum

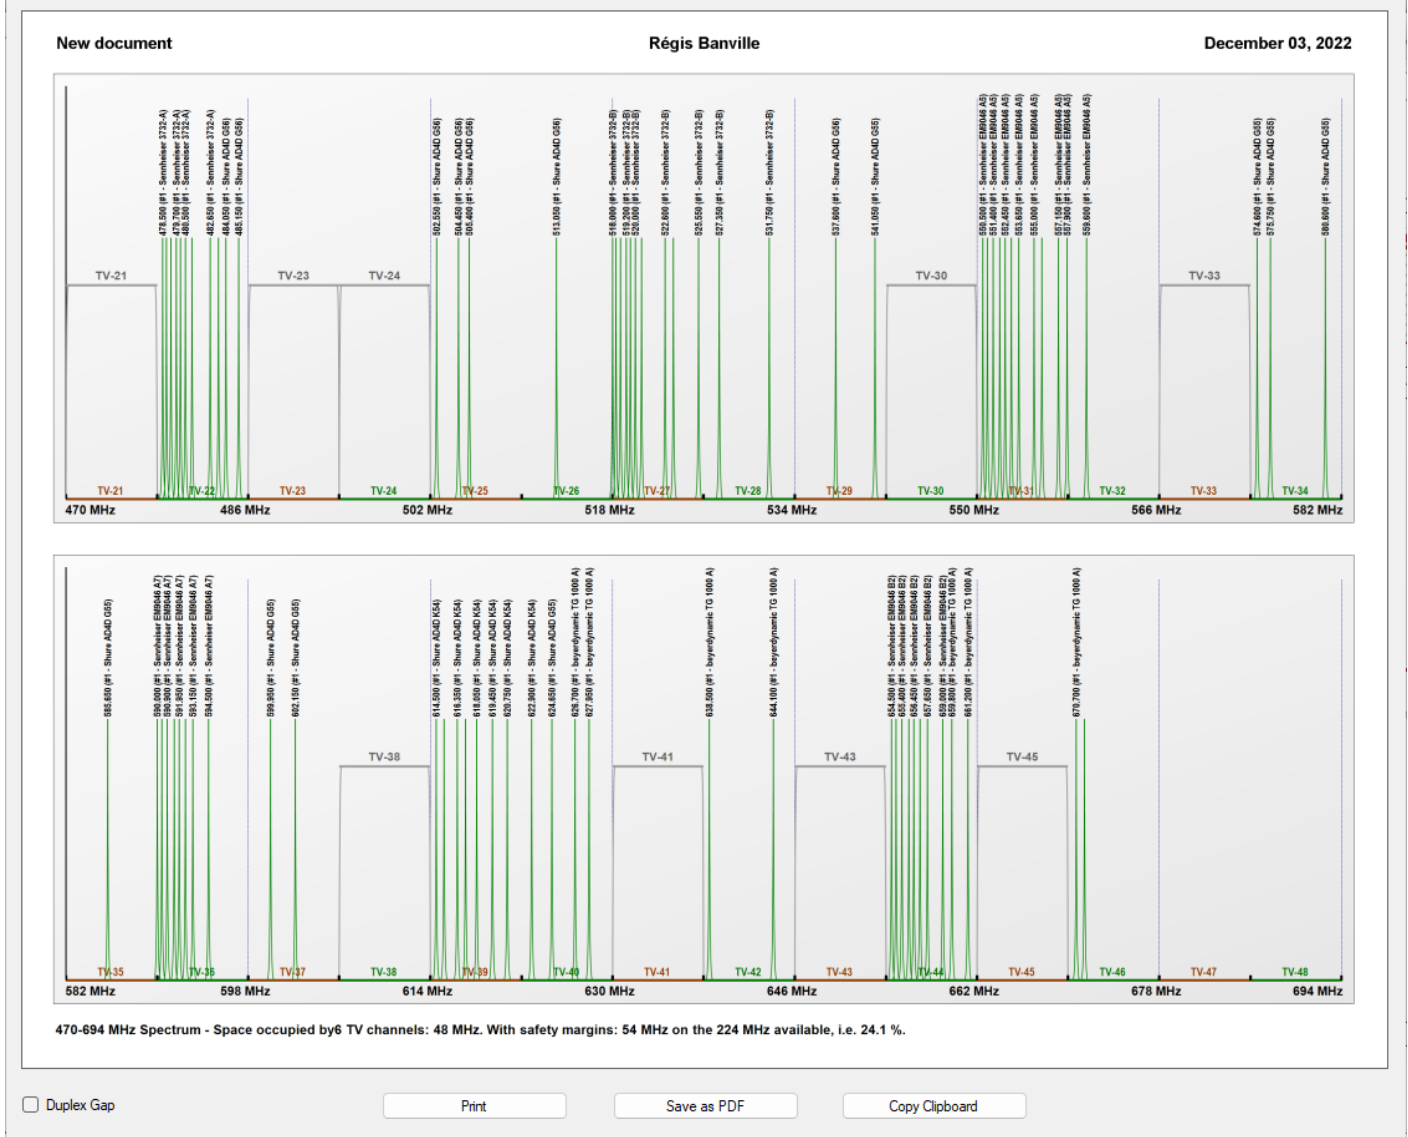

EazyRF displays the 470 MHz to 854 MHz band with the duplex gap activated.

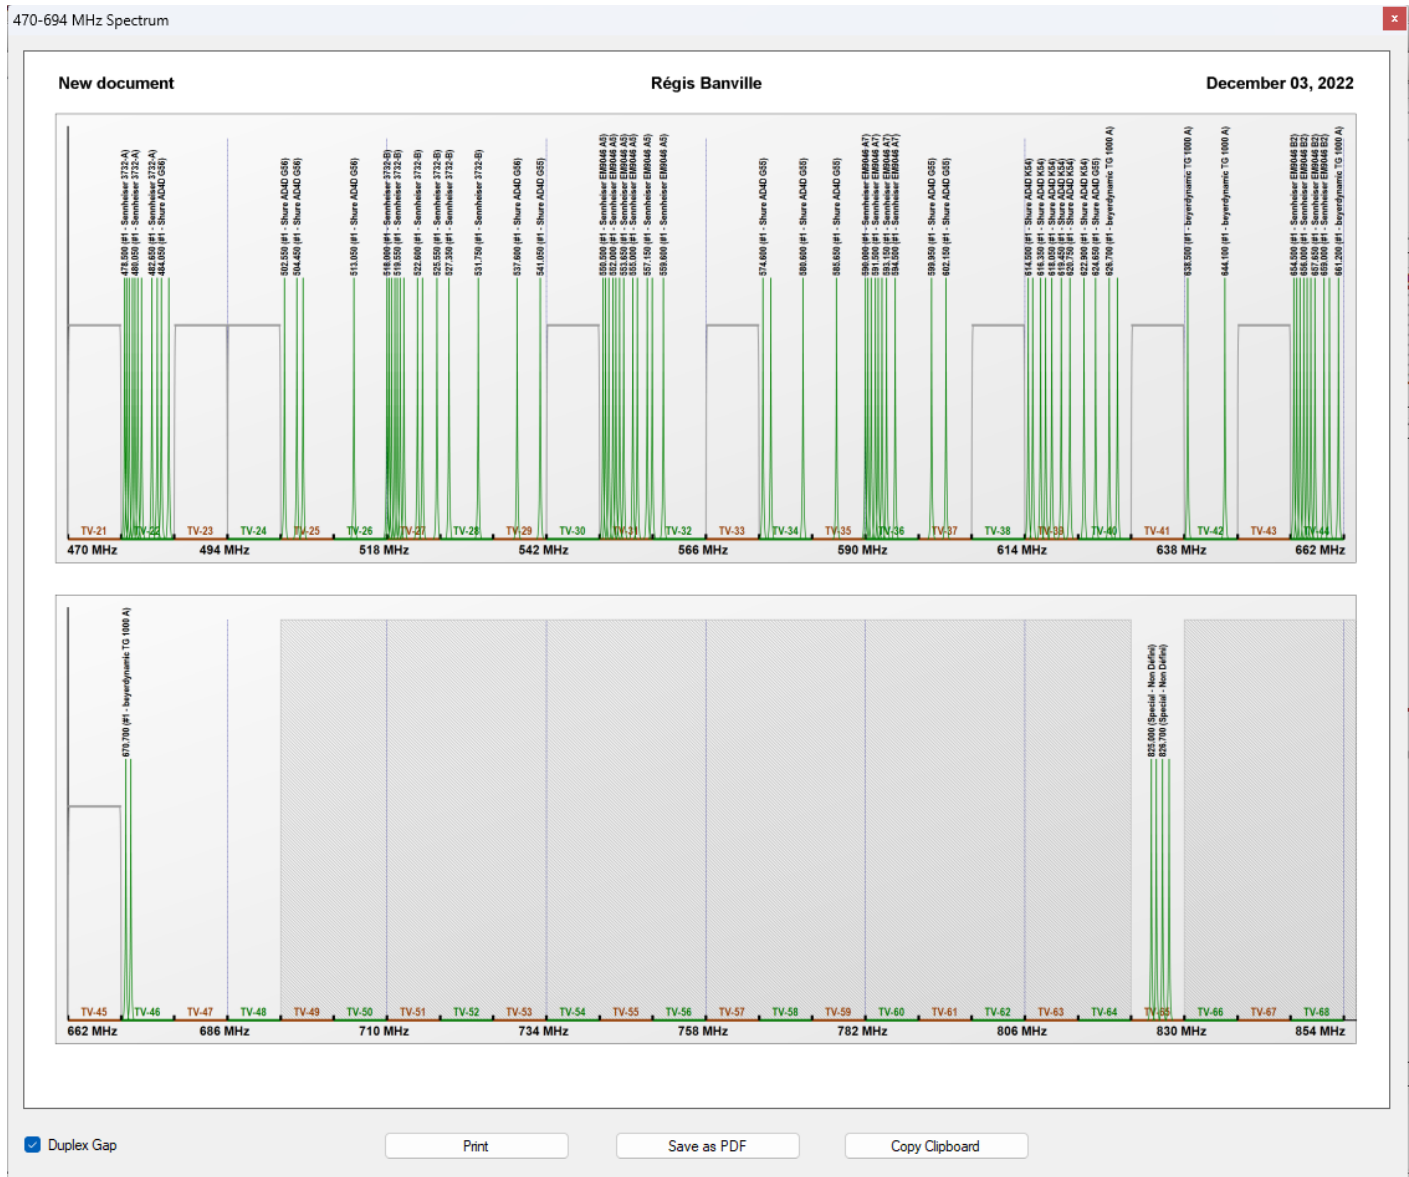

The purpose of the module is to illustrate the entire RF space by spreading the frequency range over two sections in order to be able to print it on a single page or do the viewing without moving.

The window size adjusts to the resolution of the Windows desktop. The image shown is only a preview of the actual image. The image can be printed, saved in PDF format, or copied to the clipboard for use with other software.


The basic size corresponds to the letter paper size used in America, which is 8.5 in by 11 in. This size only serves to illustrate a potential rendering. When printing, the size used is that of the paper of the selected printer.

The paper size used for saving in PDF format is that defined for the "Microsoft Print to PDF" device which allows high resolution (requires Windows 10 or higher).

EazyRF uses a high-resolution representation, 300 dpi, for detailed printing. The computer screen can only display lower resolution by using a reduction from 300 to 100 dpi.

5.10.1 Module detachment to a window (2nd screen)

By double-clicking on the title of the spectrum window, you can detach the module and display it either on a 2nd screen or in a floating window:

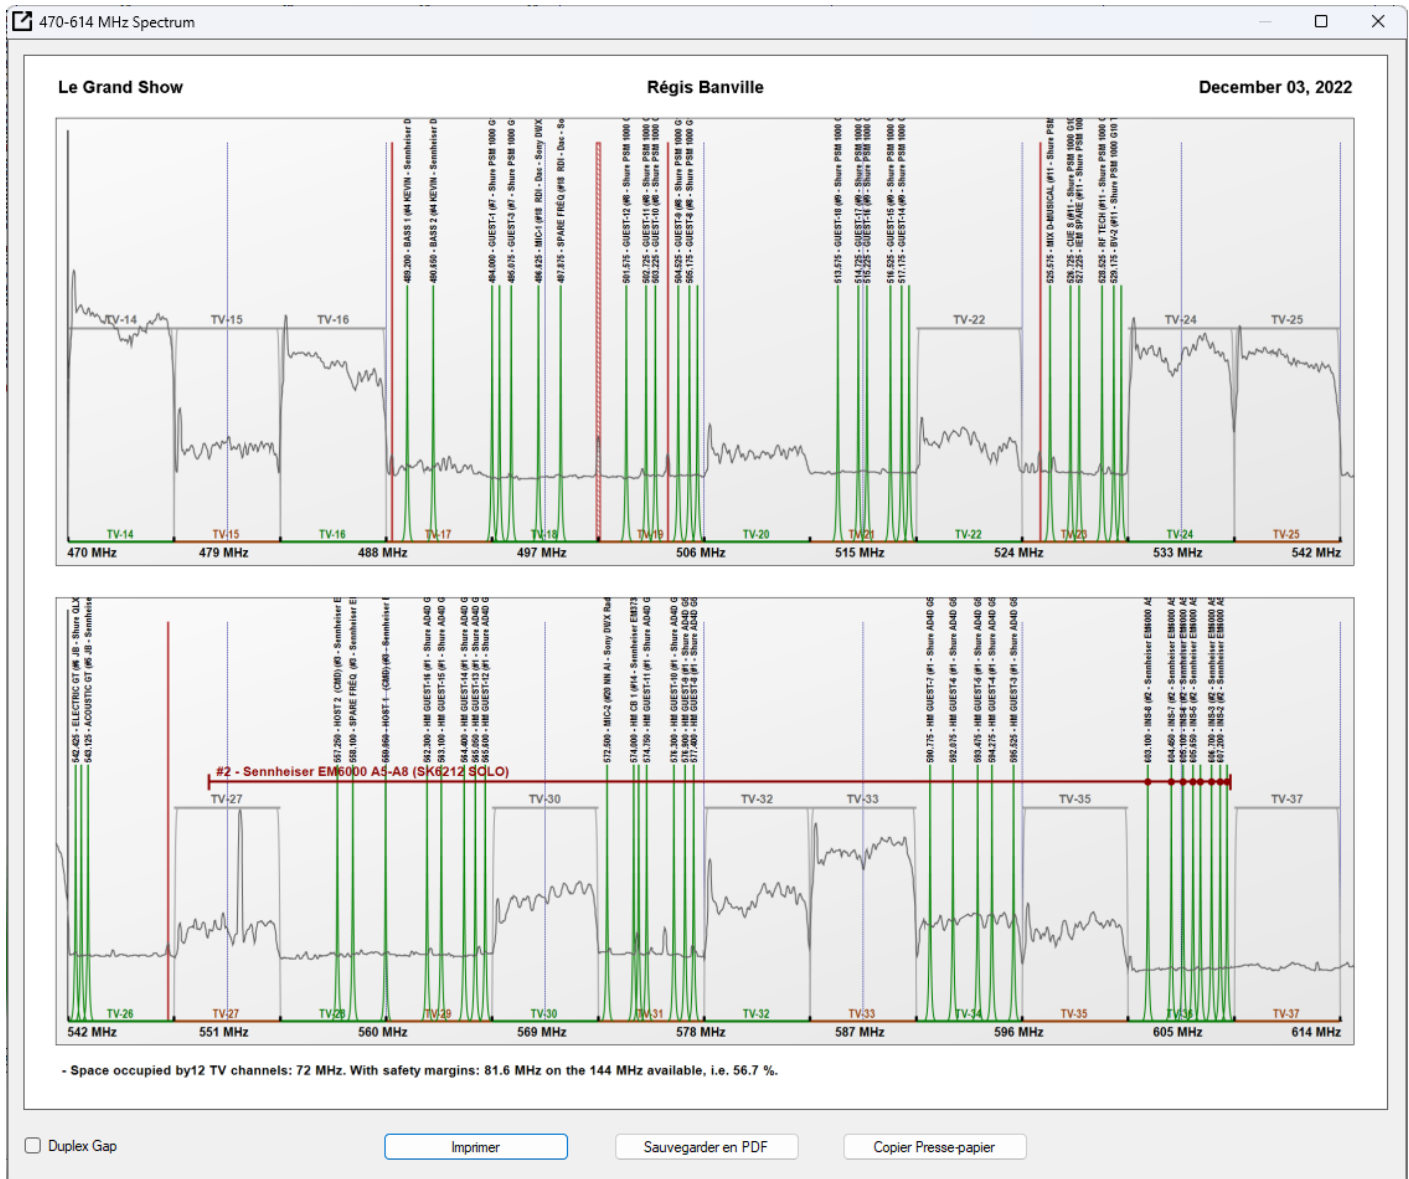


The window now displays the content of the spectrum continuously and no longer in static mode. The window is variable in size. The print is always made from the paper size, only the copy to the clipboard corresponds to the window size in high resolution.


This module does not allow any selection or modification of the document, it is only a dynamic viewing module.


6 - Spectrum View

The "Spectrum View" pane displays the spectral space occupied by the devices, the TV channels and the area of rejected frequencies. Here is an example:

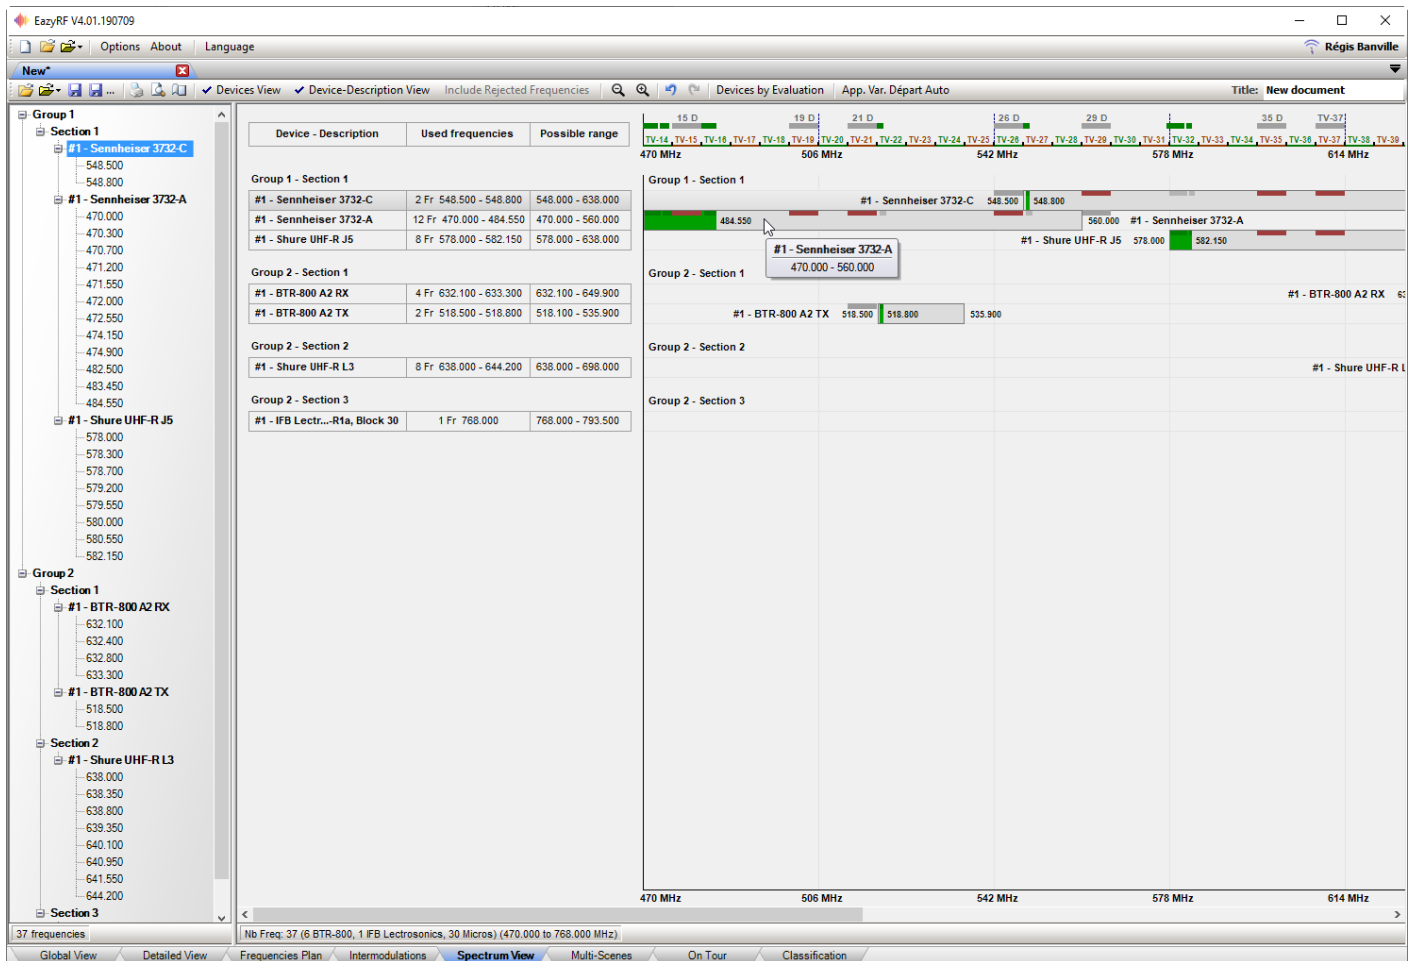

The list of devices can be retracted as the list Device-Description to leave it up to the spectrum:

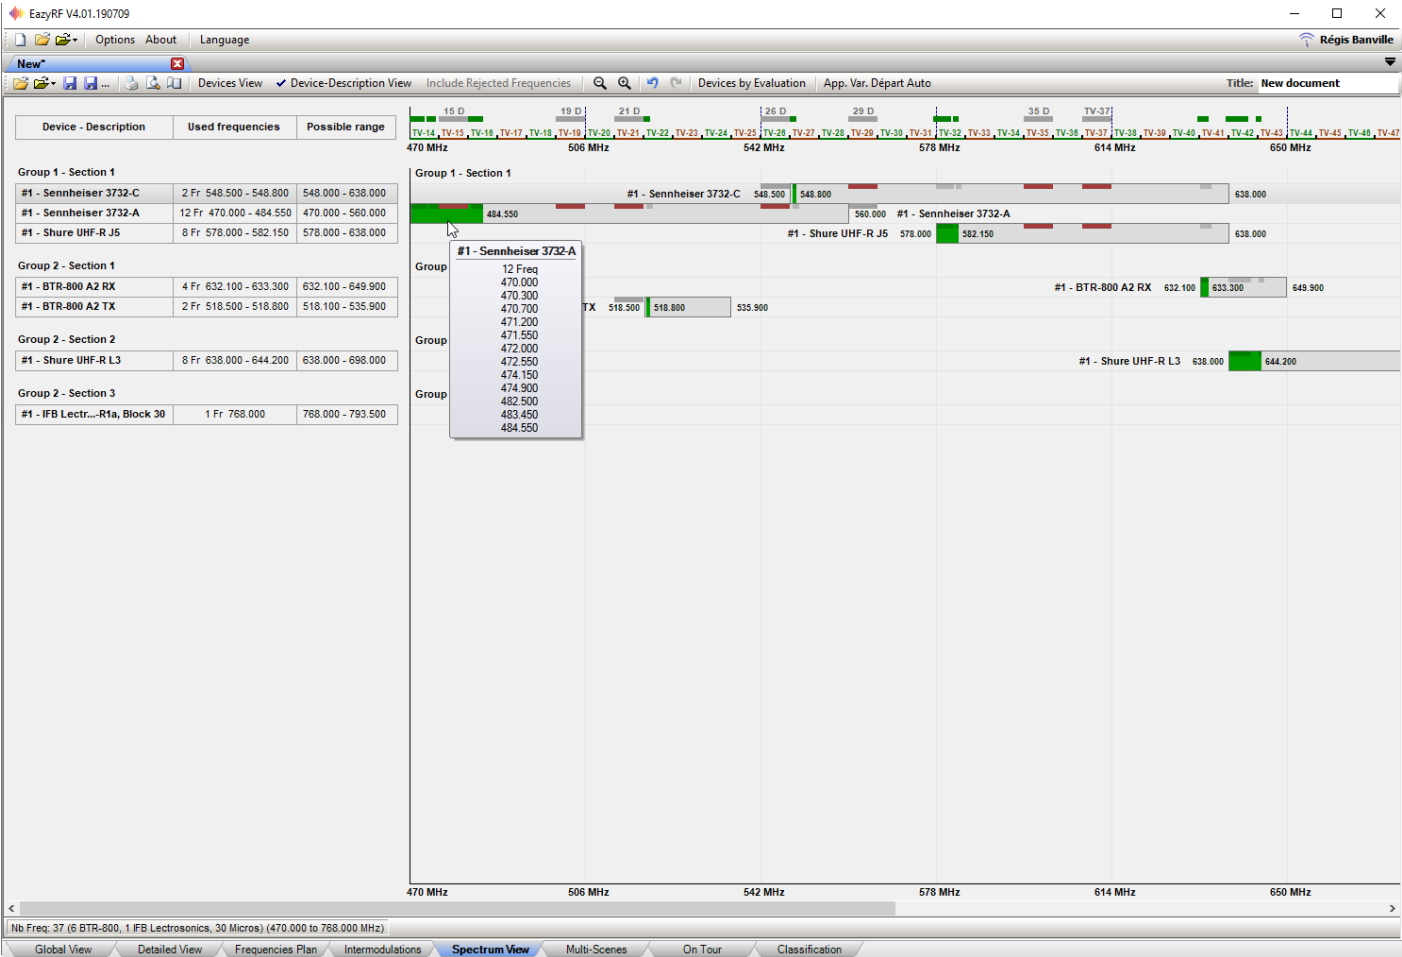

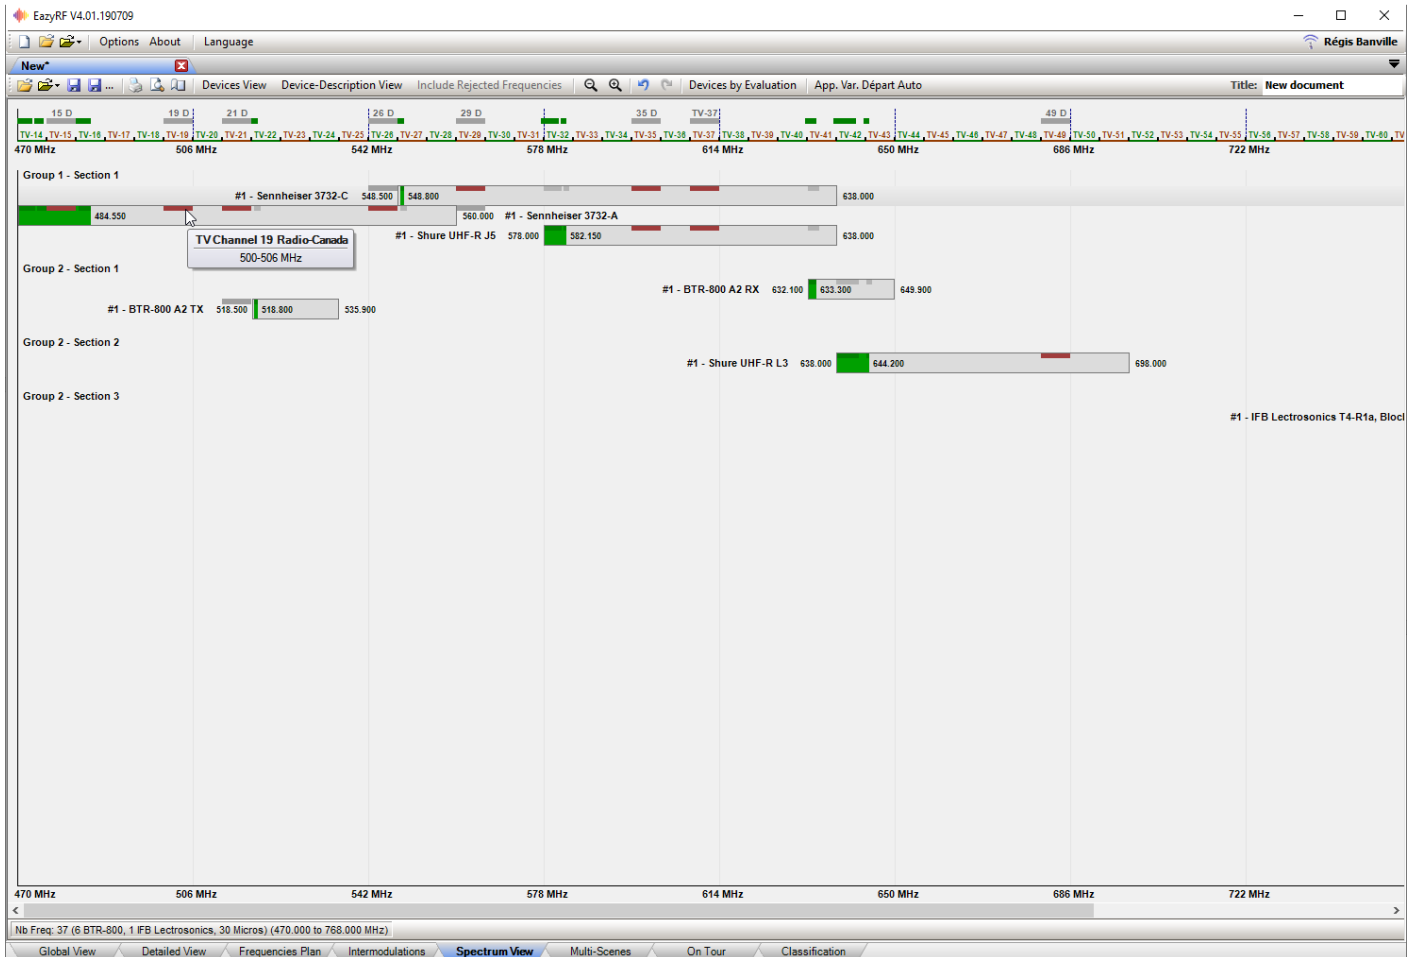

All video standard (ATSC, PAL and SECAM) use the frequency 470 MHz for the start of the UHF region. So the alignment point is 470 more or less usable frequencies (start and stop of a device) or TV channels with the rejected reserved area zone (optional). The display area is adjusted automatically (the TV channels below 470 MHz are ignored if no device uses these frequencies).

The display options are global e.g. they are saved as master EazyRF parameters and not with the document.

This component is not an editor, so no changes are allowed (only zoom in, zoom out). Use the Devices pane to locate a Device or Group/Section in the field of detailed view (there is no selection).

The printout includes detailed part, adjusted according to the size of the paper and a vertical scale to ensure that all devices are displayed on a single page.

6.1 View detachment to a window (2nd screen)

The "Spectrum View" view can be detached from the EazyRF application towards a window on a 2nd screen or overlaid with EazyRF if a 2nd screen is not connected.

To activate this function, double-click on the name of the view:



The name of the view is displayed in red to indicate that it is detached:



To return to standard mode, either close the window or redo a double click on the name of the pane (in red).

The "Frequencies Plan", "Intermodulations" and "On Tour" views can also be detached.

If more than one view is detached, a simple click on the name of the view will bring it to the foreground.

Obviously, the content of the detached views is synchronized with the changes made no matter where they are made.

7 - On Tour

The component "On Tour" allows to prepare a plan of frequencies compatible for several cities simultaneously. What varies from one city to another? Obviously, these are the TV channels. This component allows for the management of a plan by adding the TV channels of several cities. Each city can be enabled or disabled as needed.

The presentation is a bit like the "Spectrum View," but the emphasis has been placed on the position of the TV channels in relation to the devices in the plan. Here is an overview:




The management of cities, channels and samples of each city is done by the editor:

SECAM - TV channels				Tv-21	Tv-22	Tv-23	Tv-24	Tv-25	Tv-26	Tv-27	Tv-28	Tv-29	Tv-30
Copy	Cities (3)	X	+	470	478	486	494	502	510	518	526	534	542
Combined	Reject Freq												
	Document												
	Marseille												
	Lyon												
	Paris												

You can add, insert, delete or move one or more cities simultaneously. In addition, these modifications are now part of the "Undo / Redo" manager. The selection can be moved.

By default, adding cities is done in non-active mode. With a new document, adding a city turns off the document's channels.

The "i" command allows you to add information about an event, date, time, address, contact, etc. (text zone) :

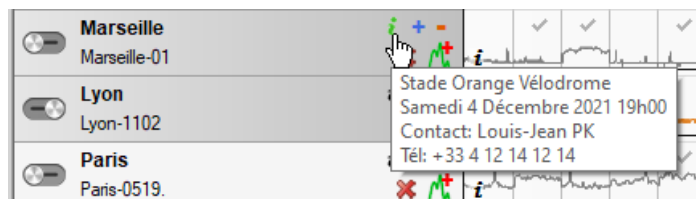

The "i" command is displayed in green if information is present. Just click on the "i" to call the editor:

Marseille

Informations

Stade Orange Vélodrome

Samedi 4 Décembre 2021 19h00


Contact: Louis-Jean PK

Tél: +33 4 12 14 12 14

OK

Annuler

It is possible to add a series of TV channels previously created and saved with the standard TV channels editor:

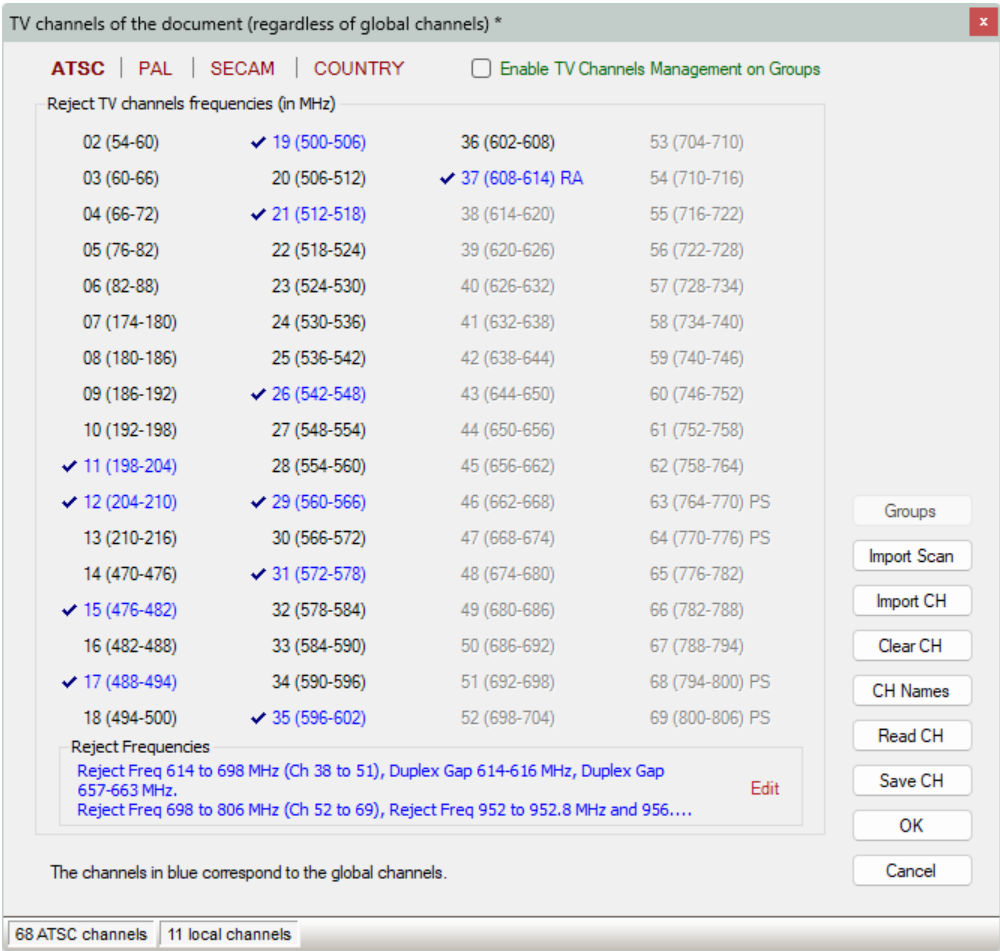

A command allows you to delete the list with its names. You must create and save each list by this tool. After adding a more than one city in the "On Tour", this tool is not available any more in the Global, Detailed and Intermodulations view. A message tells you to return to On Tour for editing channels.

If the channels of the document are activated document, the editor of channels works in a normal way. As against, if the channels of the document are disabled:



Then the editor no longer displays the channels of the document and so allows to create new cities or edit them. The result of the editing of a city is not illustrated in the lower part. You must remove the city and re-import it. Changes are not allocated to the channels of the document because they are inactive.

As EazyRF is multi documents and multi applications (launched more than once), it is still possible to launch a new document and create new cities if desired.

It is strongly recommended to add a name (description) for each channel, this allows to identify them more clearly:

Tv-21	Tv-22	Tv-23	Tv-24	Tv-25	Tv-26
470	478	486	494	502	510
Lyon - R7					

Each city can be changed directly (add or delete a channel). These changes do not affect the file of the city, besides the changes in external file does not have influences. Finally, the setting on or off is also permitted (much like the "Layers" in Photoshop):

SECAM - TV channels	
Copy	Cities (3) X +
Combined	Reject Freq
Document	No sampling
Marseille	Marseille-01
Lyon	Lyon-1102
Paris	Paris-0519

A sample file can be added to each city with the commands of the 2nd line of a city:


Marseille			
Lyon	Lyon-1102		

When adding a file, only the path to the filename is saved, not the sample data.

The list can also be reclassified by dragging the selection (with no effect on the devices evaluation):

SECAM - TV channels		Tv-21	Tv-22	Tv-23	Tv-24	Tv-25	Tv-26	Tv-27	Tv-28	Tv-29	Tv-30
Copy	Cities (3) X +	470	478	486	494	502	510	518	526	534	542
Combined	Reject Freq										
Document	No sampling										
Marseille	Marseille-01										
Lyon	Lyon-1102										
Paris	Paris-0519										

To delete a city, use the command "-". To delete the whole list, use the "X" command:

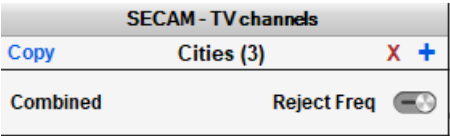

Activation of rejection of frequencies for each video standard can also be enabled or disabled. For the ATSC video standard, the rejection of the 600 MHz and 700 MHz bands matches the values in the document and then changes simultaneously when enabling or disabling the rejection of frequencies. Standard channel editing allows this to be done independently.

To build a plan intended for a tour, it's better to clear the channel list of the document and add the desired cities.


When several cities are added to the document, the placeholder may not be sufficient to have a complete view. The channel area can be enlarged up to about 80% of the window size with:

A screenshot of a table with 10 columns labeled "Tv-2" through "Tv-10". Each column contains a frequency value. A vertical double-headed arrow is positioned above the table, indicating it can be resized.

Tv-2	Tv-3	Tv-4	Tv-5	Tv-6	Tv-7	Tv-8	Tv-9	Tv-10
54	60	66	76	82	174	180	186	192


The position is saved with the document for subsequent use.

If the list is too long, you can use the "Copy" command:

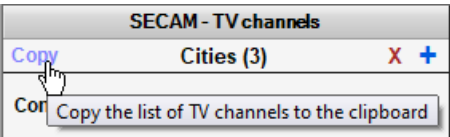


The image of the list will be copied to the clipboard for viewing on another application.

To add devices to the document, just use the tabs "Variables" and "Fixed". The list of available frequencies is naturally displays:

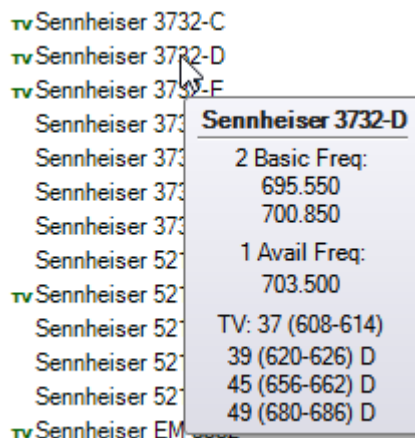

The creation of a document with several cities is more delicate given the higher number of TV channels. Just do a first draft in "Full Automatic" mode. EazyRF recalculate the frequencies of each device to find a solution. Although in the case of previous Sennheiser, there seems to be only 1 frequency available, should not be afraid to ask for a higher number in automatic mode, the final outcome cannot be predicted. The indication given corresponds to the current situation if no changes can be made (manual mode, adding automatic or protected devices).

For each device of the document, detailed information is available in tool tip or description of the device, the frequency list, the list of available frequencies, the details of a TV channel, the list of irregularities (intermodulation, rejection, etc.):

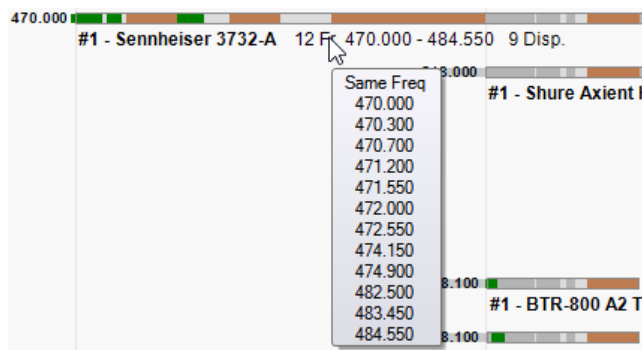

The edition of the document in this component is not total. It is allowed to add or delete groups, sections and devices. It is not allowed to move them however (the general views do that very well).

To edit a device, simply double-click on a device (regardless of the horizontal position) and standard editor is displayed:

Device Edition

Description: #1

Device: Sennheiser 3732-A

Start: 470.000 Stop: 560.000 Increment: 0.005

☐ Auto Start: TV Channels: 15 (476-482 MHz ...)

☐ Descending order

☐ 5th Order Evaluation (if Global)

TX Power Level: 1 1-50 mw

Fr Nbr: 12 ☐ Protected ☒ Manual ☒ Avail Freq

Tolerance 2 TX: 100

Tolerance 3 TX: 50

Separation: 300

Image Freq: 10.70

Filter: 16.00

Tolerance 5th: 50

Random

Clear

+ Ctrl = 1 Col

No	Description	Freq	Intermodulation
1		470.000	
2		470.300 14	
3		470.700 14	
4		471.200 14	
5		471.550 14	
6		472.000 14	
7		472.550 14	
8		474.150 14	
9		474.900 14	
10		482.500 16	
11		483.450 16	
12		484.550 16	

9 Avail Freq

16 485.200
16 486.850
18 494.550
18 495.550
18 496.400
18 496.700
18 498.100
18 498.500
18 499.300

OK Cancel

After completing a first draft with a list of possible cities (there is still a limit to the number of channels), just save the plan under different names and disable unnecessary TV channels cities. For example, if you are touring in Quebec, no need to keep the channels of Montreal and other cities. This will allow you to make local changes with greater flexibility.

The purpose of this component is to prepare a plan that will be compatible with the most possible cities. It is practically impossible to put too much TV channels (you have to keep some space for devices).

7.1 View detachment to a window (2nd screen)

The "On Tour" view can be detached from the EazyRF application towards a window on a 2nd screen or overlaid with EazyRF if a 2nd screen is not connected.

To activate this function, double-click on the name of the view:



The name of the view is displayed in red to indicate that it is detached:



To return to standard mode, either close the window or redo a double click on the name of the pane (in red).

The "Frequencies Plan", "Intermodulations" and "Spectrum View" views can also be detached.

If more than one view is detached, a simple click on the name of the view will bring it to the foreground.

Obviously, the content of the detached views is synchronized with the changes made no matter where they are made.

8 - Multi-Scenes

The « Multi-Scenes » view has been developed to meet the demands of music festivals taking place on several stages over a few days or more.

More than a hundred groups follow each other in different stages. So, one can easily imagine the large number of frequencies needed, impossible to calculate with a standard document.

If we analyze the process, we realize that the groups come on stage in turn with a time of reinstallation between two performances.

Therefore, it is not necessary to calculate the intermodulations for the overall performance.

In the first place, there are only the permanent installations which return from day to day. Secondly, for each stage there are only three groups that are in function simultaneously. While one group delivers its performance, the previous one dismantles and the next one gets ready.

From these needs, a new module has been created to manage these calculation commutations: « Multi-Scenes ».

This module is not functional with the basic license, it is optional and at an additional cost.

8.1 Presentation

This component is different from the others. You must first create a document in multi-scene mode. Why? Because this mode of operation is not available with conventional authoring tools. Scenes are groups as before but with independent evaluation relationships.

Moreover, an additional need requires the presence of a "flying" team that can intervene on each of the scenes.

So a new group is added. This group has a complete evaluation relationship. This format is not compatible with the standard evaluation of EazyRF.


A new calculation method deals with this case. EazyRF takes care of switching sections when calculating intermodulations.

To avoid the repetition of two frequencies between the independent groups a trick is used: an auto-interference. This is created from the value of a carrier but with a small variation on both sides, 100 kHz by default (configurable).

The partial evaluation method can even be used with some permanent sections


By creating a multi-scene document, the "Global View" and "Detailed View" panes are no longer accessible due to the unconventional structure of the document (the structure is untouchable).

Let's look at a basic multi-scenes document:

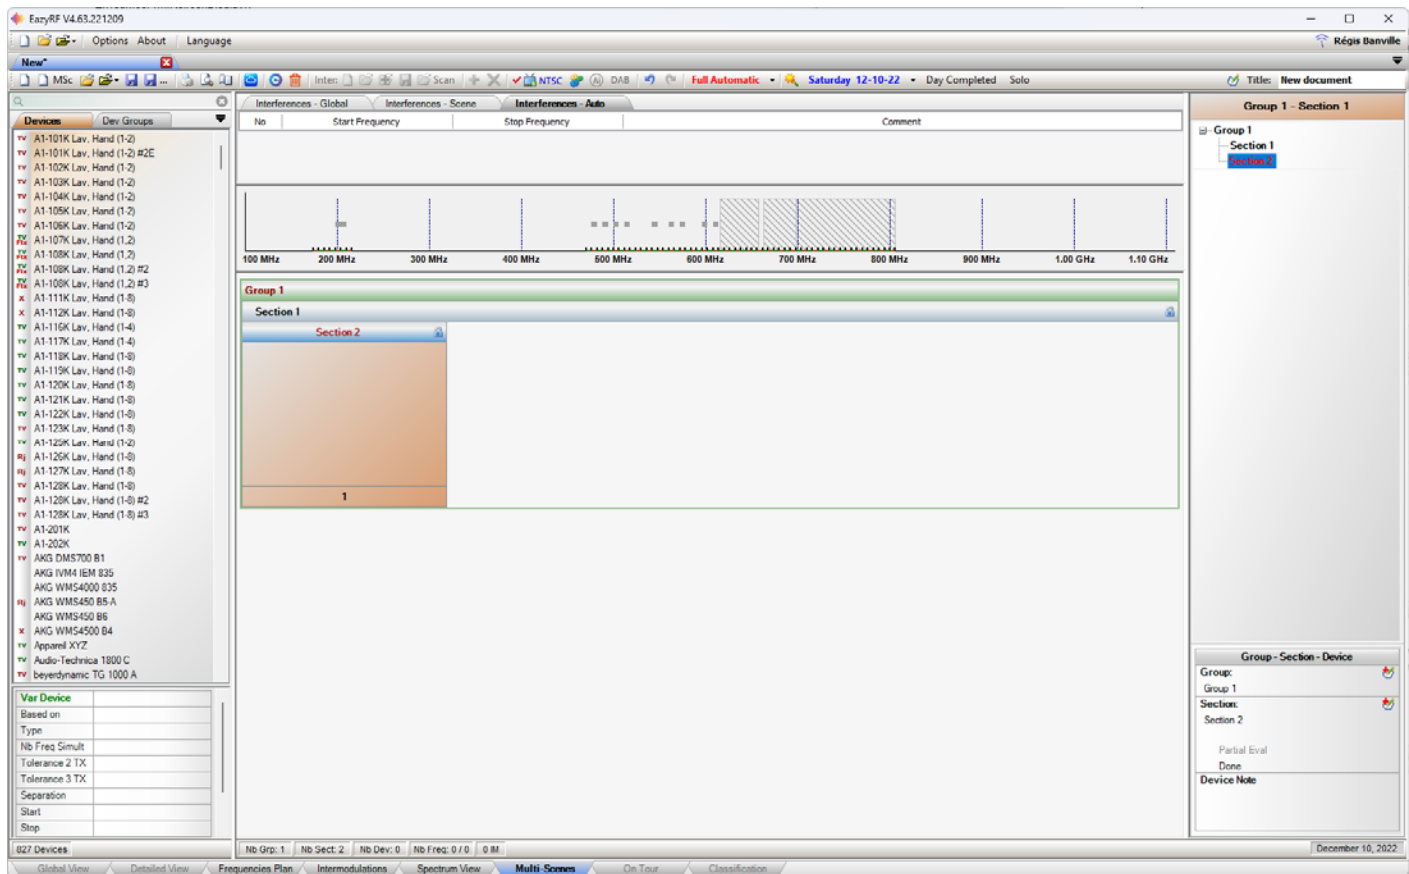

The left part contains the list of devices (as in the global view). The central part has three zones: the interference list, the global view of the spectrum and the lower part displays the contents of the document. The section on the right gives details of the devices of the selection with the devices in common.

If we add some devices, we get this:

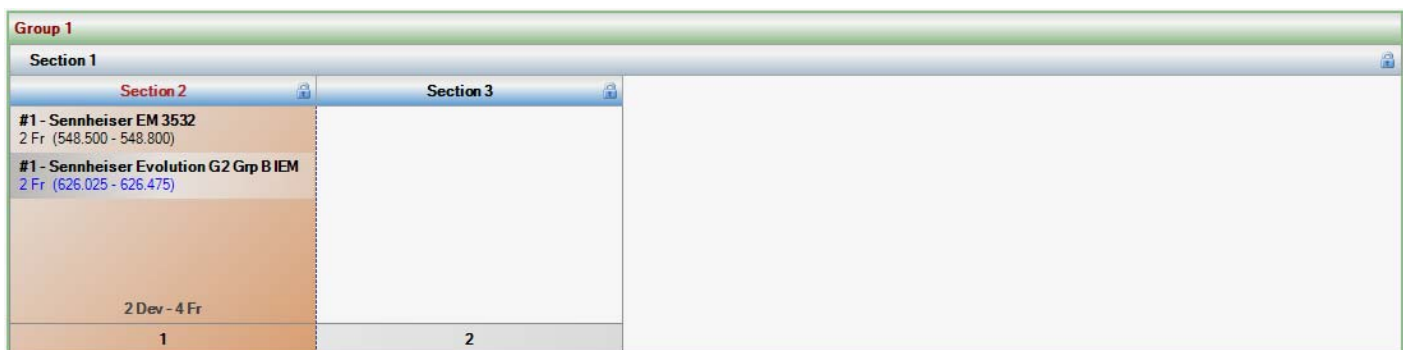


We can see the layout of sections and devices in the group. The sections line up horizontally in the group and the devices vertically in a section.

First feature, all devices added are automatically "Protected" and the protection can't be removed.

For the data to be valid all times, they must not automatically vary i.e. regardless of the method of calculation chosen, the result will be identical.

The calculation of the available frequencies is deactivated for the whole document because the values vary according the switching, thus to be redone continuously. Available frequencies only appear when editing a device or when the mouse pointer is over the name of a device on the left list.

When adding a device, the editor automatically appears in order to make the necessary modifications (number of frequencies, etc.). This function can be activated / deactivated in the Options / Startup - Global / Global Options menu:



Now let's add some sections and devices:

Group 1				
Section 1	Section 2	Section 3	Section 4	Section 5
	#1 - Sennheiser EM 3532 2 Fr (548.500 - 548.800) #1 - Sennheiser Evolution G2 Grp B IEM 2 Fr (626.025 - 626.475)	#1 - Shure Axient J5 2 Fr (578.000 - 578.300) #1 - Shure PSM 1000 G 11 2 Fr (482.500 - 482.800)	#1 - WisyCom B2 2 Fr (566.500 - 566.850) #1 - Sennheiser 2000-B IEM 2 Fr (627.050 - 627.750)	#1 - Sennheiser 3732-B 8 Fr (518.500 - 522.650)
	2 Dev - 4 Fr	2 Dev - 4 Fr	2 Dev - 4 Fr	1 Dev - 8 Fr
	1	2	3	4

We can notice the selection of the section 4. As explained previously only three performances are active simultaneously on every stage. In this case, sections 3, 4 and 5 are highlighted:

Section 3	Section 4	Section 5
#1 - Shure Axient J5 2 Fr (578.000 - 578.300) #1 - Shure PSM 1000 G 11 2 Fr (482.500 - 482.800)	#1 - WisyCom B2 2 Fr (566.500 - 566.850) #1 - Sennheiser 2000-B IEM 2 Fr (627.050 - 627.750)	#1 - Sennheiser 3732-B 8 Fr (518.500 - 522.650)
2 Dev - 4 Fr	2 Dev - 4 Fr	1 Dev - 8 Fr
2	3	4

The protection icon is displayed to the right of the section header. Devices are added as usual by dragging a device from the list on the left, but only on the selected section.

The sections occupying the top of a group are the permanent sections, i.e. the sections used during the duration of the event. For example :

Group 1	
Section 1 2Dev - 6Fr	
#1 - BTR-800 A2 RX	4 Fr (632.100 - 633.250)
#1 - BTR-800 A2 TX	2 Fr (523.400 - 524.050)

The devices used during the entire event must be placed in these sections.


To create sections a menu must be called from the right mouse button, to ensure the position of the desired action. Let's look at the menu:

Create Global Scene
Add Scene
Group Scene Background color
Add Section
Insert Section
Section On Hold
Section Background color
Add Fixed device
Add Variable device
Copy Device
Copy Section Devices
Cut Device
Cut Section Devices
Paste Devices
Paste Devices and Evaluate
Done Device
Device On Hold
Device Background color
Remove Scene 1
Remove Section 4
Remove #1 - Shure AD4Q G53
Convert to Group Devices WITH frequencies
Convert to Group Devices WITHOUT frequencies
Convert to Group Devices WITHOUT frequencies with PROTECTION

This menu allows you to manage groups, sections and devices.

It would be tedious to create a multi-scenes document entirely this way. A tool allows to do it of a stroke, the constructor (next section).

8.2 Multi-scenes construction

The tool  allows you to call the multi-scenes builder:

Construct Multi-Scenes

Number of days: Starting day:

Number of scenes: ☒ Add Common Group

Number of Sections To reduce the number of items in the document, it must be done manually.

Scene	Permanent	Fri 06/16	Sat 06/17	Sun 06/18
1	2	8	8	6
2	2	8	8	6
3	2	6	6	4


OK Cancel

To start, you have to define the date of the beginning of the event, then the number of days, the number of scenes and the addition of a group common to all scenes.


The number of permanent sections and sections for the performance of each scene must be defined subsequently.

This tool can be used later to change the date or number of sections or scenes. The editor only increases the number of items. To delete sections or scenes, use the menu previously seen. There is no undo/redo for this editor.

After creating a multi-scene document of two days or more, a command appears on the menu bar to navigate from one day to another:

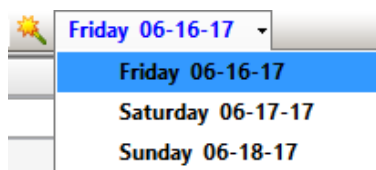

Here is an example of a festival:

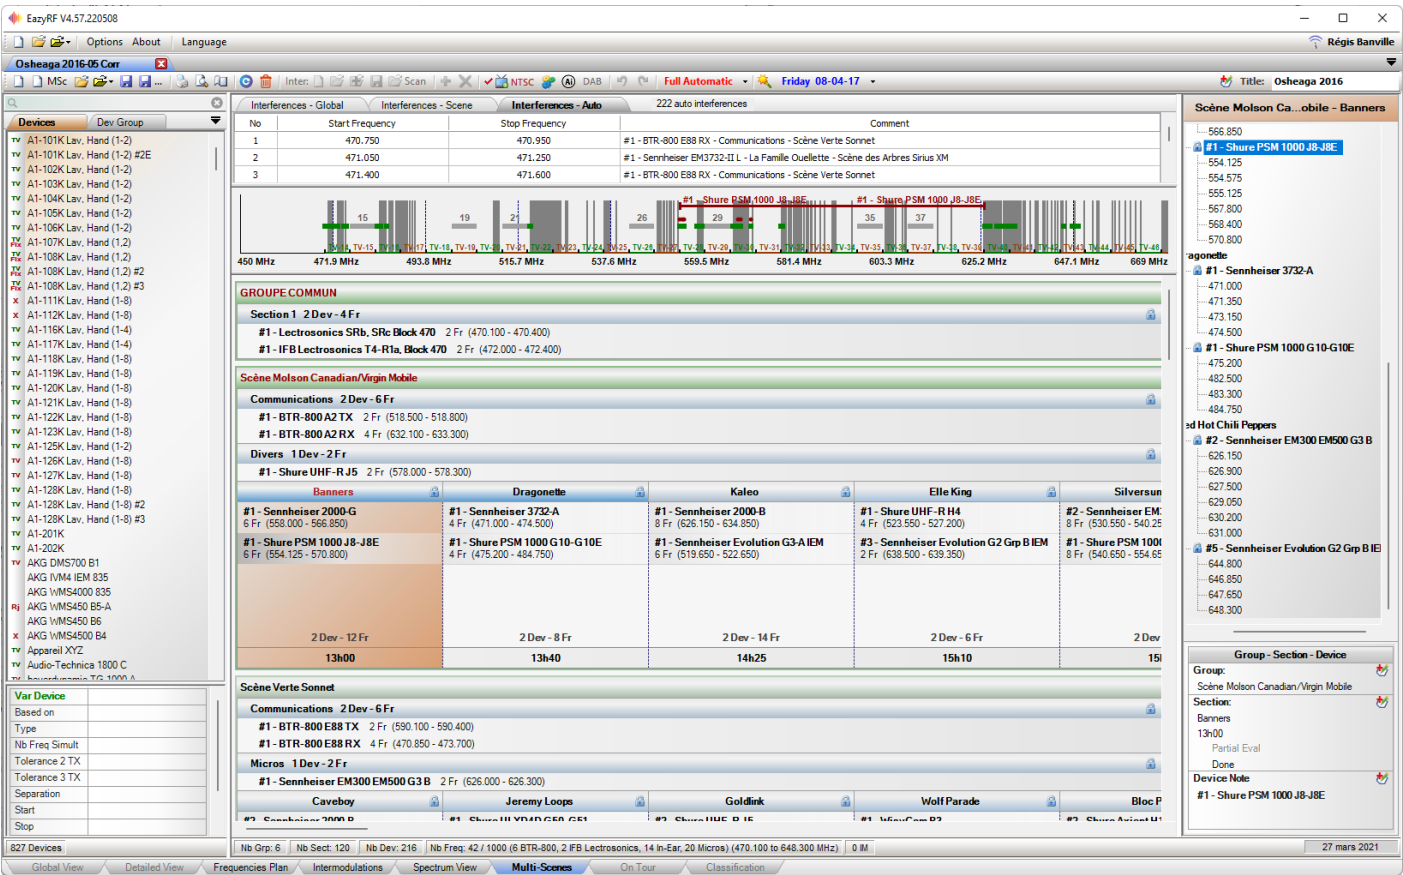

GROUPE COMMUN				
Section 1 2 Dev - 4 Fr				
#1 - Lectrosionics SRb, SRc Block 470 2 Fr (470.100 - 470.400)				
#1 - IFB Lectrosionics T4-R1a, Block 470 2 Fr (472.000 - 472.400)				
Scène Molson Canadian/Virgin Mobile				
Communications 2 Dev - 6 Fr				
#1 - BTR-800 A2 TX 2 Fr (518.500 - 518.800)				
#1 - BTR-800 A2 RX 4 Fr (632.100 - 633.300)				
Divers 1 Dev - 2 Fr				
#1 - Shure UHF-R J5 2 Fr (578.000 - 578.300)				
Banners	Dragonette	Kaleo	Elle King	Silversun
#1 - Sennheiser 2000-G 6 Fr (558.000 - 566.850)	#1 - Sennheiser 3732-A 4 Fr (471.000 - 474.500)	#1 - Sennheiser 2000-B 8 Fr (626.150 - 634.850)	#1 - Shure UHF-R H4 4 Fr (523.550 - 527.200)	#2 - Sennheiser Evc 8 Fr (530.550 - 540.25)
#1 - Shure PSM 1000 J8-J8E 6 Fr (554.125 - 570.800)	#1 - Shure PSM 1000 G10-G10E 4 Fr (475.200 - 484.750)	#1 - Sennheiser Evolution G3-A IEM 6 Fr (519.650 - 522.650)	#3 - Sennheiser Evolution G2 Grp B IEM 2 Fr (638.500 - 639.350)	#1 - Shure PSM 1001 8 Fr (540.650 - 554.65)
2 Dev - 12 Fr	2 Dev - 8 Fr	2 Dev - 14 Fr	2 Dev - 6 Fr	2 Dev
13h00	13h40	14h25	15h10	15h

The detail of the selected section:

Scène Molson Ca...obile - Banners

472.000
472.400

Scène Molson Canadian/Virgin Mobile

Communications

#1 - BTR-800 A2 TX
518.500
518.800

#1 - BTR-800 A2 RX
632.100
632.400
632.800
633.300

Divers

#1 - Shure UHF-R J5
578.000
578.300

Banners

#1 - Sennheiser 2000-G
558.000
558.300
558.700
559.200
566.500
566.850

#1 - Shure PSM 1000 J8-J8E
554.125
554.575
555.125
567.800
568.400
570.800

Dragonette

#1 - ...

Group - Section - Device
Group: Scène Molson Canadian/Virgin Mobile
Section: Banners 13h00 Partial Eval Done
Device Note #1 - Shure PSM 1000 J8-J8E

Each section contains header and footer information:

Banners	Group - Section - Device
#1 - Sennheiser 2000-G 6 Fr (558.000 - 566.850)	Group: Scène Molson Canadian/Virgin Mobile
#1 - Shure PSM 1000 J8-J8E 6 Fr (554.125 - 570.800)	Section: Banners 13h00 Partial Eval Done
2 Dev - 12 Fr	Device Note #1 - Shure PSM 1000 J8-J8E
13h00	

By placing the time as information at the bottom of the section, it is thus easier to follow the flow.

The section name or section footer editor allows you to enter data faster by allowing you to move to the next section with the « Tab » key.

The command « Done » frees the frequencies used when the performance is completed:

Banners	Group - Section - Device
#1 - Sennheiser 2000-G 6 Fr (558.000 - 566.850)	Group: Scène Molson Canadian/Virgin Mobile
#1 - Shure PSM 1000 J8-J8E 6 Fr (554.125 - 570.800)	Section: Banners 13h00 Partial Eval <input checked="" type="checkbox"/> Done
2 Dev - 12 Fr	Device Note #1 - Shure PSM 1000 J8-J8E
13h00	

8.3 Partial Evaluation

Partial evaluation exists in a conventional document (not multi-scenes) between groups of the document. The structure used for the multi-scenes does not allow to redefine the relationship between the groups because it is rigid, the common group has a complete relationship with all the scenes, and the scenes have an independent relationship with each other, the auto-interference being used to avoid frequency duplication.

Starting from version 4.60, multi-scenes support partial evaluation from permanent sections of the common group and scenes. It is activated by the “Partial Eval” option of the selection detail section:

Group - Section - Device	
Group:	COMMON GROUP
Section:	Section 1
<input checked="" type="checkbox"/> Partial Eval <input type="checkbox"/> Done	
Device Note	#1 - Shure AD4Q G53

An example without "Partial Eval" :

COMMON GROUP	
Section 1 1 Dev - 8 Fr	
#2 - Shure AD4Q G53 8 Fr (475.325 - 486.175)	
Scene 1	#2 - Shure AD4Q G53
Section 1 1 Dev - 8 Fr	8 Freq.:
#1 - Shure AD4Q G53 8 Fr (475.325 - 486.175)	475.325
	476.775
Section 2	477.525
	479.225
Section 3	480.625
	483.225
	485.025
	486.175

And with the option "Partial Eval" :

COMMON GROUP	
Section 1 1 Dev - 8 Fr	
#2 - Shure AD4Q G53 8 Fr (473.675 - 477.975)	
Scene 1	#2 - Shure AD4Q G53
Section 1 1 Dev - 8 Fr	8 Freq.:
#1 - Shure AD4Q G53 8 Fr (473.675 - 477.975)	473.675
	474.125
Section 2	475.075
	475.475
Section 3	476.125
	476.675
	477.375
	477.975


An indicator illustrates which section is in "Partial Eval" :

COMMON GROUP	
Section 1 1 Dev - 8 Fr	PEv

Partial evaluation from one scene will influence all performance sections, you be the judge of usefulness. The primary function is the use for the common group.

8.4 Group, Section and Devices – Background color

The menu under the mouse pointer lets you add a background color to a group, section or device:

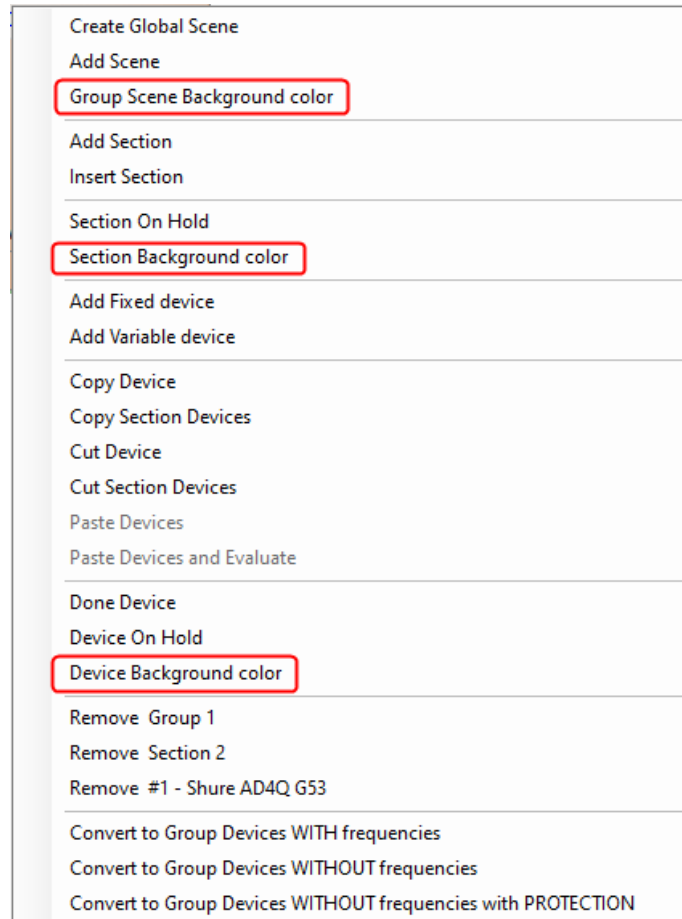

A horizontal bar of the background color is added at the bottom of each element:

Scene 1	
Section 1 1 Dev - 4 Fr	
#1 - Shure AD4Q G53 4 Fr (478.500 - 480.000)	
Section 2	
Section 3	Section 4
	#2 - Shure AD4Q G53 4 Fr (480.450 - 483.000)
	#3 - Shure AD4Q G53 4 Fr (483.700 - 503.300)
	2 Dev - 8 Fr
1	2

8.5 Display of intermodulations


You can display the detail of the intermodulations of all the devices by moving the mouse over the detail of the frequencies:

COMMON GROUP				
Section 1 1 Dev - 4 Fr (2 IM)				
#1 - Shure AD4Q G53 4 Fr (478.500 - 480.000)				
Scene 1				
Section 1				
Section 2				
Section 3	Section 4	Section 5	Section 6	Section 7
	#2 - Shure AD4Q G53 4 Fr (480.450 - 483.500)	#3 - Shure AD4Q G53 4 Fr (483.700 - 503.300)		
	#2 - Shure AD4Q G53 (5 IM)			
	Frequency	IM	Fréquence - Description	
	480.450			
	481.000	0 kHz	478.500: #1 - Shure AD4Q G53 - Section 1, COMMON GROUP	
			481.000: #2 - Shure AD4Q G53	
			483.500: #2 - Shure AD4Q G53	
	481.650	0 kHz	480.000: #1 - Shure AD4Q G53 - Section 1, COMMON GROUP	
			483.500: #2 - Shure AD4Q G53	
			485.150: #3 - Shure AD4Q G53 - Section 5	
	483.500	0 kHz	478.500: #1 - Shure AD4Q G53 - Section 1, COMMON GROUP	
			481.000: #2 - Shure AD4Q G53	
		0 kHz	480.000: #1 - Shure AD4Q G53 - Section 1, COMMON GROUP	
			481.650: #2 - Shure AD4Q G53	
			485.150: #3 - Shure AD4Q G53 - Section 5	
		< 400 kHz	483.700: #3 - Shure AD4Q G53 - Section 5	
Scene 2				
Section 1				
Section 2				
Section 3				

The background color of the detail of the frequencies causing the intermodulations follows the background color of an element in this order: group, section and device.

8.6 Devices and section On Hold

You can put one or more devices or an entire section on hold from the menu called up by the right mouse button:

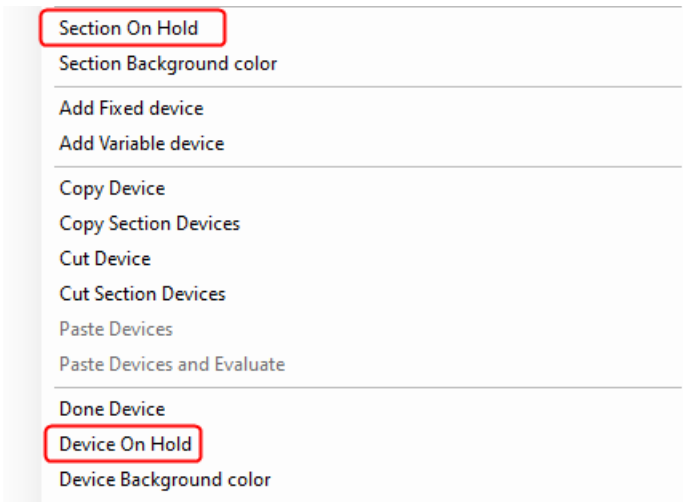

The “On Hold” command is similar to the “Done” command but does not act identically. An on hold device is a device whose frequencies are not calculated in the intermodulations but still calculated in the self-interferences.

The purpose of this command is to exclude frequencies that cause intermodulation due to an impossibility of finding other frequencies, the range being too busy. This technique is used to eliminate the display of intermodulations. In practice, these devices are put into operation at the last minute.


Before “On Hold”:

Section 4	Section 5
#2 - Shure AD4Q G53 4 Fr (480.450 - 483.500)	#3 - Shure AD4Q G53 4 Fr (483.700 - 503.300)
#1 - Shure AD4Q K54 4 Fr (606.000 - 607.500)	
2 Dev - 8 Fr (5 IM)	1 Dev - 4 Fr (2 IM)
2	3

After:

Section 4	Section 5
#2 - Shure AD4Q G53 4 Fr (480.450 - 483.500)	#3 - Shure AD4Q G53 4 Fr (483.700 - 503.300)
#1 - Shure AD4Q K54 4 Fr (606.000 - 607.500)	
2 Dev - 8 Fr	1 Dev - 4 Fr
2	3


As this operation is delicate, EazyRF displays these “On Hold” devices quite clearly with a red background and the “Pause” symbol:

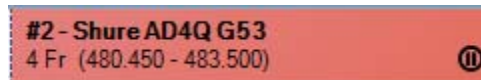


8.7 Notes

The “Multi-Scenes” module supports note taking for devices, sections, scenes and document, just like in the “Global View” module.

The editor is called up through the selection detail section:

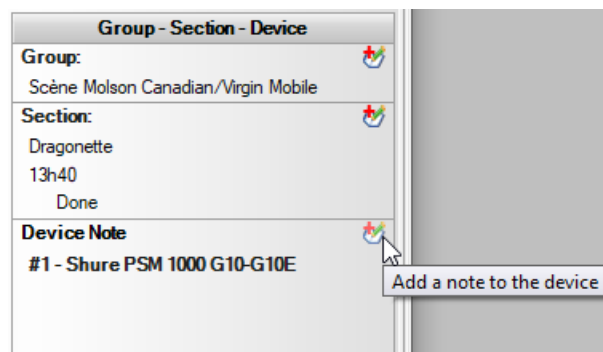

If we add notes to devices, sections and to the group:

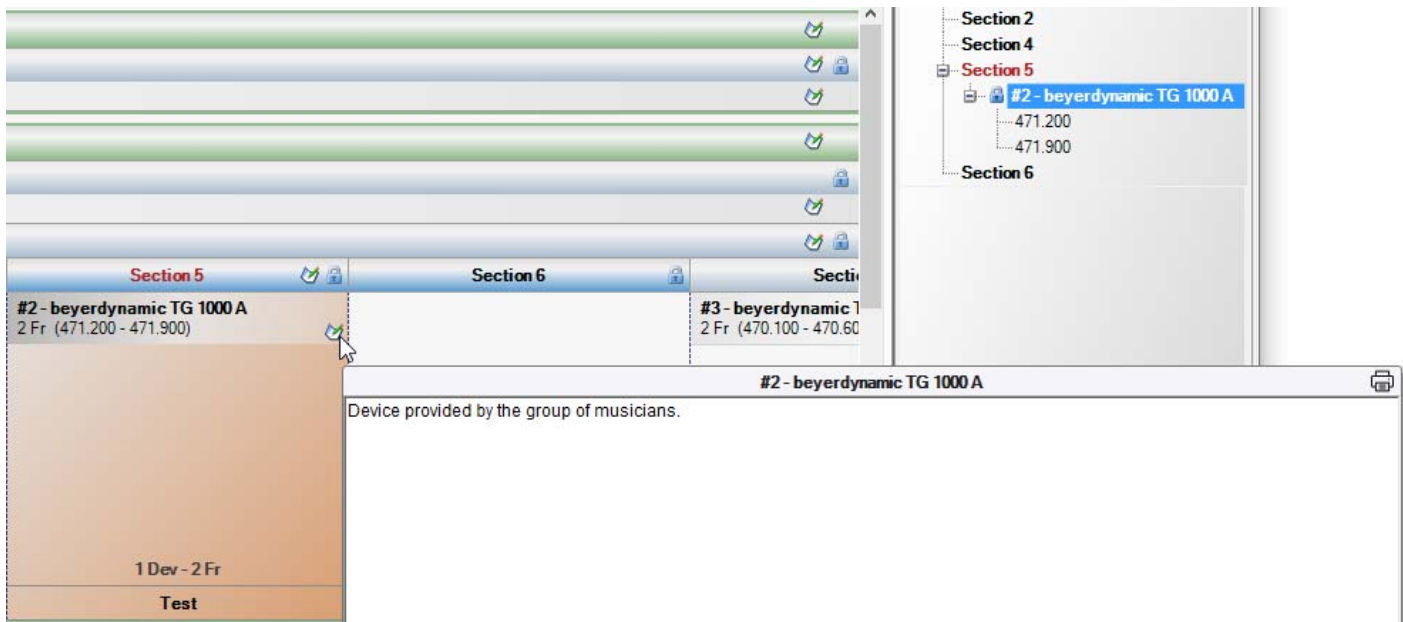

See the details of how notes work in section 2.6.

There is a small difference compared to the operation of the other views, the detail section of the selection displays the first lines of the note of the selected device:

Group - Section - Device
Group: Scène 1
Section: Section 5 Test Done
Device Note #2 - beyerdynamic TG 1000 A Device provided by the group of musicians.


A click in the text box calls up the note editor.

The printing module allows you to print or not the notes for the whole document:


<input type="checkbox"/>	Do not print device notes
<input checked="" type="checkbox"/>	Except Sections without devices
<input checked="" type="checkbox"/>	Without Intermodulations

8.8 Global Spectrum


The frequency spectrum of the document is displayed in the middle part of the document:

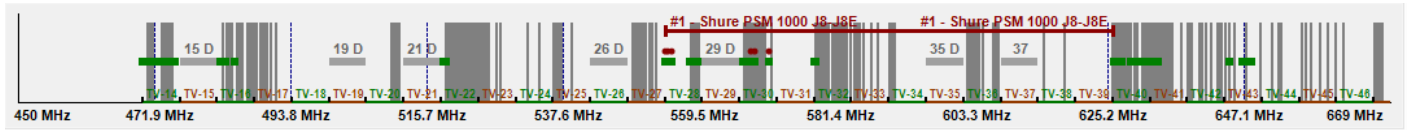

You can magnify an area by dragging and holding the left mouse button:

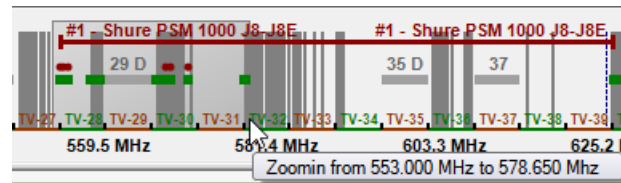

Which give :

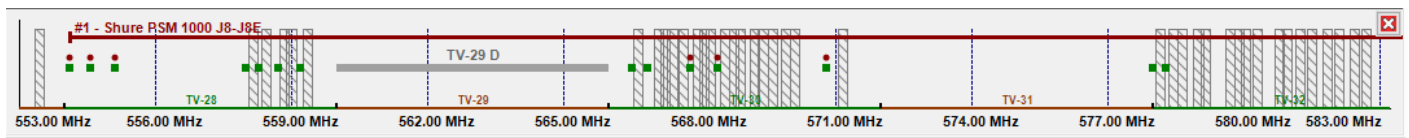

There is no limit to the number of magnifications, i.e. you can enlarge an enlargement. To end enlargements, simply close the area by clicking the close button at the top right of the enlargement

8.9 Interferences

A multi-scene document has three interference sections:

Interferences - Global		Interferences - Scene		Interferences - Auto	222 auto interferences
No	Start Frequency	Stop Frequency			
1	470.750	470.950		Scène Verte Sonnet	
2	471.050	471.250		Scène des Arbres Sirius XM	
3	471.400	471.600		Scène Verte Sonnet	

The global interferences are those used in the « Intermodulations » view, see section 5.6.

A new tab has been added: "Interferences - Scene". Each stage can have its own interference list.

See Chapter 5 for interference management: manual addition, adding from a data file created with a frequency scanner.

The "Interferences - Auto" pane contains the list of interferences created automatically by EazyRF for each stage to avoid using a frequency assigned to another stage. This list is not editable.

The default value of the auto-interference width is set in the document parameters:

Evaluation parameters of the document

Power Level

Influence:	2 TX Tol	3 TX Tol	5 TX Tol
1: 1-50 mw	0 kHz	0 kHz	Tolerance
2: 51-150 mw	25	25	0
3: 151-400 mw	75	50	25
4: > 400 mw	125	75	50

Digital TV Channels

Reject Freq on each side: 0.500 MHz

Interferences

Reject Freq on each side: 0.300 MHz

Auto Interferences limit: 0.100 MHz

☒ Auto Interferences Power Level (3 TX)

Scans

☒ Reject Freq if level greater than (-50 à -89): -60 dbm

5th Order Intermodulation

Tolerance 5th Order: 50 kHz

Method: 2 TX and 3 TX

Skip Freq beyond: 32 MHz

☒ Turn on 5th Order on New Device

Partial evaluation (No 5th Order)

☒ Calculation Intermodulations 2 TX

☐ Full ☒ 0 kHz only

☐ Calculation Intermodulations 3 TX (0 kHz)

Random evaluation

☐ Separation until: 2000 kHz

☒ Keep Freq already evaluated

Compressed backup

☒ Compressed format. Not compatible with EazyRF V4.41 and less.

Default OK Cancel

The default value is set to 100 kHz. This value is global to the document and must be modified at the beginning of the creation of an event, otherwise a lot of error messages will appear because the already calculated frequencies are locked and validated to the value of the limit of auto-interference.

Since version 4.12 of EazyRF, it is now possible to change the value of the auto-interference limit for each device from the device editor:

Device Edition - #1 - A1-128K Lav, Hand (1-8)

Description: #1

Device: A1-128K Lav, Hand (1-8) Micros

Start: 578.000 Stop: 638.000 Increment: 0.025

☐ Auto Start: TV Channels: 31 (572-578 MHz ...)

☐ Descending order

Auto Interferences limit (0 = document value): 0.150 MHz

TX Power Level: 1 1-50 mw 2 TX: 0 kHz 3 TX: 0 kHz 5 TX: 0 kHz

Fr Nbr: 8 ☒ Protected ☐ Manual ☒ Avail Freq

Random Evaluate

Scans

No	Description	Freq	Intermodulation
1		578.500 32	
2		578.800 32	
3		579.200 32	
4		579.700 32	
5		584.450 33	
6		585.400 33	
7		585.750 33	
8		586.200 33	

8 Avail Freq


33	586.750
33	587.600
33	588.200
34	590.850
34	592.100
34	595.400
36	606.450
36	606.750

OK Cancel

If the limit is increased, EazyRF will look for a space in the frequency spectrum to fill that demand, so the frequencies may change dramatically or may not be available.

A value of zero for the limit of a device means to use the default value of the document.

In addition, to simplify these boundary changes, the device list editor now allows you to set a default value for each device:

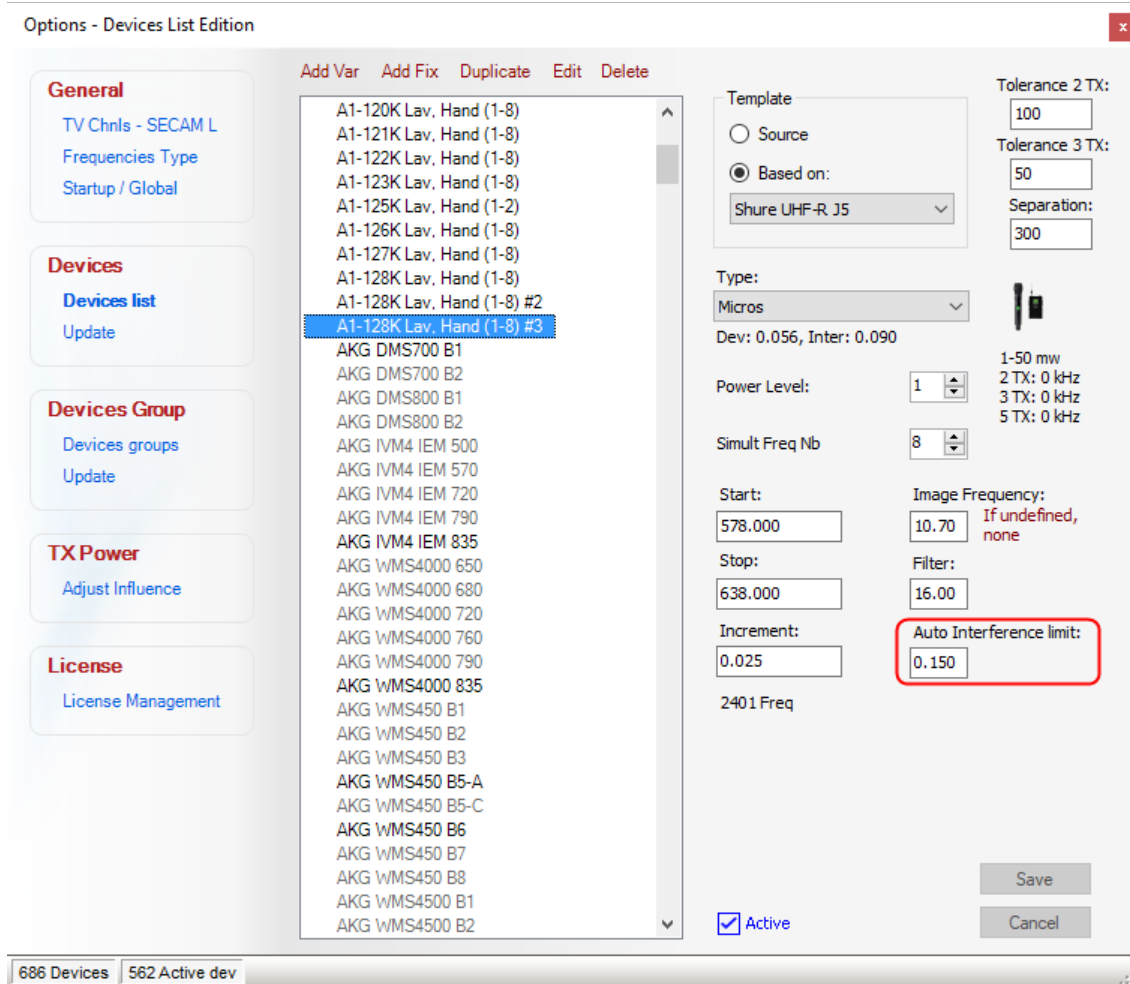

Finally, you can also make an automatic correction to the limit of auto-interference according to the power of the device with this option of the document settings:

Evaluation parameters of the document

Influence:	2 TX Tol	3 TX Tol	5 TX Tol
1: 1-50 mw	0 kHz	0 kHz	Tolerance
2: 51-150 mw	25	25	0
3: 151-400 mw	75	50	25
4: > 400 mw	125	75	50

Digital TV Channels
Reject Freq on each side: 0.500 MHz

Interferences
Reject Freq on each side: 0.300 MHz
Auto Interferences limit: 0.100 MHz
☒ Auto Interferences Power Level (3 TX)

Scans
☒ Reject Freq if level greater than (-50 à -89): -60 dbm

5th Order Intermodulation
Tolerance 5th Order: 50 kHz
Method: 2 TX and 3 TX
Skip Freq beyond: 32 MHz
☒ Turn on 5th Order on New Device

Partial evaluation (No 5th Order)
☒ Calculation Intermodulations 2 TX
☐ Full ☒ 0 kHz only
☐ Calculation Intermodulations 3 TX (0 kHz)

Random evaluation
☐ Separation until: 2000 kHz
☒ Keep Freq already evaluated

Compressed backup
☒ Compressed format. Not compatible with EazyRF V4.41 and less.

Default OK Cancel

EazyRF automatically adds a value to the auto-interference limit according to the parameters set in the Tolerance 3 TX of the Power Level.

The auto-interference value set manually for a device has priority over automatic correction.

Finally, some additions have been made to the graphics of the Multi-Scenes module to better illustrate the use of parameters.




The right area at the device means that the device has its own auto-interference limit parameter.




The left side of the device shows the power level and the automatic tracking of the auto-interference limit. The indicator changes color according to the power level: yellow level 2, orange level 3 and red level 4.

8.10 Auto-Interferences between Scenes Editor

The "Ai" command in the toolbar:



Calls up the auto-interference editor between scenes:

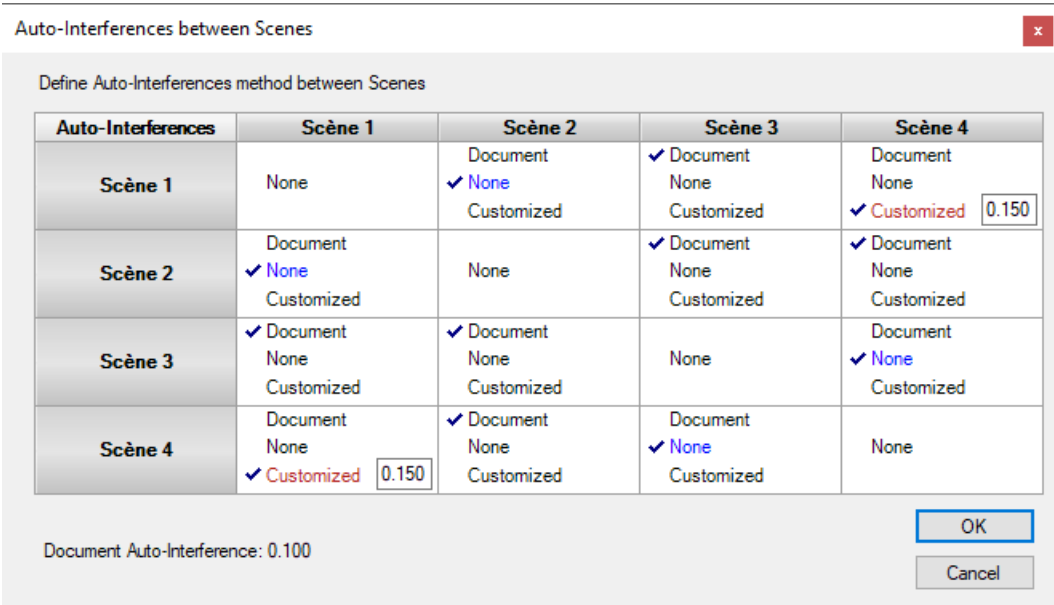

The editor works on the principle of the "Group Relations" editor.

The Auto-Interference between scenes method is based on the value defined either in the document, either on a custom value or without any value.

The auto-interference value of a device has the highest priority, followed by the custom value, if used, and finally that of the document.

If you click on the "Scene X" headers, this affects all the self-interference of a scene simultaneously and in circular mode, namely: Document, None and Custom. If the Ctrl key is activated when clicked, this allows the first self-interference value of a scene to be copied to all subsequent scenes (practical if customized).

If we use this data:

Scène 1

Section 1

Section 2

#1 - beyerdynamic TG 1000 A
8 Fr (470.100 - 474.700)

1 Dev - 8 Fr

1

Scène 2

Section 1

Section 2

#2 - beyerdynamic TG 1000 A
8 Fr (470.100 - 474.700)

1 Dev - 8 Fr

1

Scène 3

Section 1

Section 2

#3 - beyerdynamic TG 1000 A
8 Fr (470.250 - 474.850)

1 Dev - 8 Fr

1

Scène 4

Section 1

Section 2

#4 - beyerdynamic TG 1000 A
8 Fr (470.300 - 474.900)

1 Dev - 8 Fr

1

Auto-Interferences	Scène 1
Scène 1	None
Scène 2	Document ✓ None Customized
Scène 3	✓ Document None Customized
Scène 4	Document None ✓ Customized 0.150

The following results are obtained:

Interferences - Global		Interferences - Scene	Interferences - Auto	16 auto interferences
No	Start Frequency	Stop Frequency		
1	470.150	470.350		Scène 3
2	470.150	470.450		Scène 4
3	470.650	470.850		Scène 3
4	470.650	470.950		Scène 4
5	471.250	471.450		Scène 3
6	471.250	471.550		Scène 4
7	471.950	472.150		Scène 3
8	471.950	472.250		Scène 4
9	472.500	472.700		Scène 3
10	472.500	472.800		Scène 4
11	473.150	473.350		Scène 3
12	473.150	473.450		Scène 4
13	473.900	474.100		Scène 3
14	473.900	474.200		Scène 4
15	474.750	474.950		Scène 3
16	474.750	475.050		Scène 4

It can be noted that all the self-interference generated by scene 3 (Document) has a width of 200 kHz, 100 kHz on each side of the carrier, as defined in the document. Whereas the scene 4 (Custom) auto-interference is 300 kHz wide, twice the custom value of 150 kHz. Finally, scene 2 does not generate any self-interference (None).

You must define these auto-interferences in the first steps of creating a new document before adding devices in order to find frequencies that respect these auto-interferences.

8.11 Device Edition

The device editor in the "Multi-Scenes" module takes a different form when a device has intermodulations:

Device Edition - #2 - Shure PSM 1000 K10E

Description: #2

Device: Shure PSM 1000 K10E In-Ear

Start: 596.125 Stop: 668.000 Increment: 0.025

Auto Start: ☐ Descending order: ☐

Auto Interferences limit (0 = document value): 0.000 MHz

TX Power Level: 1 1-50 mw 2 TX: 0 kHz 3 TX: 0 kHz 5 TX: 0 kHz

Fr Nbr: 8 ☒ Protected ☐ Manual ☒ Avail Freq

Tolerance 2 TX: 100 Tolerance 3 TX: 50 Separation: 300 Image Freq: 10.70 Filter: 16.00

Nb IM: 78

Frequency	Intermodulation
599.850	0 kHz - 601.050 & 603.950 & 605.150 50 kHz - 603.950 & 608.100 0 kHz - 598.650 & 599.850 & 601.050 0 kHz - 603.950 & 609.150 & 613.250 0 kHz - 598.650 & 603.950 & 605.150 0 kHz - 590.150 & 605.150 & 614.850
608.100	0 kHz - 602.350 & 605.150 & 605.300 50 kHz - 599.850 & 603.950 0 kHz - 603.950 & 613.250 & 617.400 0 kHz - 599.150 & 605.150 & 614.100 0 kHz - 601.050 & 614.400 & 621.450 0 kHz - 599.850 & 609.150 & 617.400 0 kHz - 599.850 & 615.200 & 623.450
609.150	0 kHz - 615.200 & 617.400 & 623.450 50 kHz - 611.750 & 614.400 50 kHz - 613.250 & 617.400

No	Description	Freq	Intermodulation
1		599.850 37	0 kHz - 601.050 & 603.
2		608.100 38	0 kHz - 602.350 & 605.
3		609.150 38	0 kHz - 615.200 & 617.
4		617.850 39	0 kHz - 614.400 & 614.
5		622.100 40	0 kHz - 614.400 & 623.
6		639.100 42	0 kHz - 633.050 & 634.
7		645.650 42	
8		647.900 43	

0 Avail Freq

78/654 IM

OK Cancel

Frequency	Description
590.150	#2 - WisyCom N IEM - Presse, GROUPE COMMUN
598.650	#3 - Shure PSM 1000 K10E - John Butler Trio
599.850	#2 - Shure PSM 1000 K10E
601.050	#1 - Sennheiser EM6000 A5 A8 - Bigflo & Oli
603.950	#1 - Sennheiser EM6000 A5 A8 - Bigflo & Oli
605.150	#1 - Sennheiser EM6000 A5 A8 - Bigflo & Oli
608.100	#2 - Shure PSM 1000 K10E
609.150	#2 - Shure PSM 1000 K10E
613.250	#1 - Shure Axient J5E
614.850	#1 - BTR-800 F1 RX - intercom

The detail of the intermodulations of each frequency appears in the upper right part of the editor. In the lower right, the location of each frequency that caused intermodulation appears. You can know the origin of the problem and on what scene.

In addition, when the mouse is over a frequency, the number of intermodulations created by it is displayed:

Frequency	Description
590.150	#2 - WisyCom N IEM - Presse, GROUPE COMMUN
598.650	#3 - Shure PSM 1000 K10E - John Butler Trio
599.850	#2 - Shure PSM 1000 K10E
601.050	#1 - Sennheiser EM6000 A5 A8 - Bigflo & Oli
603.950	#1 - Sennheiser EM6000 A5 A8 - Bigflo & Oli
605.150	#1 - Sennheiser EM6000 A5 A8 - Bigflo & Oli
608.100	#2 - Shure PSM 1000 K10E
609.150	#2 - Shure PSM 1000 K10E
613.250	#1 - Shure Axient J5E
614.850	#1 - BTR-800 F1 RX - intercom

Finally, by double-clicking on one of the frequencies in this list (or the name of the device), the editor closes, selects the right device in the detailed part and restarts the editor with the new device. This procedure allows you to save data by switching from one device to another and taking advantage of the undo / redo functions.


8.11.1 Frequencies used

The indication of frequencies already used by other Performances of the same scene is illustrated by the display "u" next to the frequencies of the device and the available frequencies:

Device Edition - #1 - Shure PSM 1000 L8-L8E

Description: **Wolf Parade - 16h55**

#1

Device:  Shure PSM 1000 L8-L8E In-Ear

Start: 626.125 Stop: 698.000 Increment: 0.025

☐ Auto Start: TV Channels: 49 (680-686 MHz ...)

☐ Descending order

Auto Interferences limit (0 = document value): 0.000 MHz

TX Power Level: 1 1-50 mw 2 TX: 0 kHz 3 TX: 0 kHz 5 TX: 0 kHz

Fr Nbr: 6 ☒ Protected ☐ Manual ☒ Avail Freq

Tolerance 2 TX: 100

Tolerance 3 TX: 50

Separation: 300

Image Freq: 10.70

Filter: 16.00

Random

Evaluate

+ Ctrl = 1 Col

No	Description	Freq	Intermodulation
1		u 626.700 40	
2		u 627.200 40	
3		u 627.800 40	
4		u 630.650 40	
5			
6			


627.200 used by:
#2 - Sennheiser 2000-B - Caveboy 13h00

Scans

31 Avail Freq


41	635.150 u
41	635.600 u
42	638.750 u
43	640.400 u
44	642.800 u
45	643.300 u
45	649.300 u
45	660.650 u
45	661.800 u
46	663.100 u
46	665.150 u
46	665.650 u
47	671.700 u
47	672.100 u
48	674.050 u
48	674.850 u

OK Cancel

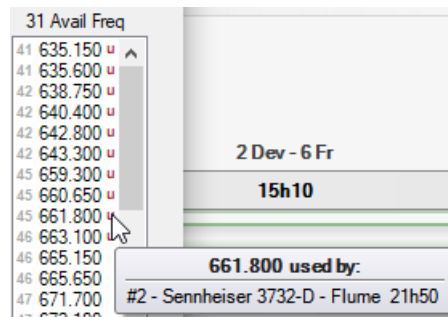


Thus, if a transmitter remains on after its use, one can easily find out where it has been used.

By double clicking on the "u" indicator, the editor goes directly to the indicated device. If more than one device uses this frequency, you can use the CTRL or ALT keys to navigate to the first three frequencies:

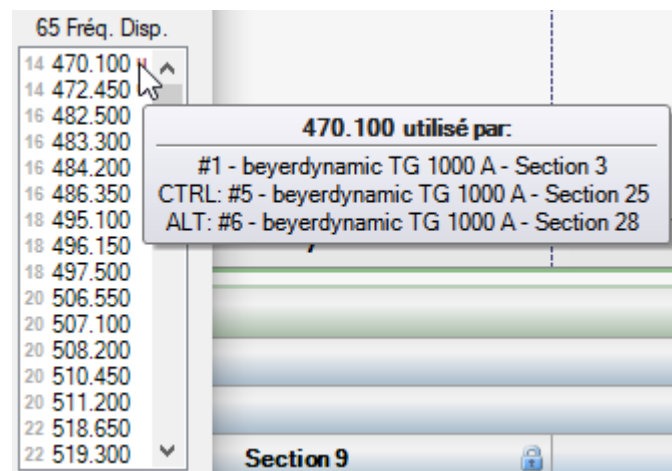

8.12 Printing

Before printing, you must select which groups, sections or days needs to be printed:

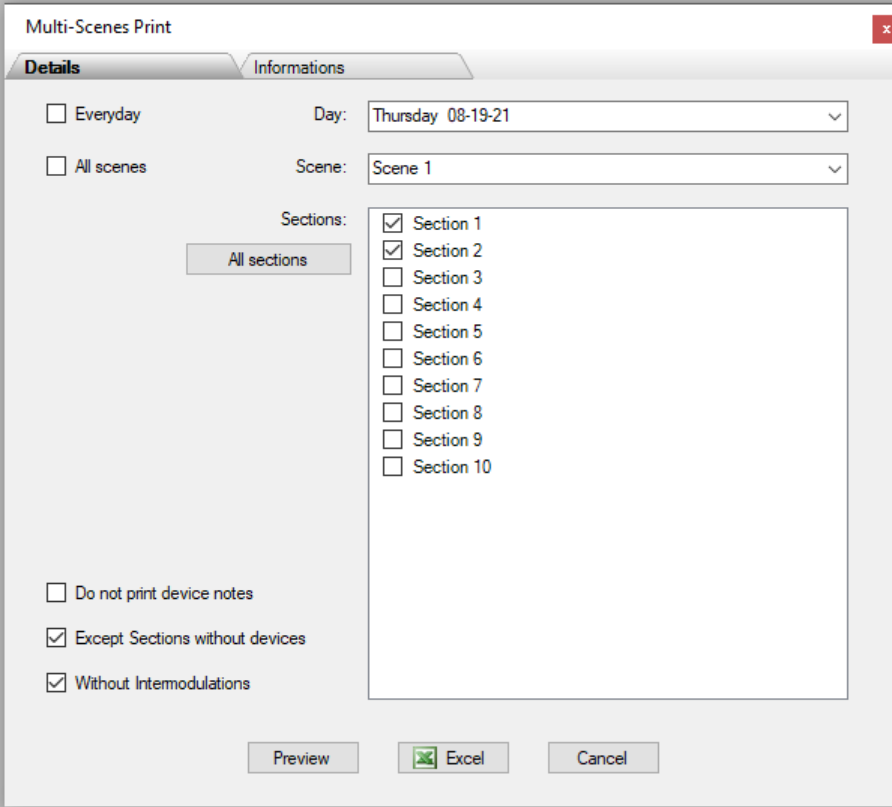

The image shows a software dialog box titled "Multi-Scenes Print". It has two tabs: "Details" (selected) and "Informations".

Details Tab:

- ☐ Everyday
- ☐ All scenes
- Day: Thursday 08-19-21 (dropdown menu)
- Scene: Scene 1 (dropdown menu)
- Sections: (label)
- ☒ Section 1
- ☒ Section 2
- ☐ Section 3
- ☐ Section 4
- ☐ Section 5
- ☐ Section 6
- ☐ Section 7
- ☐ Section 8
- ☐ Section 9
- ☐ Section 10
- ☐ Do not print device notes
- ☒ Except Sections without devices
- ☒ Without Intermodulations
- (button)
- (button)
- (button with Excel icon)
- (button)

These same options apply for a transfer to an Excel document.

With version 4.1 of EazyRF, it is now possible to create a header to print with the "Informations" pane:

Multi-Scenes Print ✕

Details Informations

MainSquareFestival2019.png

5.6.7 JUILLET 2019 · LA CITADELLE · ARRAS
MAINSQUARE


Image - Maximum: Height 100, Width: 525 pixels

Clear Set...

Version: Test-1024

Comment: Attention à ...
Femer le ...

Contact: Régis Banville
514-922-5818

Preview  Excel Cancel

Areas without contents are not printed.

Result:

New document

Régis Banville

July 23, 2019

5.6.7 JUILLET 2019 · LA CITADELLE · ARRAS

MAINSQUARE

Version: Test-1024
 Comment: Attention
 Turn Off...
 Contact: Régis Banville
 514-922-5818

Friday 07-26-19

Scene 1			
Section 1			
#1 - BTR-800 A2 RX			
1		632.100	
2		632.400	
3		632.800	
4		633.300	
#1 - BTR-800 A2 TX			
1		518.500	
2		518.800	
Section 3			
#1 - beyerdynamic TG 1000 A			
1		470.100	
2		470.600	

8.13 Frequencies Plan view

The « Frequencies Plan» pane allows you to view the plan by the day of the event:

Device by Freq  Friday 08-04-17 ▼

The option « Dev by Freq » displays the list of frequencies used in a day in numerical order:


Frequency		Comment
470.100	14	#1 - Lectrosonics SRb, SRc Block 470 - Section 1
470.400	14	#1 - Lectrosonics SRb, SRc Block 470 - Section 1
470.850	14	#1 - BTR-800 E88 RX - Communications
471.000	14	#1 - Sennheiser 3732-A - Dragonette 13h40
471.150	14	#1 - Sennheiser EM 3732-II L - La Famille Ouellette 13h35
471.350	14	#1 - Sennheiser 3732-A - Dragonette 13h40
471.500	14	#1 - BTR-800 E88 RX - Communications
472.000	14	#1 - IFB Lectrosonics T4-R1a, Block 470 - Section 1
472.400	14	#1 - IFB Lectrosonics T4-R1a, Block 470 - Section 1
473.000	14	#1 - BTR-800 E88 RX - Communications
473.150	14	#1 - Sennheiser 3732-A - Dragonette 13h40
473.300	14	#1 - Sennheiser EM 3732-II L - La Famille Ouellette 13h35
473.700	14	#1 - BTR-800 E88 RX - Communications
474.100	14	#1 - Sennheiser EM 3732-II L - La Famille Ouellette 13h35
474.250	14	#1 - Shure ULX-D G50-G51 - Jeremy Loops 14h05
474.500	14	#1 - Sennheiser 3732-A - Dragonette 13h40
474.800	14	#1 - Sennheiser EM 3732-II L - La Famille Ouellette 13h35
475.200	14	#1 - Shure PSM 1000 G10-G10E - Dragonette 13h40
482.500	16	#1 - Shure PSM 1000 G10-G10E - Dragonette 13h40
482.500	16	#4 - Shure PSM 1000 G11 - The Lumineers 20h20
482.900	16	#1 - Shure ULX-D G50-G51 - Jeremy Loops 14h05
482.900	16	#4 - Shure PSM 1000 G11 - The Underrachievers 20h00
483.300	16	#1 - Shure PSM 1000 G10-G10E - Dragonette 13h40
483.300	16	#4 - Shure PSM 1000 G11 - The Lumineers 20h20
483.450	16	#1 - Sennheiser EM 3732-II L - La Famille Ouellette 13h35
483.600	16	#1 - Shure Axient G12 - Paul Kalkbrenner Live 19h20
483.800	16	#1 - Sennheiser EM 3732-II L - La Famille Ouellette 13h35
483.950	16	#1 - Shure ULX-D G50-G51 - Jeremy Loops 14h05
483.950	16	#4 - Shure PSM 1000 G11 - The Underrachievers 20h00
484.100	16	#1 - Shure Axient G12 - Paul Kalkbrenner Live 19h20
484.400	16	#2 - Shure PSM 1000 G11 - Safia Nolin 14h45

If a frequency is used more than once, it is displayed with a gray area. It is permissible to use the same frequency more than once on the same stage by switching. There are always only three performances or sections active simultaneously on a stage, so outside of them, a frequency becomes available again.

Double-clicking on a data takes you directly to this value in the Multi-Scenes pane.

8.14 Intermodulations view

The Intermodulations module allows to display them by performance or section only:

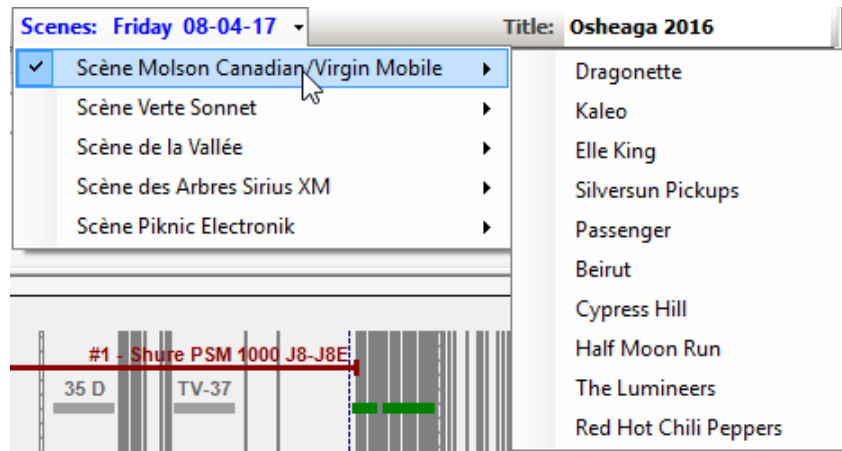


We can only show one section (the selected) because the frequencies on the other ones are not compatibles with them (outside the three), otherwise wrong intermodulations will be detected.

Just as the common group to all the scenes cannot be displayed for the same reasons.

The scanning manager (see section 5.7) supports the two data editing modes, 'Global' mode for the whole environment and 'Scene' mode independent for each scene.


The scanning manager allows you to make changes to the two modes with the context menu:

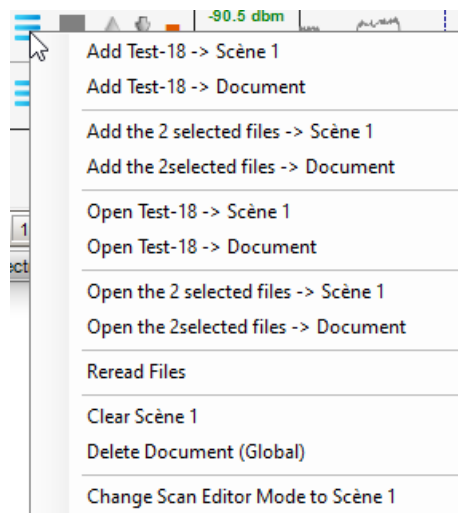


The "Change Scan Editor Mode to ..." command allows you to directly display the data contained in the "Multi-Scene" module without going through this module to access global or scene data.

8.15 Spectrum view

The Spectrum pane displays the data per event day :

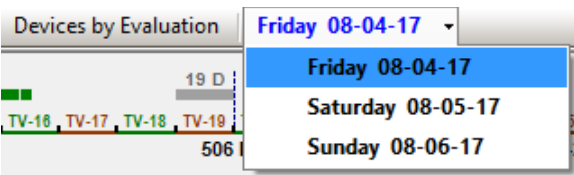

The classification of the devices by evaluation displays the list by value of allocated frequencies:

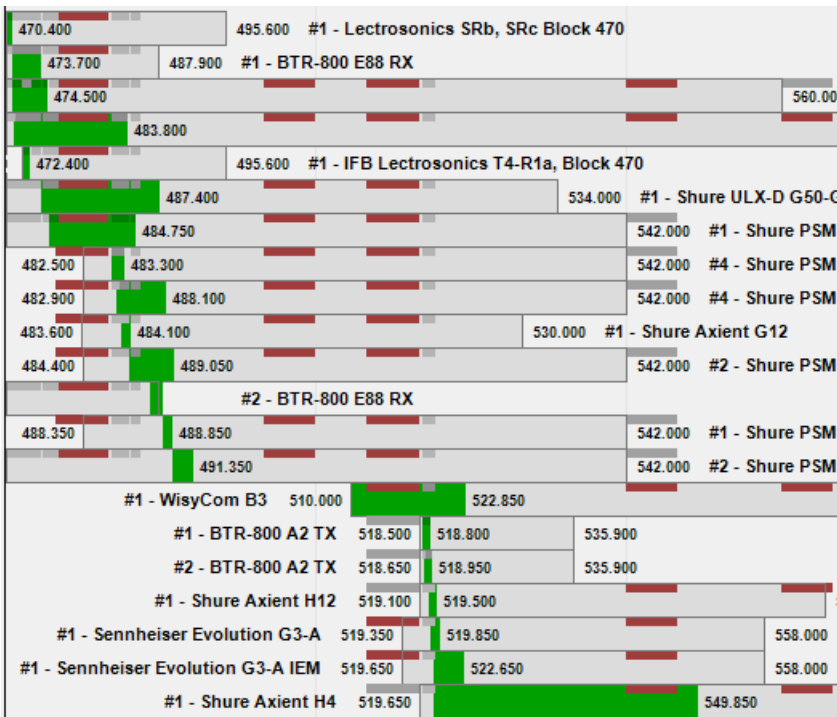

8.16 Changes in schedule



Suppose there is a change to the schedule, let's start from this situation:

Scène 1				
Section 1 2Dev - 6Fr				
#1 - BTR-800 A2 RX 4 Fr (632.100 - 633.300)				
#1 - BTR-800 A2 TX 2 Fr (518.500 - 518.800)				
Band A2				
Band A	Band B	Band C	Band D	Band E
#3 - Shure AD4D G55 2 Fr (470.125 - 470.525)	#1 - Sennheiser EM3732-II A 2 Fr (472.350 - 472.900)	#2 - Shure AD4D G55 2 Fr (471.025 - 471.625)	#1 - Sennheiser EM300 EM500 G3 A 2 Fr (519.200 - 519.700)	#3 - Shure AD4D G55 2 Fr (470.125 - 470.525)
#3 - Shure PSM 1000 J8A 2 Fr (554.000 - 554.500)	#1 - Sennheiser SR2050 IEM Bw 2 Fr (626.000 - 626.450)	#2 - Shure PSM 1000 J8A 2 Fr (555.150 - 555.950)	#1 - Sennheiser Evolution G2 Grp A IEM 2 Fr (520.300 - 520.750)	#3 - Shure PSM 1000 J8A 2 Fr (554.000 - 554.500)
2 Dev - 4 Fr	2 Dev - 4 Fr	2 Dev - 4 Fr	2 Dev - 4 Fr	2 Dev - 4 Fr
12h00-12h45	13h00-13h45	14h00-14h30	15h00-15h45	16h00-16h40

We are rehearsing in the morning and surprise Band A is not there. So, we start with Band B, followed by C and Band D is installed and ready. Installation of Band E has started. We decided to include Band A in the rehearsal, what to do Band A and Band E uses same frequencies because it should not be on stage in the same period of time.

It is necessary to modify the frequencies of Band A, but impossible with the current positioning because they are isolated. The solution: move the devices from the Band A section to a permanent section, recalculate the frequencies and move the devices back to the original section.

Move the devices from Band A to the permanent section Band A2:

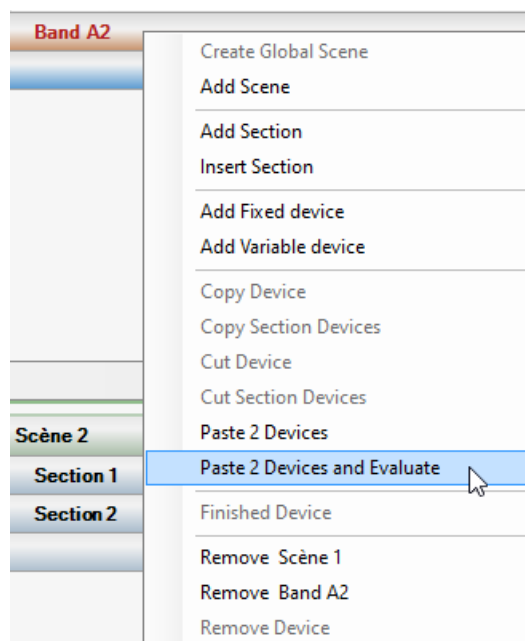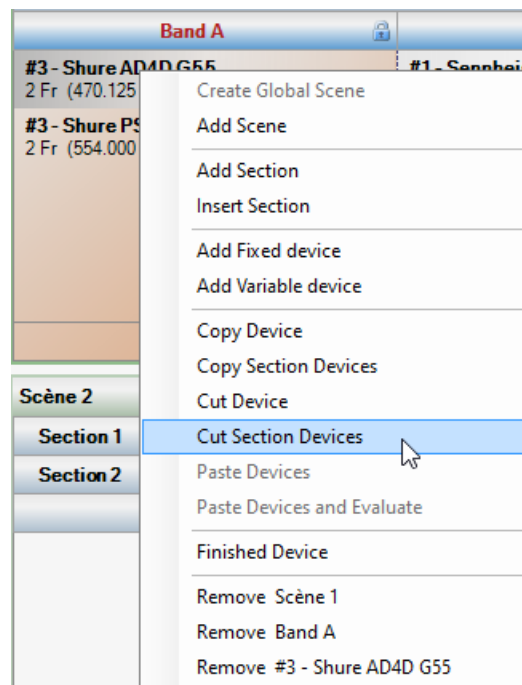

By selecting the “Paste X Devices and Evaluate” command, EazyRF places the two devices in the permanent section and recalculate the frequencies:


BandA2 2Dev-4Fr	
#3 - Shure AD4D G55	2 Fr (473.575 - 474.975)
#3 - Shure PSM 1000 J8A	2 Fr (556.900 - 558.150)


We now have frequencies compatible with the current sequence.

We can now setup Band A and the frequencies are compatible with the whole sequence of this scene. So, there may not be enough frequencies available. If you are sure that during the show Band A will perform at the right time, you can put certain bands using the same devices but not in the same space-time.


It is preferable to keep the devices moved from Band A to the permanent section during the rehearsal in case of modifications.

When the rehearsal is finished, the devices are moved to the original position:

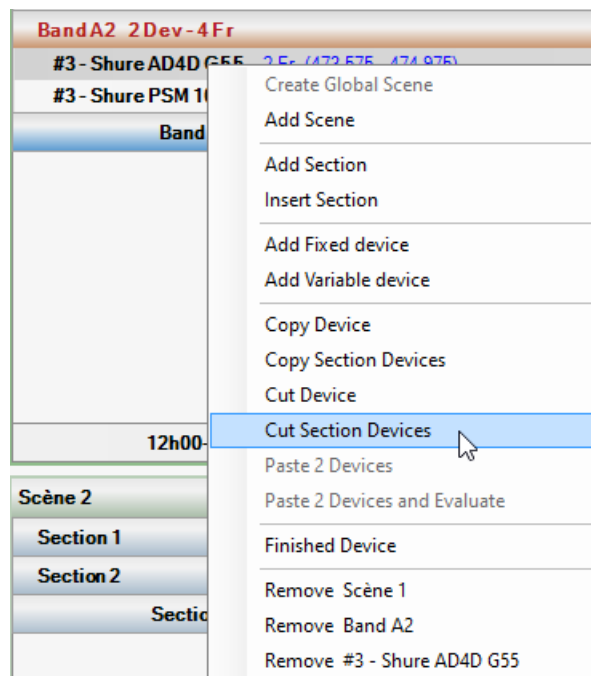

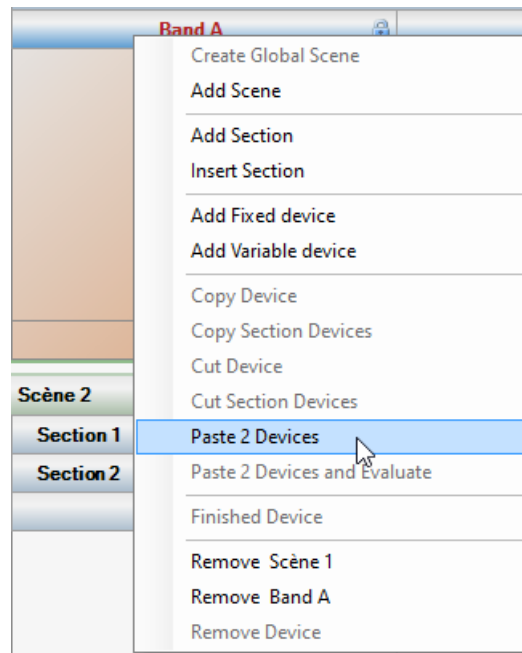


And we have compatible frequencies for the smooth running of the event:

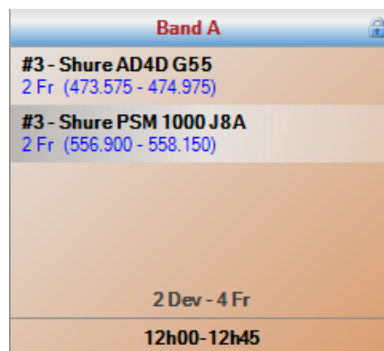

8.17 Day Completed

The “Day Completed” function of the command bar:

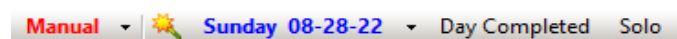

Allows you to put all performance sections in finished mode thus releasing the non-permanent frequencies of all the scenes for the selected day.

It is useless to keep the frequencies of the days prior to the current date of the event. This frees up frequencies for the present day and the days to come. In addition, this considerably reduces the number of calculations to be made, and therefore faster.

8.18 Day in Solo


The “Solo” command from the toolbar:




Allows you to put all the days of the event in finished mode, except the day displayed.

The primary purpose of this command is to find a solution to a temporary unforeseen event for the current day.

This makes it possible to find compatible frequencies for the day in question. An example, in normal mode, this device has no frequency available:

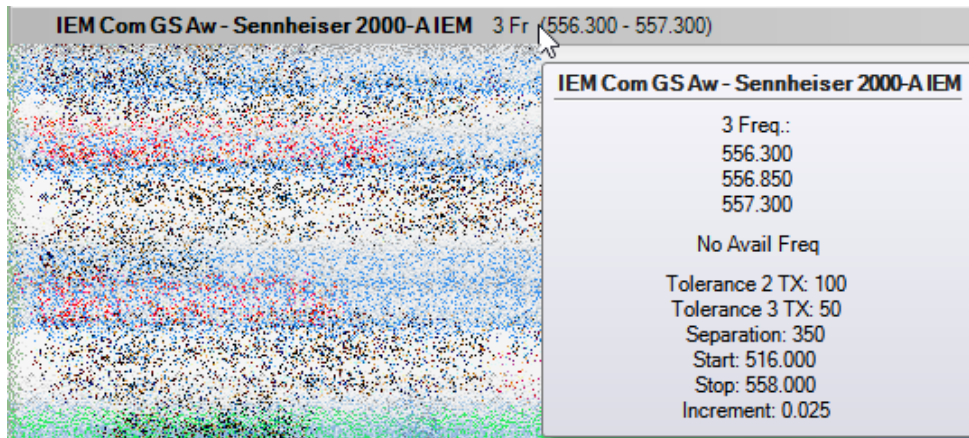

And in solo mode:

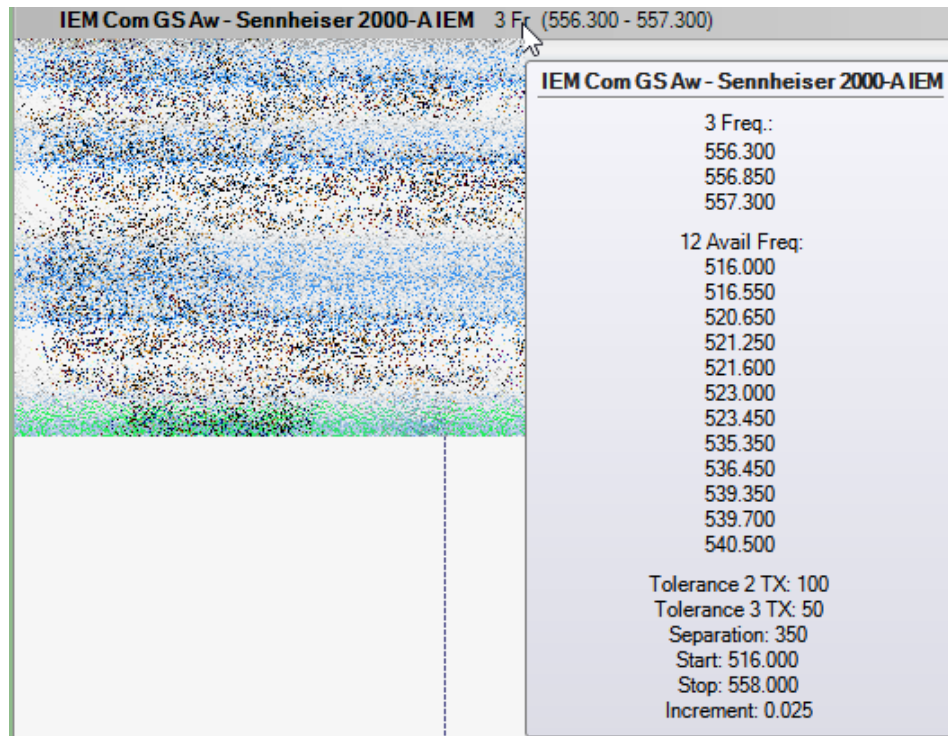

12 frequencies are now available.

These frequencies ARE NOT COMPATIBLE with the course of the following days, it is a troubleshooting solution and not a permanent solution.

8.19 Recalculate frequencies



This module makes it possible to recalculate all the frequencies of a multi-scenes document according to certain criteria, either for one or all days; for one, several or all the scenes; for permanent or performance sections only. Different evaluation methods are also available.

The primary purpose of the operation is to reuse an event under different conditions or needs. You can also recalculate the frequencies during planning if you can't find a solution.

The recalculation of frequencies is a destructive operation, there is no undoing possible. The only way to do this is to reload the document, so don't forget to make a backup before proceeding.

Let's take a look at the editor:

Recalculate the frequencies of the devices in the document

☒ Everyday ☐ Today
☒ All scenes

Scene sections
☒ Permanent
☒ Performances

Evaluation method
☒ Freq Range ☐ Random
☐ In order ☐ Number of freq per section

Order of evaluation: Selection = Descending order. 79 Devices, 360/367 Freq

Devices	Scene	Freq Range
Permanent Sections (40 Fr)		
<input type="checkbox"/> #1 - BTR-800 F1 TX (2 Fr)	Main Stage - intercom (6 Fr)	482.100 - 499.900
<input type="checkbox"/> #1 - BTR-800 F1 RX (4 Fr)		614.100 - 631.900
<input type="checkbox"/> #1 - Shure SLX L4 (2 Fr)	Green Room - com plateau (4 Fr)	638.000 - 662.000
<input type="checkbox"/> #1 - Sennheiser Evolution G2 Gp C (2 Fr)	Main Stage - com plateau (4 Fr)	740.025 - 776.000
<input type="checkbox"/> #1 - Shure UHF-R H4 (4 Fr)	Green Room - kit commun (10 Fr)	518.000 - 578.000
<input type="checkbox"/> #3 - Shure UHF-R H4 (4 Fr)	Le Bastion - kit commun (4 Fr)	518.000 - 578.000
<input type="checkbox"/> #1 - Sennheiser 2000-G IEM (2 Fr)	Green Room - kit commun (10 Fr)	558.000 - 626.000
<input type="checkbox"/> #1 - Sennheiser 2000-C IEM (2 Fr)	Main Stage - com plateau (4 Fr)	718.000 - 790.000
<input type="checkbox"/> #2 - Sennheiser 2000-B IEM (4 Fr)	Main Stage - kit commun (8 Fr)	626.000 - 698.000
<input type="checkbox"/> #2 - Sennheiser 2000-C IEM (2 Fr)	Green Room - com plateau (4 Fr)	718.000 - 790.000
<input type="checkbox"/> #2 - Sennheiser 2000-B IEM (4 Fr)	Green Room - kit commun (10 Fr)	626.000 - 698.000
<input type="checkbox"/> #3 - Shure AD4D G56 (0/4 Fr)	Main Stage - kit commun (8 Fr)	470.150 - 636.000
<input type="checkbox"/> #2 - WisyCom N IEM (0/1 Fr)	GROUPE COMMUN - Presse (4 Fr)	470.000 - 654.000
<input type="checkbox"/> #1 - WisyCom N IEM (0/2 Fr)		470.000 - 663.000
<input type="checkbox"/> #6 - Sennheiser EM3732-II N (1 Fr)		614.000 - 798.000
Friday 07-05-19 - Main Stage (56 Fr)		
<input type="checkbox"/> #2 - Shure ULXD4D H50-H51 (2 Fr)	Damso - 20h45 21h45 (8 Fr)	534.000 - 598.000
<input type="checkbox"/> #6 - Shure PSM 1000 J8-J8E (4 Fr)		554.125 - 626.000
<input type="checkbox"/> #1 - Shure PSM 1000 J8-J8E (12 Fr)	Christine & the Queens - 22h30 23h35 (16 Fr)	554.125 - 626.000
<input type="checkbox"/> #2 - Shure PSM 1000 L8-L8E (8 Fr)	Gavin James - 17h30 18h30 (14 Fr)	626.125 - 698.000
<input type="checkbox"/> #1 - Shure PSM 1000 L8-L8E (10 Fr)	Caravan Palace - 19h 20h (18 Fr)	626.125 - 698.000
<input type="checkbox"/> #2 - Sennheiser EM6000 A5A8 (2 Fr)	Damso - 20h45 21h45 (8 Fr)	550.000 - 638.000
<input type="checkbox"/> #2 - Shure AD4Q G56 (4 Fr)	Gavin James - 17h30 18h30 (14 Fr)	470.150 - 636.000
<input type="checkbox"/> #1 - Shure AD4Q G56 (8 Fr)	Caravan Palace - 19h 20h (18 Fr)	470.150 - 636.000
<input type="checkbox"/> #1 - Shure AD4D G56 (2 Fr)	Christine & the Queens - 22h30 23h35 (16 Fr)	470.150 - 636.000
<input type="checkbox"/> #1 - Sennheiser EM3732-II L (2 Fr)	Gavin James - 17h30 18h30 (14 Fr)	470.000 - 638.000
<input type="checkbox"/> #1 - Sennheiser EM3732-II N (2 Fr)	Christine & the Queens - 22h30 23h35 (16 Fr)	614.000 - 798.000

☐ Exclude devices with number of desired frequencies ☐ Random Freq

It looks like the editor of the recalculation of the frequencies of the global and detailed views (see section 2.13.4), the color of the name of the devices indicates the same results: blue = new frequencies, green = same frequencies and red = number of desired frequencies not found.

The "Everyday" or "Today" option allows you to redo the calculations for one day only or for all days of the event.

☒ Everyday ☐ Today
☒ All scenes

All scenes can be recalculated or selected as needed:

<input checked="" type="checkbox"/>	GROUPE COMMUN
<input checked="" type="checkbox"/>	Main Stage
<input checked="" type="checkbox"/>	Green Room
<input type="checkbox"/>	Le Bastion

The recalculation can be done for the permanent sections, or even for the performance sections only via the options of the "Scenes sections".

Scene sections
☒ Permanent
☒ Performances

The "Evaluation method" determines the criteria for classifying devices for recalculation. The default method is "Freq Range", this classifies devices according to the bandwidth of the device minus the space occupied by the TV channels.

Evaluation method
☒ Freq Range ☐ Random
☐ In order ☐ Number of freq per section

The other methods are "Random", the order is based on chance, the "In order" method respects the order of arrangement of the devices. Finally, the method "Number of freq per Sections" will class the sections that have the most frequencies on a stage in descending order, devices within the section will be ordered by bandwidth.

Regardless of the evaluation method chosen, the recalculation will always be done in the order of the days, then in the order of the scenes. In addition, permanent sections are always evaluated first (if option selected), because these frequencies must be compatible with the entire document.

The "Exclude devices with number of desired frequencies" option allows you to exclude devices whose frequencies have already been found from re-evaluation.

☐ Exclude devices with number of desired frequencies
 ☐ Random Freq
 Evaluate


A multi-scene document has a lot of devices, so protecting frequencies in a complex area can pay off.

The option "Random Freq" recalculates the frequencies of the devices randomly, so never the same result twice.

The devices can be recalculated in descending order using the selection box:

<input type="checkbox"/>	#1 - Sennheiser SR300 IEM G3 B (8 Fr)
<input type="checkbox"/>	#1 - Shure ADX5D K54 (12 Fr)
<input checked="" type="checkbox"/>	#1 - Sennheiser SR300 IEM G3 B
<input type="checkbox"/>	Set Descending Order on

Each device on the rating list can be selected and the multiscreen display is tracked simultaneously, regardless of the day.

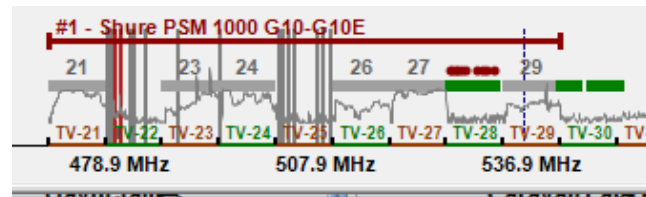

the document

Scene sections

- ☒ Permanent
- ☒ Performances

Evaluation method

- ☒ Freq Range
- ☐ In order

Order of evaluation. Selection = Descending order.

Devices	Scene
<input type="checkbox"/> #1 - Shure PSM 1000 G10-G10E (10 Fr)	Angèle - 21h30

It can be noticed that this region of the spectrum is occupied by several TV channels, so it will be quite complicated to find frequencies for devices that operate in this frequency range. Sooner or later you will have to choose a different device, and even redoing the calculations you won't be able to find a solution.

8.20 Delete data



This command calls the document data deletion module:

Clear document data
✕

☒ Everyday
☐ Today

☒ All scenes
☐ Except Permanent Sections

☒ COMMON GROUP
☒ Scene 1
☒ Scene 2
☒ Scene 3

☐ Clear frequencies from all devices
☐ Clear frequencies descriptions for all devices
☐ Reset the evaluation parameters of all devices to the basic values, except the number of frequencies
☐ Reset the number of frequencies to the base value
☐ Remove descending order from all devices Put On
☐ Remove the Done function from Days, Sections and Devices
☐ Clear all scans data
☐ Clear all Interferences
☐ Clear all TV channels (and digital radio if applicable)

Select all

Unselect all

Execute

Please note, this operation is final, there is no cancellation possible.

The operation of the module is very similar to that seen in section 2.12.4 of the “Global View” with some small additions relating to the multi-scene module.

You can choose to clear data for the displayed day or for all days of the event. We can exclude the permanent sections, so keep the data of the devices used every day and erase only those of the daily performances.

The descending order can be removed or put on the desired devices.

You can also delete the "Done" function on the selected sections.

9 - Classification

The view "Classification" displays the order of evaluation of unprotected and not off devices. If we have this document:



The "Classification" will show:

EasyRF V4.01.190709

Options About Language

Test 100 Fréq-01

Régis Banville

Classification of equipment for evaluation

No	Device - Description	Group - Section	From	To	Descending	Type	Fix. / Var.	Toler 2 TX	Toler 3 TX	Separation
1	#1 - BTR-800 E88 RX	Groupe 1 - Section 2	470.100	487.900		BTR-800	Variable	150	50	300
2	#1 - IFB Lectrosonics T4-R1...	Groupe 1 - Section 3	486.400	511.900		IFB Lectroso...	Variable	150	50	300
3	#1 - BTR-800 A2 TX	Groupe 1 - Section 2	518.100	535.900		BTR-800	Variable	150	50	300
4	#1 - Sennheiser 2000-A	Groupe 1 - Section 1	516.000	558.000		Micros	Variable	150	50	350
5	#1 - Sennheiser 3732-A	Groupe 1 - Section 1	470.000	560.000		Micros	Variable	150	50	350
6	#1 - BTR-800 E88 TX	Groupe 1 - Section 2	590.100	607.900		BTR-800	Variable	150	50	300
7	#1 - Sennheiser 3732-B	Groupe 1 - Section 1	518.000	608.000		Micros	Variable	150	50	350
8	#1 - A1-128K Lav, Hand (1-8)	Groupe 1 - Section 1	578.000	638.000		Micros	Variable	100	50	300
9	#1 - Shure UHF-R J5	Groupe 1 - Section 1	578.000	638.000		Micros	Variable	150	50	300
10	#1 - BTR-800 A2 RX	Groupe 1 - Section 2	632.100	649.900		BTR-800	Variable	150	50	300
11	#1 - Sennheiser Evolution G...	Groupe 1 - Section 3	626.000	662.000		In-Ear	Variable	300	300	500
12	#1 - Shure PSM 900-L6	Groupe 1 - Section 3	656.125	691.875		In-Ear	Variable	300	300	500
13	#1 - Shure PSM1000 L8 (62...	Groupe 1 - Section 3	626.100	697.900		In-Ear	Variable	300	300	500
14	#1 - IFB Lectrosonics T4-R1...	Groupe 1 - Section 3	819.200	844.700		IFB Lectroso...	Variable	150	50	300
15	#1 - Sennheiser Evolution G...	Groupe 1 - Section 1	830.025	866.000		Micros	Variable	150	50	350
16	#1 - Shure UHF-R X1	Groupe 1 - Section 1	944.000	952.000		Micros	Variable	150	50	300

Protected Devices

No	Device - Description	Group - Section	From	To	Descending	Type	Fix. / Var.	Toler 2 TX	Toler 3 TX	Separation
----	----------------------	-----------------	------	----	------------	------	-------------	------------	------------	------------

Devices Off

No	Device - Description	Group - Section	From	To	Descending	Type	Fix. / Var.	Toler 2 TX	Toler 3 TX	Separation
----	----------------------	-----------------	------	----	------------	------	-------------	------------	------------	------------

100 frequencies

Global View Detailed View Frequencies Plan Intermodulations Spectrum View Multi-Scenes On Tour Classification

Let us examine the list closer:

Classification of equipment for evaluation				
No	Device - Description	Group - Section	From	To
1	#1 - BTR-800 E88 RX	Group 1 - Section 2	470.100	487.900
2	#1 - IFB Lectrosonics T4-R1...	Group 1 - Section 3	486.400	511.900
3	#1 - BTR-800 A2 TX	Group 1 - Section 2	518.100	535.900
4	#1 - Sennheiser 2000-A	Group 1 - Section 1	516.000	558.000
5	#1 - Sennheiser 3732-A	Group 1 - Section 1	470.000	560.000
6	#1 - IFB Lectrosonics T4-R1...	Group 1 - Section 3	563.200	588.700
7	#1 - BTR-800 E88 TX	Group 1 - Section 2	590.100	607.900
8	#1 - Sennheiser 3732-B	Group 1 - Section 1	518.000	608.000
9	#1 - A1-128K Lav, Hand (1-8)	Group 1 - Section 1	578.000	638.000
10	#1 - Shure UHF-R J5	Group 1 - Section 1	578.000	638.000
11	#1 - BTR-800 A2 RX	Group 1 - Section 2	632.100	649.900
12	#1 - Sennheiser Evolution G...	Group 1 - Section 3	626.000	662.000
13	#1 - Shure PSM 900 L6	Group 1 - Section 3	656.000	692.000
14	#1 - Shure PSM 1000 P8	Group 1 - Section 3	710.000	790.000
15	#1 - Sennheiser Evolution G...	Group 1 - Section 1	830.025	866.000
16	#1 - Shure UHF-R X1	Group 1 - Section 1	944.000	952.000

This list shows the order of evaluation of devices in full automatic mode (unprotected devices).

The devices are sorted by Start and Stop frequency, but sometimes there is inversion to allow a device with its frequency range is narrower, to be evaluated before another which its range is wider. For example, the BTR-800 A2 TX (518.100-535.900) and Sennheiser 3732-A (470.000 to 560.000). The BTR-800 is classified before 3732-A because of its narrower range of frequencies, so it will be easier to find X frequencies of BTR if these frequencies have not been assigned to another device. The 3732-A has a much greater range, it should be easier to find frequencies for this device.


Obviously this method has its limits, when there is no possible solution, there is simply no.

Both lists of protected devices and off complete the list of devices for informational purposes only.

The list of devices of the left part of the view allows to identify a device in the right lists and vice versa by selecting it.

10 - Options

The "Options" menu allows to set the TV Channels, the Type of frequencies, the start options and default settings of a document, the list of Variables and Fixed devices, the influence of the Power level and the management of license file.

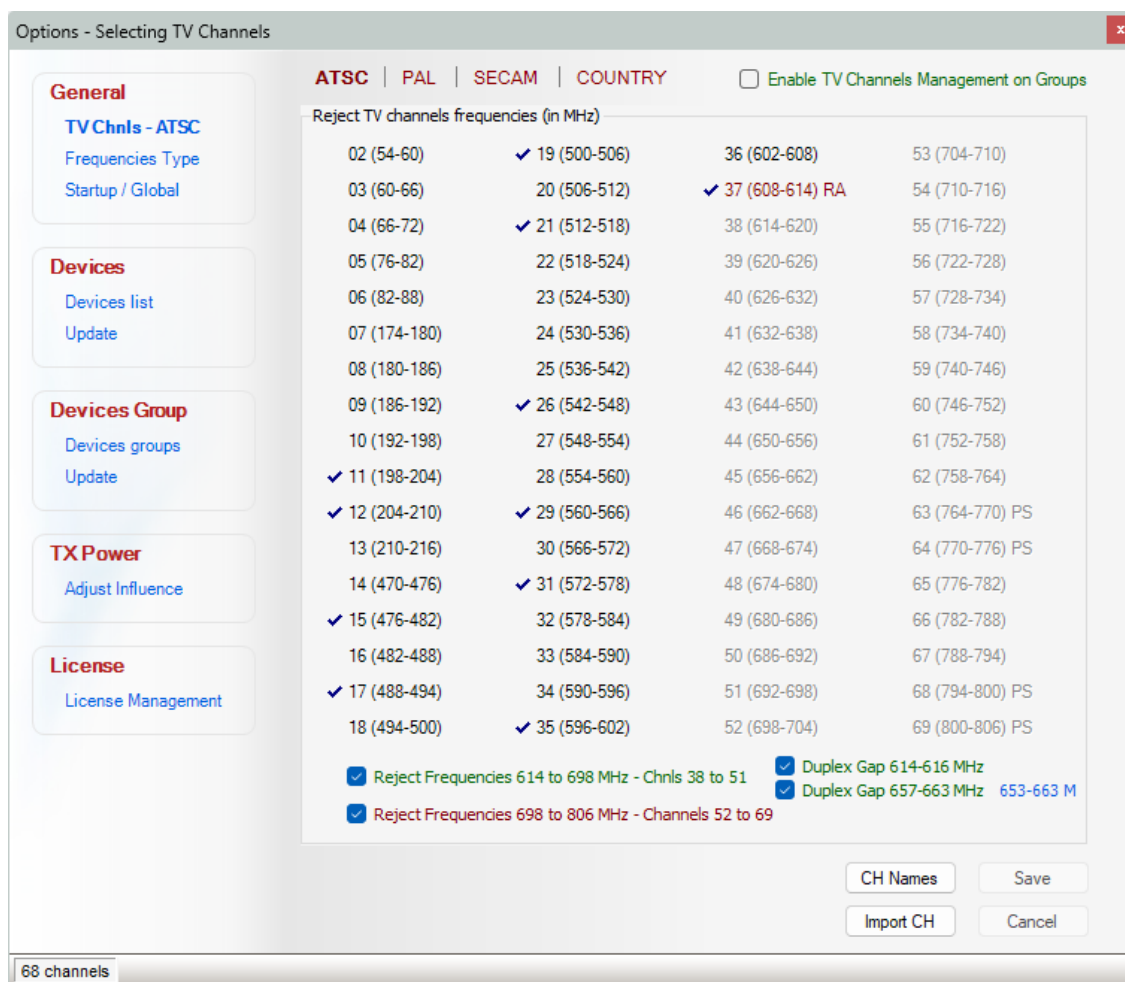

To set an option, click on the items in the list on the left side.

10.1 TV Channels

The channels of TV defined in Options are the ones used by default during the creation of a document.

EazyRF supports three main video standards of television: ATSC, PAL and SECAM.

To change standard, select one of the options:

ATSC | PAL | SECAM | COUNTRY

ATSC | PAL | SECAM | COUNTRY ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

02 (54-60)	✓ 19 (500-506)	36 (602-608)	53 (704-710)
03 (60-66)	20 (506-512)	✓ 37 (608-614) RA	54 (710-716)
04 (66-72)	✓ 21 (512-518)	38 (614-620)	55 (716-722)
05 (76-82)	22 (518-524)	39 (620-626)	56 (722-728)
06 (82-88)	23 (524-530)	40 (626-632)	57 (728-734)
07 (174-180)	24 (530-536)	41 (632-638)	58 (734-740)
08 (180-186)	25 (536-542)	42 (638-644)	59 (740-746)
09 (186-192)	✓ 26 (542-548)	43 (644-650)	60 (746-752)
10 (192-198)	27 (548-554)	44 (650-656)	61 (752-758)
✓ 11 (198-204)	28 (554-560)	45 (656-662)	62 (758-764)
✓ 12 (204-210)	✓ 29 (560-566)	46 (662-668)	63 (764-770) PS
13 (210-216)	30 (566-572)	47 (668-674)	64 (770-776) PS
14 (470-476)	✓ 31 (572-578)	48 (674-680)	65 (776-782)
✓ 15 (476-482)	32 (578-584)	49 (680-686)	66 (782-788)
16 (482-488)	33 (584-590)	50 (686-692)	67 (788-794)
✓ 17 (488-494)	34 (590-596)	51 (692-698)	68 (794-800) PS
18 (494-500)	✓ 35 (596-602)	52 (698-704)	69 (800-806) PS

☒ Reject Frequencies 614 to 698 MHz - Chnls 38 to 51
 ☒ Duplex Gap 614-616 MHz
 ☒ Duplex Gap 657-663 MHz 653-663 M

☒ Reject Frequencies 698 to 806 MHz - Channels 52 to 69

ATSC | PAL | SECAM | COUNTRY ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

02 (47-54)	19	36 (590-598)	53 (726-734)
03 (54-61)	20	37 (598-606)	54 (734-742)
04 (61-68)	21 (470-478)	38 (606-614)	55 (742-750)
05 (174-181)	22 (478-486)	39 (614-622)	56 (750-758)
06 (181-188)	23 (486-494)	✓ 40 (622-630)	57 (758-766)
07 (188-195)	24 (494-502)	41 (630-638)	58 (766-774)
08 (195-202)	✓ 25 (502-510)	42 (638-646)	59 (774-782)
09 (202-209)	26 (510-518)	43 (646-654)	60 (782-790)
✓ 10 (209-216)	27 (518-526)	44 (654-662)	61 (790-798)
11 (216-223)	28 (526-534)	45 (662-670)	
12 (223-230)	29 (534-542)	46 (670-678)	
13	✓ 30 (542-550)	47 (678-686)	
14	31 (550-558)	48 (686-694)	
15	32 (558-566)	49 (694-702)	
16	33 (566-574)	50 (702-710)	
17	34 (574-582)	51 (710-718)	
18	✓ 35 (582-590)	52 (718-726)	

☒ Reject Frequencies 695 to 865 MHz - Channels 49 to 61

☐ 695-703 MHz Guard band
 ☒ 821-832 Duplex Gap
 ☐ 863-865 MHz ISM

ATSC | PAL | **SECAM** | COUNTRY ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

02	19	36 (590-598)	53 (726-734)
03	20	37 (598-606)	54 (734-742)
04	✓ 21 (470-478)	38 (606-614)	55 (742-750)
05	22 (478-486)	39 (614-622)	56 (750-758)
06	✓ 23 (486-494)	40 (622-630)	57 (758-766)
07	✓ 24 (494-502)	41 (630-638)	58 (766-774)
08	25 (502-510)	42 (638-646)	59 (774-782)
09	26 (510-518)	✓ 43 (646-654)	60 (782-790)
10	27 (518-526)	44 (654-662)	61 (790-798)
11	28 (526-534)	45 (662-670)	62 (798-806)
12	✓ 29 (534-542)	46 (670-678)	63 (806-814)
13	30 (542-550)	47 (678-686)	64 (814-822)
14	✓ 31 (550-558)	48 (686-694)	65 (822-830)
15	32 (558-566)	49 (694-702)	66 (830-838)
16	33 (566-574)	50 (702-710)	67 (838-846)
17	✓ 34 (574-582)	51 (710-718)	68 (846-854)
18	35 (582-590)	52 (718-726)	69 (854-862)

☒ Reject Frequencies 694 to 863 MHz - Channels 49 to 69 ☒ Duplex Gap 822-830 MHz

ATSC | PAL | SECAM | **COUNTRY** ☐ Enable TV Channels Management on Groups

Reject TV channels frequencies (in MHz)

Country:

6 (174-181)	28 (526-533)	36 (582-589)	44 (638-645)
7 (181-188)	29 (533-540)	37 (589-596)	45 (645-652)
8 (188-195)	30 (540-547)	38 (596-603)	46 (652-659)
9 (195-202)	31 (547-554)	39 (603-610)	47 (659-666)
9A (202-209)	✓ 32 (554-561)	40 (610-617)	48 (666-673)
10 (209-216)	33 (561-568)	41 (617-624)	49 (673-680)
11 (216-223)	34 (568-575)	✓ 42 (624-631)	50 (680-687)
12 (223-230)	35 (575-582)	43 (631-638)	51 (687-694)

☒ Reject Frequencies 470 to 526 MHz - Channels 20 to 27

☒ Reject Frequencies 694 to 820 MHz - Channels 52 to 69


Simply select the desired channels.

10.1.1 Reject zone

An additional option allows to activate or deactivate the rejection of the frequency band reserved for commercial use in certain countries since the switch to digital television and to 4G and 5G cellular telephony.

Each rejection zone has one or more exclusion zones, i.e., zones where the use of frequencies is permitted.

In North America, the 600 MHz frequency band has moved from being allocated digital television channels to 5G cellular telephony. Here is the new attribution:

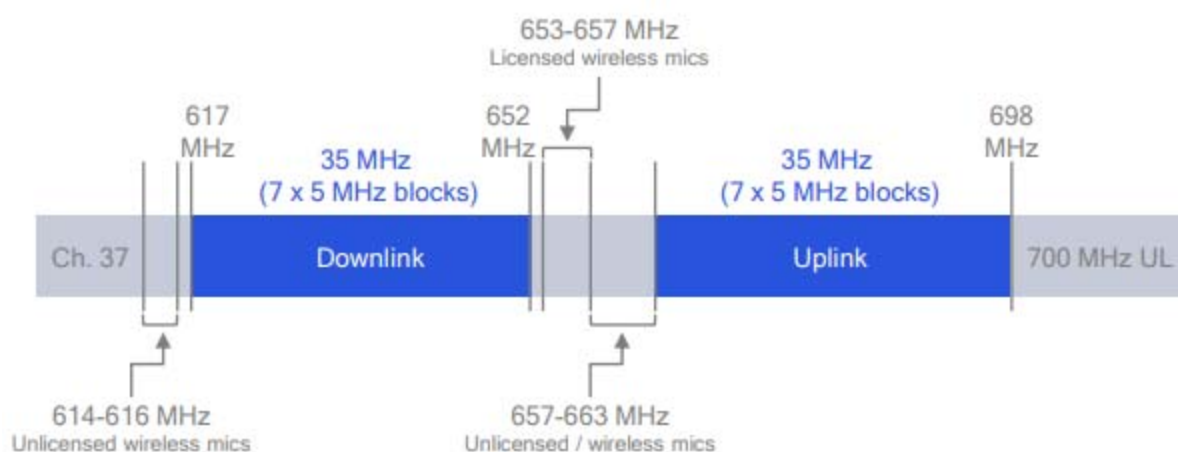

600 MHz Spectrum

The frequency zones 614-616 MHz, 653-657 MHz and 657-663 MHz remain available for the use of RF audio equipment. The 653-657 MHz zone requires a user license, therefore private.

EazyRF allows you to manage the use of these areas:

<input checked="" type="checkbox"/> Reject Frequencies 614 to 698 MHz - Chnls 38 to 51	<input checked="" type="checkbox"/> Duplex Gap 614-616 MHz
<input checked="" type="checkbox"/> Reject Frequencies 698 to 806 MHz - Channels 52 to 69	<input checked="" type="checkbox"/> Duplex Gap 657-663 MHz 653-663 M

Since the 653-657 MHz zone is not suitable for everyone, the 653-663 command alternates the size of the zone from 657-663 MHz to 653-663 MHz.

Europe does not yet use the 600 MHz zone. EazyRF uses this attribution:



With the video standard SECAM L, there is a recoverable zone of frequencies in the zone of rejection of frequencies. The entire area extends from 694 MHz to 863 MHz. However an area of 8 MHz is recoverable from 822 MHz. This area is called "Duplex Gap." This option is available upon activation of the rejection area:

☒ Reject Frequencies 694 to 863 MHz - Channels 49 to 69 ☒ Duplex Gap 822-830 MHz

10.1.2 Channels importation

You can also import TV channels from public databases for a specific location with the command:

Import CH

Import ATSC Channels (database)

Enter either a postal code, a zip code, a city name, a full address or a latitude,longitude (45.40,-73.57)

Place:

Detail: Montreal, QC, Canada (45.509, -73.553)

Distance: ☒ Km ☐ Miles

Channel	Name	City	State/Province	Distance	Power
<input checked="" type="checkbox"/> 19	CBFT R-C	Montréal	QC (CA)	3.01 km	448 Kw
<input checked="" type="checkbox"/> 21	CBMT CBC	Montréal	QC (CA)	3.01 km	436 Kw
<input checked="" type="checkbox"/> 26	CIVM T-Q	Montréal	QC (CA)	5.60 km	269 Kw
<input checked="" type="checkbox"/> 35	CFJP Noovo	Montréal	QC (CA)	3.01 km	17.7 Kw
<input checked="" type="checkbox"/> 11	CFTM TVA	Montréal	QC (CA)	3.01 km	11 Kw
<input checked="" type="checkbox"/> 12	CFCF CTV	Montréal	QC (CA)	3.01 km	10.6 Kw
<input checked="" type="checkbox"/> 15	CKMI Global	Montréal	QC (CA)	3.01 km	8 Kw
<input checked="" type="checkbox"/> 31	CFHD Ici Mtl	Montréal	QC (CA)	3.41 km	4.03 Kw
<input checked="" type="checkbox"/> 17	CJNT Citytv	Montréal	QC (CA)	2.98 km	2.07 Kw
<input type="checkbox"/> 29	CFTU C. Savoir	Montréal	QC (CA)	4.89 km	0.91 Kw

(9/10)

EazyRF is not responsible for the accuracy of public data.

Just type a location data as a postal code, a zip code, a city name, a full address, or GPS data, or latitude-longitude in the format: 54.75, -123.01 (degrees minutes must be in decimal).

If your computer has a geolocation service, the "My Location" button allows you to enter your data automatically.

The regions covered for ATSC are Canada, the US and the border area with Mexico (there is no data available for Newfoundland though). For SECAM, coverage includes France and its border regions.

The list displayed depends on the selected distance, between 50 and 200 km. The selected channels vary depending on the combination of distance and power. This suggestion is not foolproof, only the scanner can be reliable. Some channels are allocated but not used, attention to NEWDT or HDTV channels. Only digital channels are shown.

Distances can be displayed in kilometers or miles.

The choice of the desired measurement system and the default distance can be done in Options/General/Startup (see section 9.3).

Then, the command:

CH Names


Will display the following window:

Channel	Selection	Description
10 (192-198)		
11 (198-204)	✓	CFTM TVA
12 (204-210)	✓	CFCF CTV
13 (210-216)		
14 (470-476)		
15 (476-482)	✓	CKMI Global
16 (482-488)		
17 (488-494)	✓	CJNT Citytv
18 (494-500)		
19 (500-506)	✓	CBFT R-C
20 (506-512)		
21 (512-518)	✓	CBMT CBC
22 (518-524)		
23 (524-530)		
24 (530-536)		
25 (536-542)		
26 (542-548)	✓	CIVM T-Q
27 (548-554)		
28 (554-560)		
29 (560-566)	✓	CFTU C. Savoir
30 (566-572)		
31 (572-578)	✓	CFHD Ici Mtl
32 (578-584)		


OK Cancel

It is thus allowed to assign a name to a channel (and enable or disable).


This information is displayed when moving the mouse pointer:

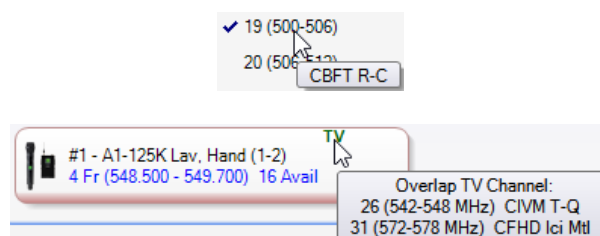

To save the system data and enable it as default values, select:

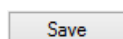

The video standard used now appears in the list of options:

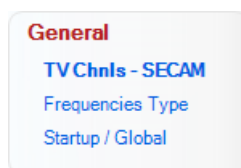

Only changes to the standard that is saved are kept.

These basic channels appear in blue in the list of local channels (Chapter 2).

10.1.3 Video standard

Here is a list of video standards used in different countries.

Country/region	Format
Afghanistan	PAL
Algeria	PAL
Antigua	ATSC
Argentina	PAL
Australia	PAL
Austria	PAL
Bahrain	PAL

Bangladeshi	PAL
Barbados	ATSC
Belgium	PAL
Bermuda	ATSC
Brazil	PAL
Brunei	PAL
Bulgaria	SECAM
Canada	ATSC
Canary Islands	PAL
Chile	ATSC
China	PAL
Colombia	ATSC
congo	SECAM
Costa Rica	ATSC
Cuba	ATSC
Cyprus	PAL/SEC
Czechoslovakia	SECAM
Denmark	PAL
Dominican Republic	ATSC
Dubai	PAL
Ecuador	ATSC
Egypt	SECAM
Ireland	PAL
El Salvador	ATSC
Ethiopia	PAL
Finland	PAL
France	SECAM
Germany	PAL
Ghana	PAL
Gibraltar	PAL
Greece	SECAM
Guatemala	ATSC
Haiti	SECAM
Honduras	ATSC


hong kong	PAL
Hungary	SECAM
Iceland	PAL
India	PAL
Indonesia	PAL
Iran	SECAM
Iraq	SECAM
Israel	PAL
Italy	PAL
Ivory Coast	SECAM
Jamaica	ATSC
Japan	ATSC
Jordan	PAL
Kenya	PAL
Korea	ATSC
Kuwait	PAL
Lebanon	SECAM
Liberia	PAL
Libya	PAL
Luxemburg	PAL/SEC
Malaysia	PAL
Malta	PAL
MAURITIUS ISLAND	SECAM
Mexico	ATSC
monaco	SECAM/PAL
Morocco	SECAM
Netherlands	PAL
New Zealand	PAL
Nicaragua	ATSC
Nigeria	PAL
Norway	PAL
Oman	PAL
Pakistan	PAL
Panama	ATSC

Peru	ATSC
Philippines	ATSC
Poland	SECAM
Portugal	PAL
Porto Rico	ATSC
Qatar	PAL
Saba, Sarawak	PAL
Saudi Arabia	SECAM
Sierra Leone	PAL
Singapore	PAL
South Africa	PAL
Spain	PAL
Sri Lanka	PAL
Sudan	PAL
Suriname	ATSC
Sweden	PAL
Swiss	PAL
Syria	SECAM
Taiwan	ATSC
Tanzania	PAL
Thailand	PAL
Trinidad	ATSC
Tunisia	SECAM
turkiye	PAL
United Arab Emirates	PAL
Uganda	PAL
UK	PAL
Uruguay	PAL
United States	ATSC
USSR	SECAM
Venezuela	ATSC
Yemen	PAL
Yugoslavia	PAL
Zaire	SECAM

Zambia	PAL
Zanzibar	PAL
Zimbabwe	PAL

10.2 Frequencies Type

The type of frequency includes three parameters:

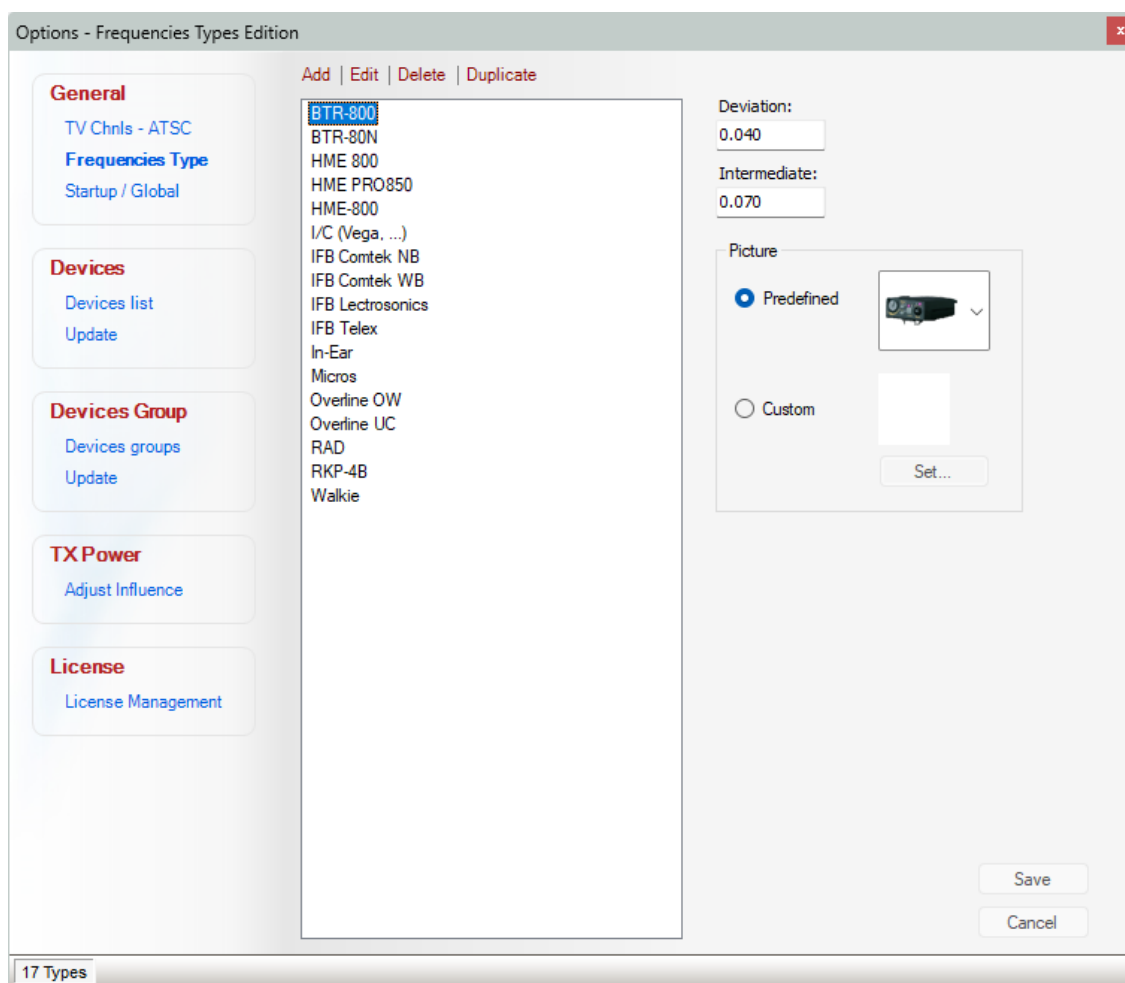

The Deviation and Intermediate parameters are related to the Frequency Modulation (FM). These parameters are determined by the manufacturer.

The image can be defined from a list included or customized as needed.

It is this image that is used in the Global view devices.

EazyRF grants a minimal importance for the parameters Deviation and Intermediate settings. Only the view "Intermodulations" still mention them.


The menu:

Add | Edit | Delete | Duplicate

Allows you to manage the items of the list.

10.3 Options Startup/Global

The following items can be set and used at start of EazyRF:

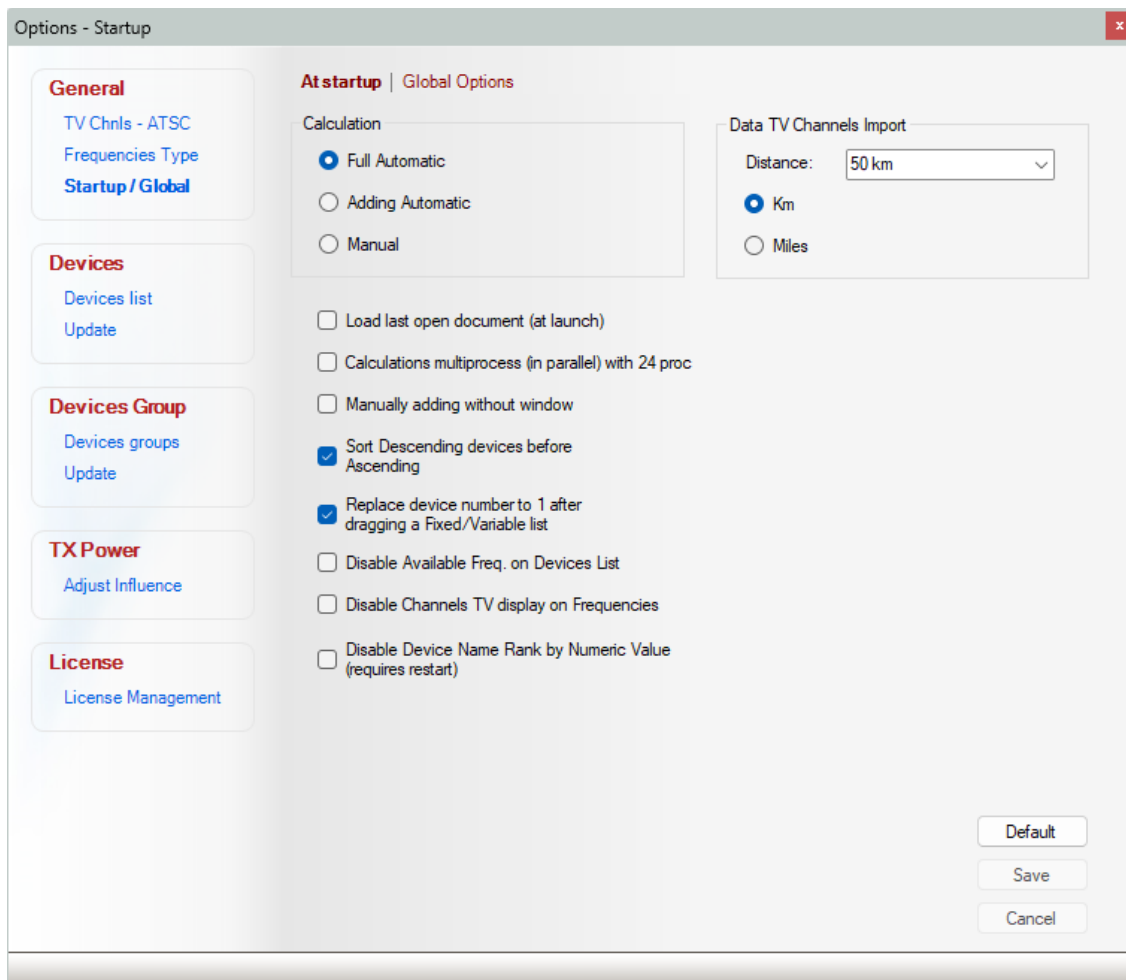

The calculation determines which mode to use at starting up and at creation of new document.

☐ Load last open document (at launch)

Reloads the last working document at start of EazyRF.

☒ Calculations multiprocess (in parallel) with 12 proc

Enable or disable the computation across multiple cores.

☐ Manually adding without window

In calculation mode "Manual" when adding a device a window appears to enter frequencies. This option allows you to add devices directly without window with 0 frequency.

☒ Sort Descending devices before
Ascending

In "Full Automatic" calculation mode, the devices are evaluated in order of growth of the start frequencies. In the case of the evaluation of a device in descending order, the starting value calculations is found to be the stop frequency. This option is used to reverse the order of evaluation.

☒ Replace device number to 1 after
dragging a Fixed/Variable list

In global and detailed views the number of devices added simultaneously can be defined (X1 or Xx), this option resets the counter to 1 or retains its value (see chapter 2).

☐ Disable Available Freq. on Devices List

Turns off the calculation of available frequencies in the global and detailed views when the mouse cursor is positioned on the name of a device. If your computer is not fast enough, this option will give more fluidity (see Chapter 2).

☐ Disable Channels TV display on Frequencies

This option disables the display of a TV channel number for the frequency:

632.100	41
632.400	41
632.850	41
633.450	41

☐ Disable Device Name Rank by Numeric Value
(requires restart)

The name of the devices with a number are listed in order of numerical value (example: Shure PSM 900, Shure PSM 1000). This option allows to classify the devices alphabetically (1000 above 900).

The section:

Data TV Channels Import

Distance: 50 km ▼

☒ Km

☐ Miles

Sets the default settings for import of TV channels via public databases (see section 9.1).

The second part of Startup/Global determines the evaluation parameters of frequencies:

At startup | **Global Options**

Default values

Tolerance 2 TX: 100 kHz

Tolerance 3 TX: 50 kHz

Tolerance 5th Order: 50 kHz

Separation: 300 kHz

Image: 10.70 MHz

Filter: 16.00 MHz

Digital TV Channels

Reject Freq on each side: 0.500 MHz

Interferences

Reject Freq on each side: 0.300 MHz

Scans

☒ Reject Freq if level greater than (-50 à -89): -60 dbm

☐ Disable Available frequencies

5th Order Intermodulation

☐ Calculation active on New Document

Method: 2 TX and 3 TX

Skip Freq beyond: 32 MHz

☒ Turn on 5th Order on New Device

Interrelationship between independents groups

Minimum spacing: 0 kHz

Random evaluation

☐ Separation until: 2000 kHz

☒ Keep Freq already evaluated

Intermodulations View

Skip IM beyond: 500 kHz from carrier

☐ Print Summary / Document Detail

☐ Auto Start Var Dev

Default

Save

Cancel

[Values used on new document only](#)

All these parameters are used when creating a new document. Local Options window allows you to adapt them to his document (section 2.5.4).

The "Print Summary / Document Detail" option displays or not the document summary and device details (tolerance, separation, etc.) when printing.


"Auto Start Var Dev »enables / disables the automatic value of the start frequency of a variable frequency device. During the automatic evaluation of the devices, these are classified in order of departure (in reality it is a little more than that), with this option the evaluation is done in this way: the first device keeps its frequency of original start, the first different device will use a higher starting frequency than the last frequency of the previous device with an automatic deviation. A small example:

Group 1 - Section 1			Group 1 - Section 1		
#1 - BTR-800 E88 RX	4 Fr 470.100 - 471.300	470.100 - 487.900	471.300	487.900	#1 - BTR-800 E88 RX
#1 - beyerdynamic TG 1000 A	2 Fr 536.400 - 536.900	470.100 - 788.900		536.900	


Instead of:

Group 1 - Section 1			Group 1 - Section 1		
#1 - BTR-800 E88 RX	4 Fr 470.100 - 471.300	470.100 - 487.900	471.300	487.900	#1 - BTR-800 E88 RX
#1 - beyerdynamic TG 1000 A	2 Fr 471.900 - 472.650	470.100 - 788.900	472.650		


This method of evaluation allows to leave a little space between the devices if possible.



This option allows you to deactivate the calculation of available frequencies when creating a new document (used for opening an IAS file). This option can be reactivated in the global and detailed view.

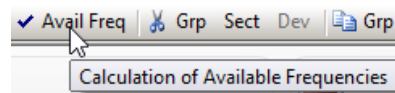

Finally, if you have a "Multi-Scene" license, an additional option appears when the "Options" module is called from the "Multi-Scene" view:

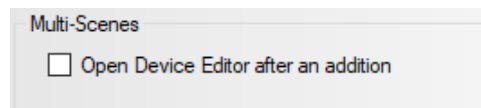

This option automatically opens the device editor when each device is added.


10.4 Devices

The list of "Fixed Frequencies" devices and the list of "Variable Frequencies" devices have been merged with EazyRF version 4.

A new file format has been created with the extension .lst4. The old file format (.lst) can be read by EazyRF.

To convert the old device file to the new format, EazyRF offers two solutions. The first one should be used after the installation of EazyRF. Just copy the old file into the new installation directory (from C:\Program Files (x86)\EazyRF V3.2 to C:\Program Files (x86)\EazyRF V4). Then you have to rename the file Devices.lst4 (to your taste), otherwise this one will be open by default at the launch of EazyRF. EazyRF opens the Devices.lst file and converts it to the new format and saves it as Devices.lst4

The second method is to use the device update module and open the old device lists:



See the next section for using the device update module.

The edition of the list of devices changes according to the type of devices (variable or fixed):

Options - Devices List Edition

Add Var Add Fix Duplicate Edit Delete

General

TV Chnls - ATSC

Frequencies Type

Startup / Global

Devices

Devices list

Update

Devices Group

Devices groups

Update

TX Power

Adjust Influence

License

License Management

TV Mipro ACT-818 5UA

Mipro ACT-818 6UA

TV Mipro ACT-828 5NU

Mipro ACT-828 5UA

Mipro ACT-828 6UA

TV Mipro ACT-848 5NU

TV Mipro ACT-848 5UA

Mipro ACT-848 6UA

Overline OW RX

TV Overline OW TX

Fix Overline RX Essential plan A

Fix Overline RX Essential plan B

Fix Overline RX M34

Fix Overline RX R41

Fix Overline RX R46

Fix Overline RX R47spe

Fix Overline RX R48

Fix Overline RX R50

Fix Overline RX R52

Fix Overline RX R57

Fix Overline RX R59

TV Fix Overline TX Essential plan A

TV Fix Overline TX Essential plan B

TV Fix Overline TX T23

TV Fix Overline TX T25

TV Fix Overline TX T26

TV Fix Overline TX T30

TV Fix Overline TX T30m

TV Fix Overline TX T33

TV Fix Overline TX T36

TV Fix Overline TX T38

TV Fix Overline TX V

Fix PSM-200

Fix PSM-400

Model

☒ Source

☐ Based on:

Type:

Overline UC

Dev: 0.075, Inter: 0.100

Power Level:

1

Simult Freq Nb

1

☒ Selectable

Fréq.	CH
485.150	1
485.875	2
487.025	3
487.875	4
488.400	5
489.350	6
490.000	7
491.100	8
491.525	9
492.750	10
493.700	11
495.025	12
495.875	13

(22)

Tolerance 2 TX:

200

Tolerance 3 TX:

150

Separation:

1000

1-50 mw

2 TX: 0 kHz

3 TX: 0 kHz

5 TX: 0 kHz

Image Frequency:

If undefined, none

Filter:

24.00

TV Channels:


17 (488-494 MHz) CJNT

19 (500-506 MHz) CBFT

Save


Cancel

1184 Devices

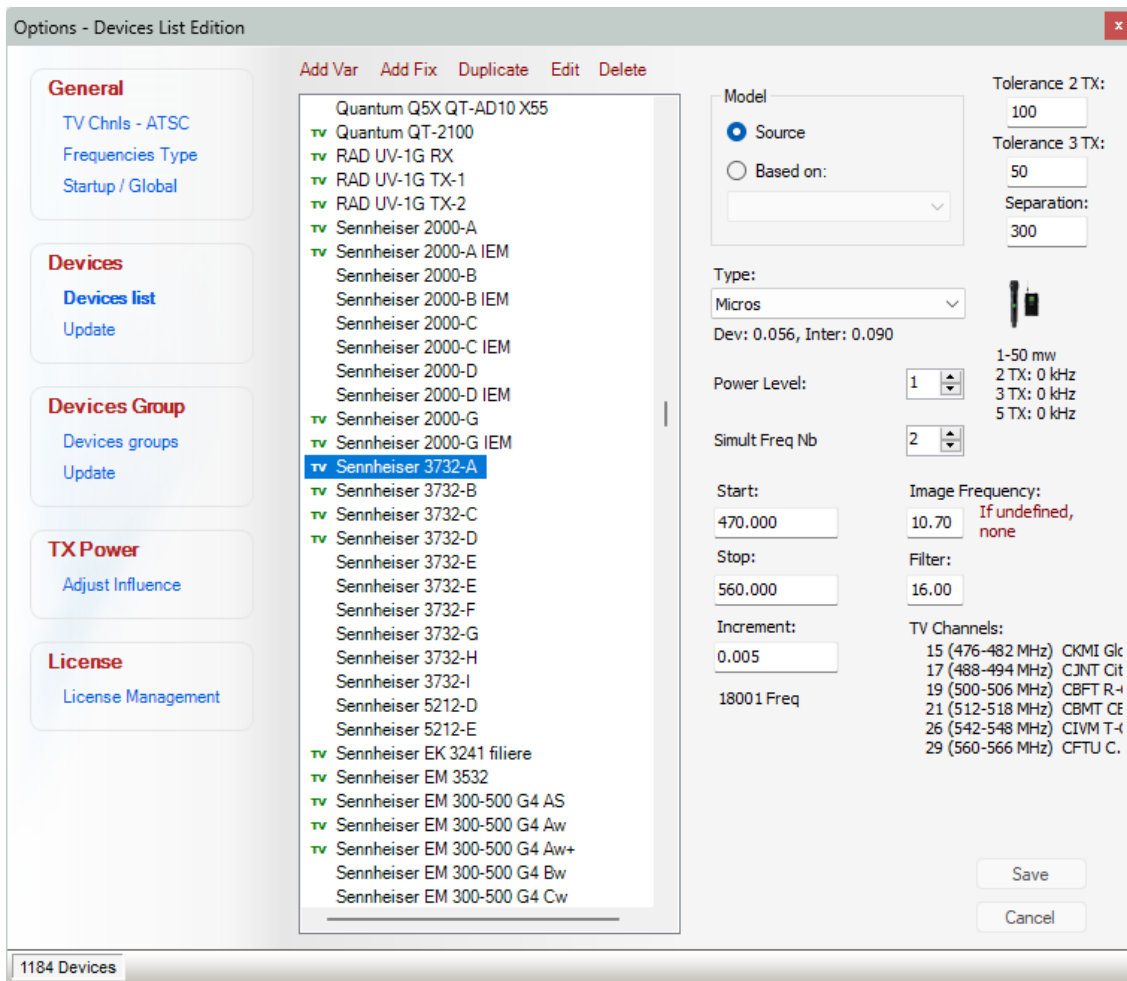

A fixed frequency device has only a few selectable frequencies (it is not programmable).

The editor allows to manage these devices by defining their list of frequencies and channels:

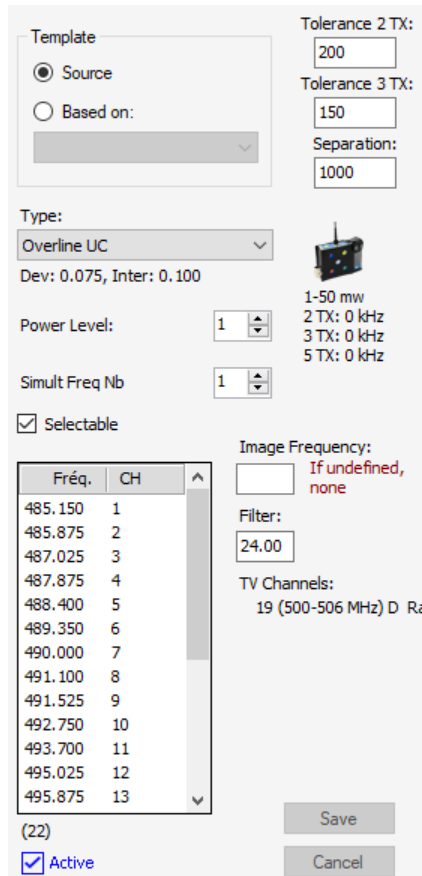

Template

☒ Source

☐ Based on:

Type:

Overline UC

Dev: 0.075, Inter: 0.100

Power Level: 1

Simult Freq Nb: 1

☒ Selectable

Fréq.	CH
485.150	1
485.875	2
487.025	3
487.875	4
488.400	5
489.350	6
490.000	7
491.100	8
491.525	9
492.750	10
493.700	11
495.025	12
495.875	13

(22)

☒ Active

Tolerance 2 TX: 200

Tolerance 3 TX: 150

Separation: 1000

Image Frequency: If undefined, none

Filter: 24.00

TV Channels: 19 (500-506 MHz) D R

Save

Cancel

If one of these frequencies is included in one of the active television channels, a list will indicate it.

A device can be defined as the base model (the first in the chain). Another device can be created from a base model and inherited from its frequencies (used for case numbers).

The frequency type uses the predefined types previously (section 9.2).

Tolerance values are the accepted intermodulation limit values for this device. Separation is the minimum distance between two frequencies.

The power level can vary from 1 to 4, with 1 being the normal level. This level influences the rejection of intermodulations according to the transmission power (see section 9.7). The displayed match (Tolerance values) is the value of the global parameters.

The number of frequencies is the number of frequencies to be found when adding to one of the views.

The image frequency is an intermediate frequency used during demodulation with older devices. As a result, it was impossible to differentiate two carriers separated from the value used (10.7 MHz was the norm). This value is optional (if not defined, unused).

The filter of the device represents the difference of the frequencies supported during the calculations. For a value of 16 MHz, the frequencies between the carrier minus 16 MHz and the carrier plus 16 MHz will be used in the calculations. A bit like an electronic filter.

It is possible to copy a frequency list from Excel. The value of the frequency must be on the 1st column and the value of the channel on the 2nd column. You must move both columns simultaneously.

In addition, Excel must be started in administrator mode (shortcut settings, advanced).

The "Active" command is used to activate / deactivate a device.

When a device is turned off, it no longer appears in the Add Devices list. Thus, instead of removing a device from the list, it can simply be disabled and remain in the list.

The names of disabled devices are displayed in gray.

To activate / deactivate several devices continuously, make sure that the list of devices has keyboard focus (the selection border has a fine dashed border). Use the following keys on the keyboard to make changes: "Enter" toggles the value Active, "+" (keypad or + / =) to activate the value Active and "-" (keypad - / _)" allows to disable the Active value. The next device is automatically selected and the operation is ready to be repeated.

The commands :

Add Var Add Fix Duplicate Edit Delete

Manage the items in the list.

The editing of variable frequency devices is different:

Template

☒ Source

☐ Based on:

Type:

Micros

Dev: 0.056, Inter: 0.090

Power Level: 1

Simult Freq Nb: 2

Start: 470.000

Stop: 560.000

Increment: 0.005

18001 Freq

Tolerance 2 TX: 100

Tolerance 3 TX: 50

Separation: 300

Image Frequency: 10.70

If undefined, none

Filter: 16.00

TV Channels:

- 15 (476-482 MHz) D Globa
- 19 (500-506 MHz) D Radio
- 21 (512-518 MHz) D CBC
- 26 (542-548 MHz) D Télé-
- 29 (560-566 MHz) D Canal

A variable frequency device has as a Start frequency, a Stop frequency and an Increment step.

Like fixed frequency devices, a variable frequency device can be defined as a basic device or based on another (and inherited from its parameters).

The parameters Model, Type, Tolerance, Separation, Power Level, Image Frequency, Filter and Number of Frequencies have the same usage as for Fixed Frequency Devices.

The Start, Stop and Increment values are the heart of this kind of device. The list of TV channels included in this data is for information only.

The "Active" command is used to activate / deactivate a device.

When a device is turned off, it no longer appears in the Add Devices list. Thus, instead of removing a device from the list, it can simply be disabled and remain in the list.

The names of disabled devices are displayed in gray.

To activate / deactivate several devices continuously, make sure that the list of devices has keyboard focus (the selection border has a fine dashed border). Use the following keys on the keyboard to make changes: "Enter" toggles the value Active, "+" (keypad or + / =) to activate the value Active and "-" (keypad - / _)" allows to disable the Active value. The next device is automatically selected and the operation is ready to be repeated.


The commands :

Add Var Add Fix Duplicate Edit Delete

Manage the items in the list.


10.5 Devices Update

This option allows to compare two lists of devices:

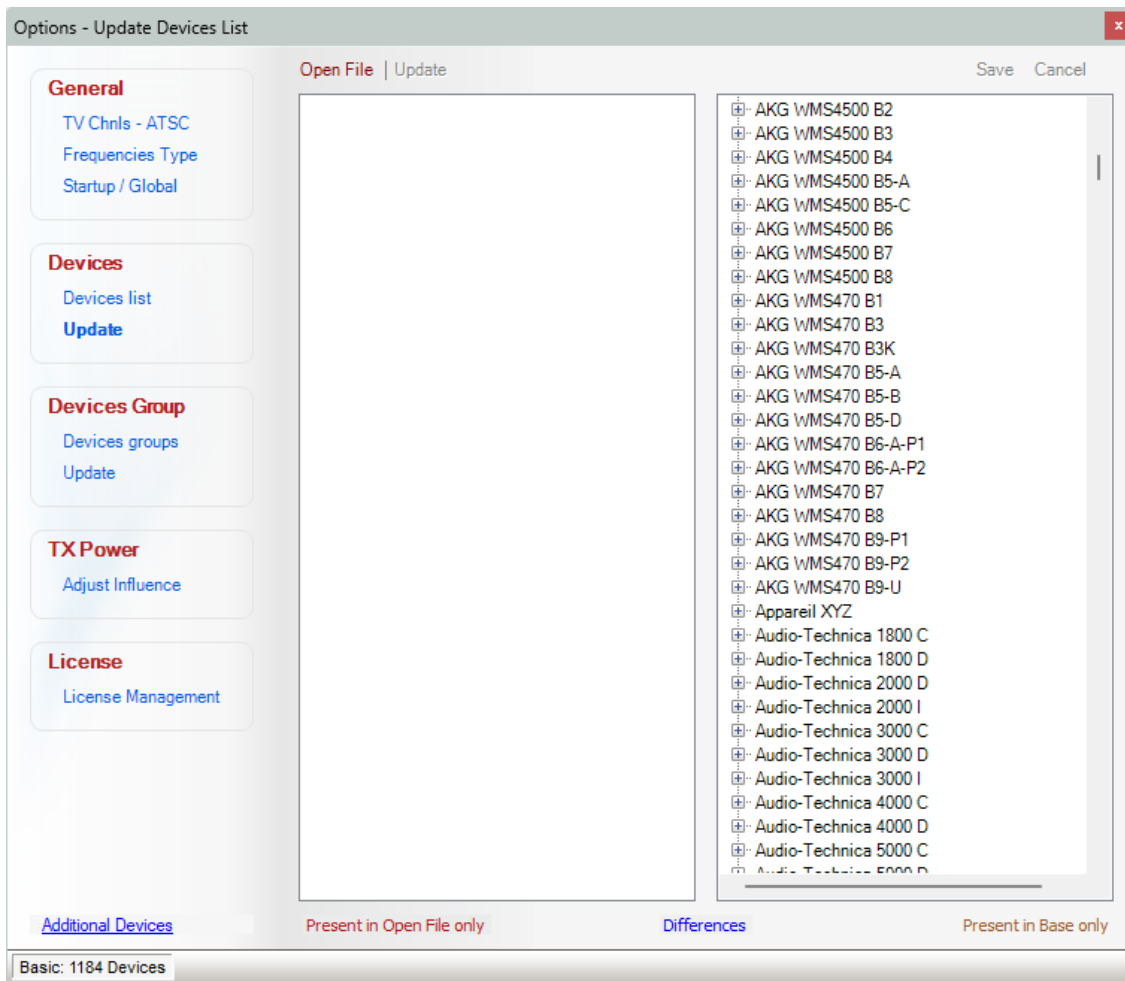

The "Additional Devices" hyperlink allows you to download additional device lists.

To start, open a list of devices with the "Open File" command. After opening:

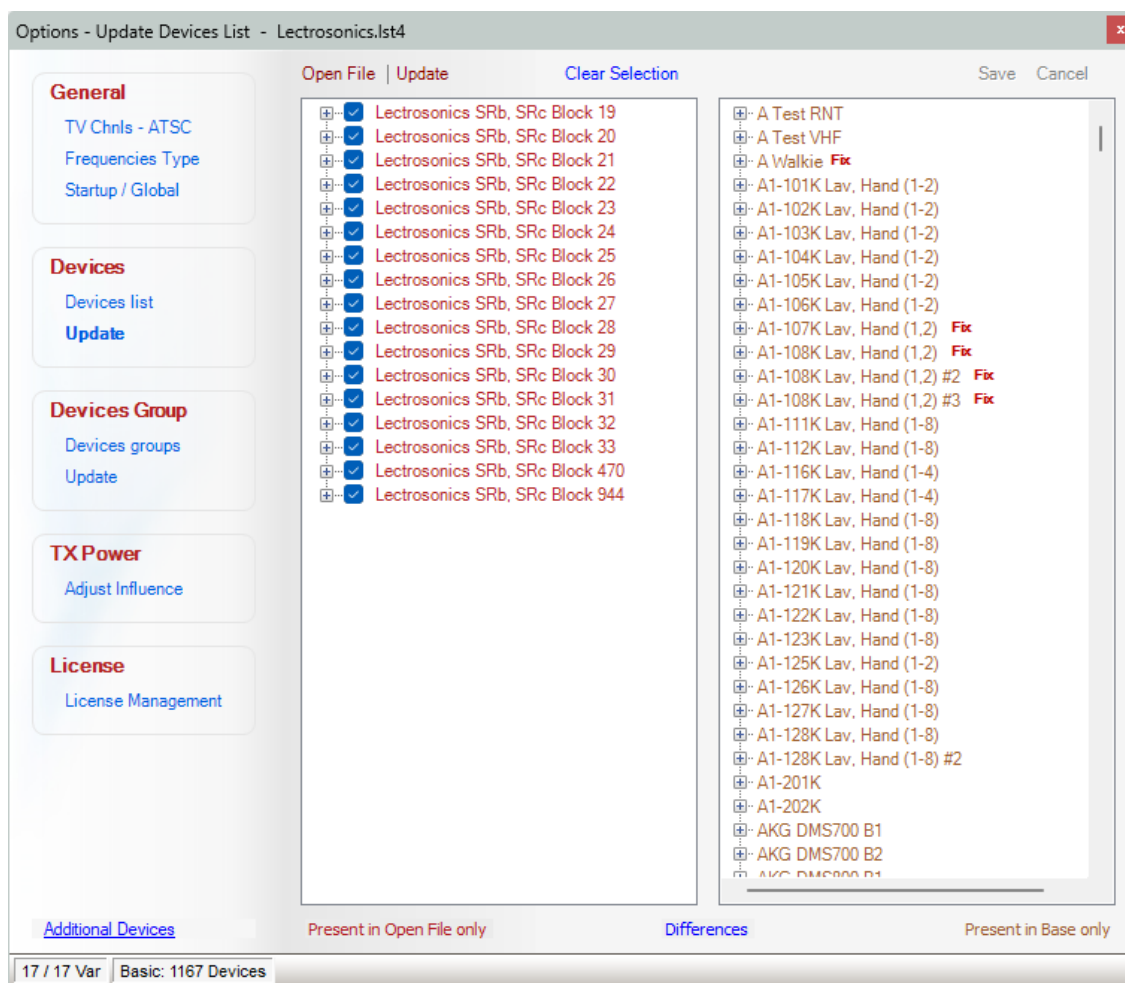

The open file is in the list on the left, the right list shows the current list of the system. Device files from version 3 (.lst) or version 4 (.lst4) can be opened.

The differences between the two lists are displayed with different colors. The devices present only in the open list are in red, the devices in the system list only are in brown. A device presents in both lists but with differences in parameters is displayed in blue. The identical devices in both lists are not displayed in the list on the left for a little more clarity.

The contents of the parameters can be examined by opening the detail of the device (+).


Devices in the open file can be selected individually before updating. By default, when a file is opened, devices that are not in the basic list are selected.

Finally, it is necessary to complete the operation by the Save command.

The update can only be made from the opened file to the list of the system, not the other way.

10.6 Additional Devices


The "Additional Devices" command calls the add-ons import module available on the EazyRF website:

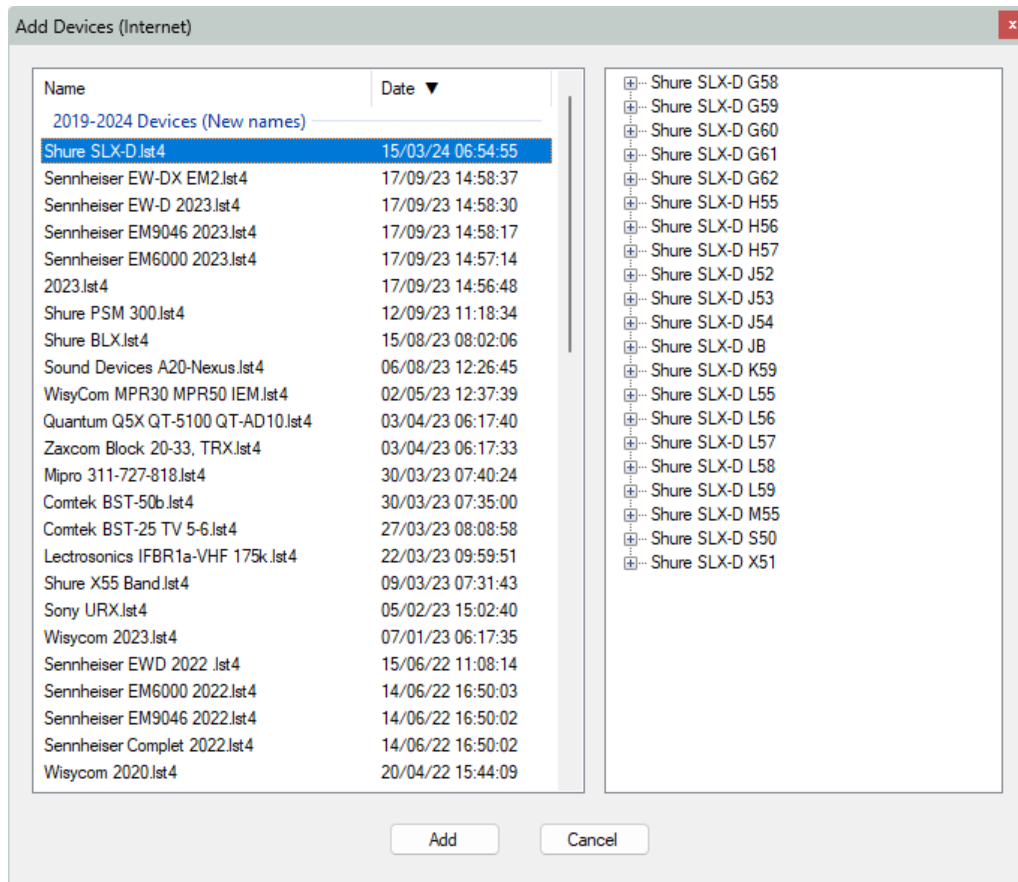

The list is split into two groups, the 2019-2020 devices (EazyRF Version 4) and the standard devices (EazyRF Version 3).

The contents of a list can be viewed on the right side of the display. Devices not in your device list appear in blue and the number of new devices is shown at the bottom of the list.

To add a list to EazyRF, just make a selection and use the "Add" command. The contents of the list are displayed in the "Devices - Update" module (section 10.5) as with the "Open File" command:

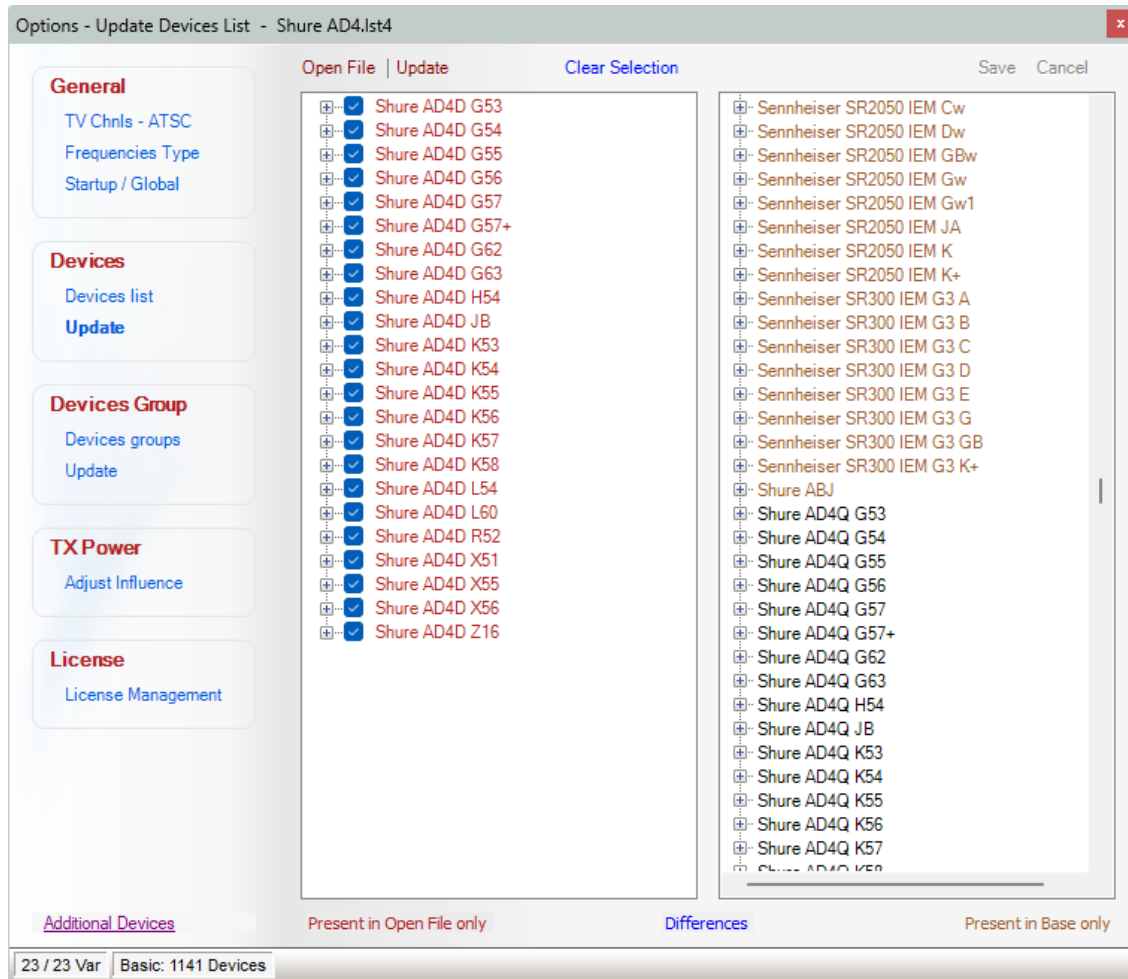


10.7 Devices group

EazyRF version 4 now offers the ability to create device groups.

A device group can contain an unlimited number of variable or fixed frequency devices. The number of devices of each type is definable. In addition, the number of frequencies of each device is changeable and the value of each frequency can be entered manually (in an existing environment).

Let's see how to manage these groups.

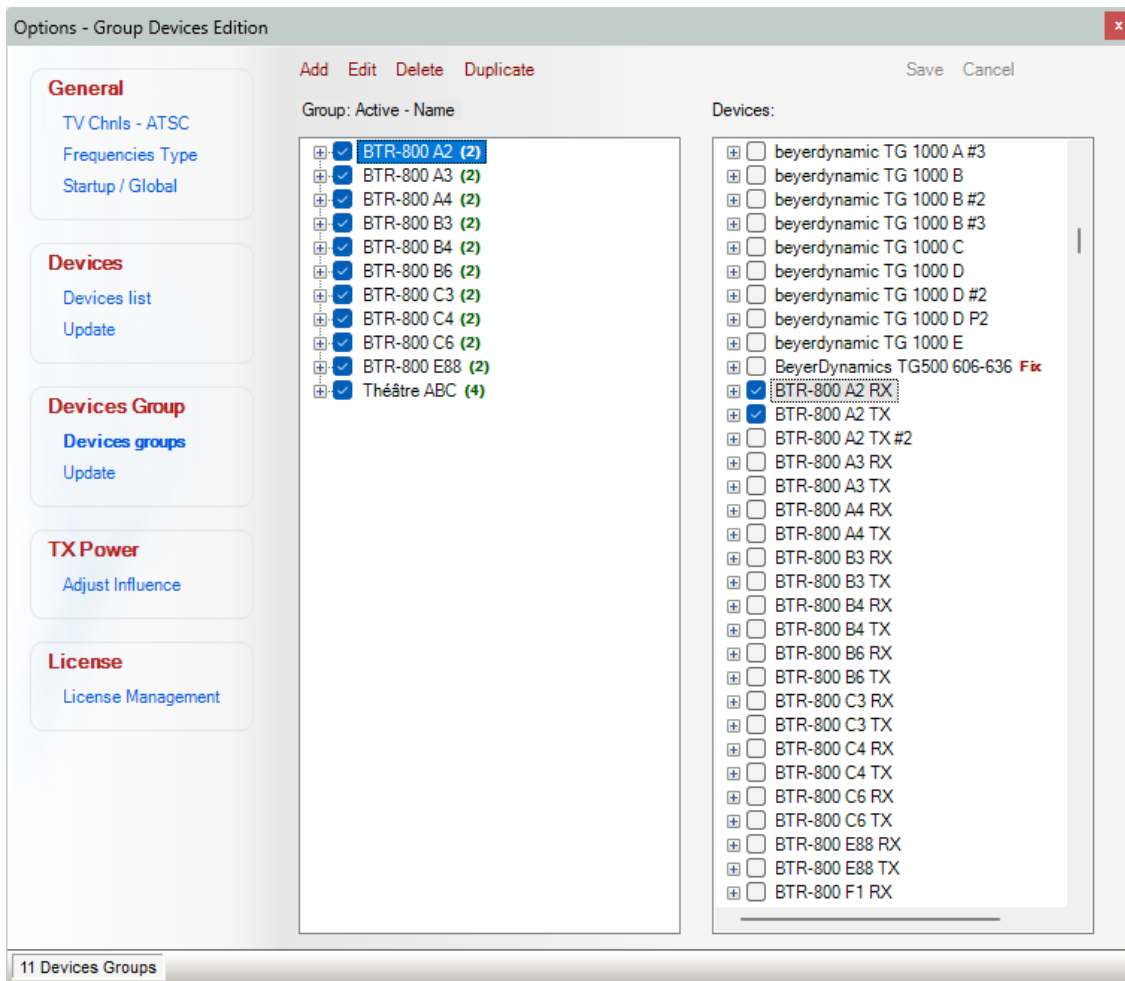

The list on the left contains all defined device groups. The list on the right contains the list of system devices (variable and fixed devices).

To add a device to a group just select it in the list on the right:



Management of the list on the left is done with these commands:

Add Edit Delete Duplicate

To change the number of devices or frequencies, double-click on the device name:

☒ Théâtre ABC (4)
BTR-800 F1 RX
BTR-800 F1 TX
IFB Lectrosonics T4-R1a, Block 19
Shure Axient J5

What calls the editor:

The 'Define Device' dialog box is shown with the following details:

- Title:** Define Device
- Device Name:** Shure Axient J5
- Frequency Range:** 578.000 - 638.000 MHz
- Devices Nbr:** 1 (dropdown menu)
- Dev No 1:** (label for the first device)
- Desc:** (text input field)
- Frequencies Nbr:** 4 (dropdown menu)
- Frequency List:** A table with 4 rows and 1 column. The first row is highlighted in blue.

1
2
3
4
- Navigation:** Left and right arrow buttons flanking the frequency list.
- Buttons:** 'Delete device', 'OK', and 'Cancel' buttons at the bottom.

When the number of devices is greater than 1, to decrease the quantity of device, it is necessary to select one of the devices by moving with the left arrows right and to use the command "Delete Device":

Define Device!

Shure Axient J5

578.000 - 638.000 MHz

Devices Nbr: 2

Dev No 2

Desc:

Frequencies Nbr: 2

1	
2	

<

>

Delete device

OK

Cancel

To set frequencies manually, simply enter the desired frequencies:

Define Device!

Shure Axient J5

578.000 - 638.000 MHz

Devices Nbr: 1

Dev No 1

Desc:

Frequencies Nbr: 4

1	
2	581.250
3	
4	

<

>

Delete device


OK

Cancel

When frequencies are set manually, EazyRF does not calculate the frequencies of this device when the group is added.

10.8 Devices group – Update

Like the device list, the device group list can be updated from a device group file. A hyperlink allows to go on the website for additional groups.

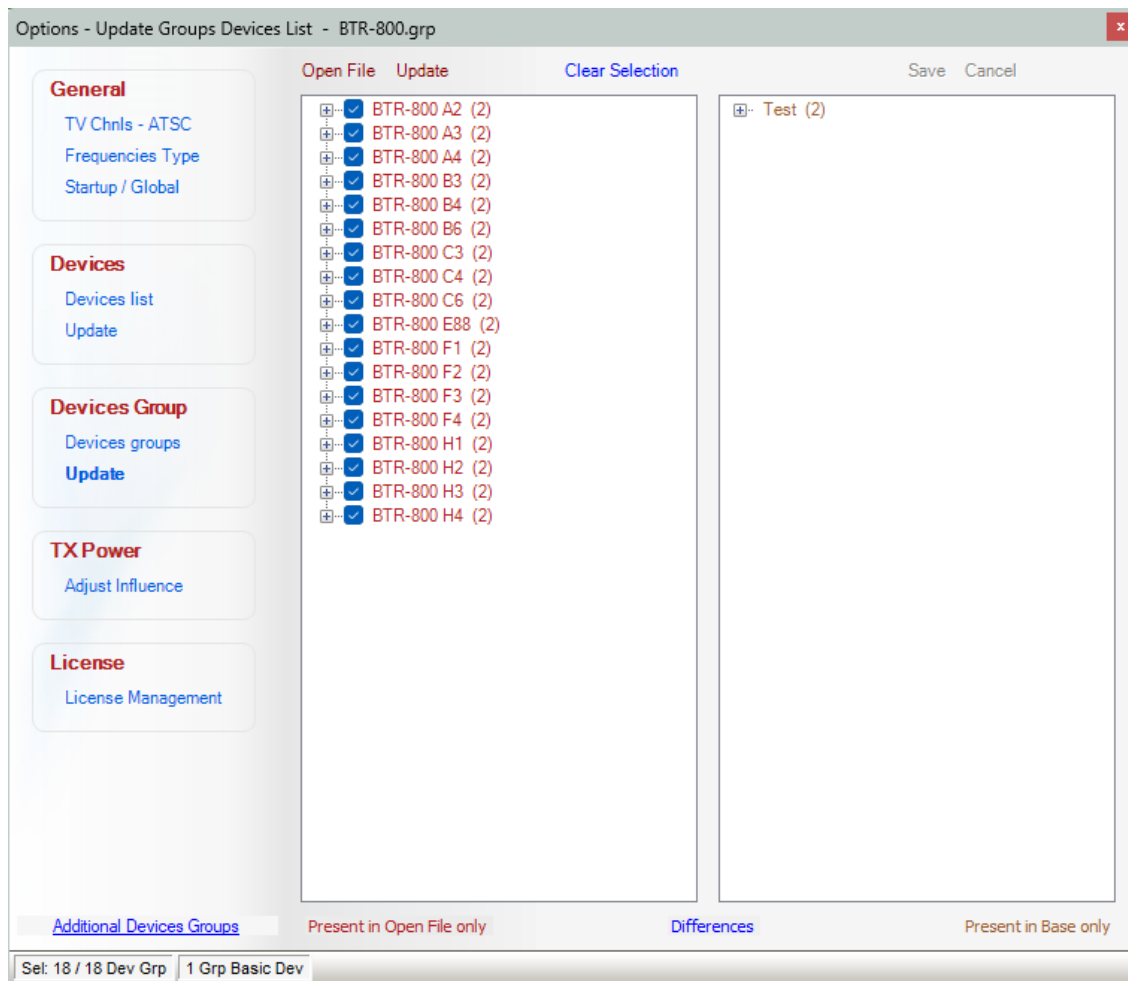

The update works like that of the devices.

The differences between the two lists are displayed with different colors. The device groups present only in the open list are in red, the device groups in the system list only are brown. A device group in both lists but with different settings is displayed in blue. The groups of identical devices in the two lists are not displayed in the list on the left for a little more clarity.

The contents of the parameters can be examined by opening the device details (+).


Device groups in the open file can be selected individually before updating. By default, when you open a file, the groups that are not in the base list are selected.

Finally, you must complete the operation with the Save command.

The update can only be done from the open file to the list of the system, never in the other direction.

10.9 Additional Devices Groups

This command allows you to import device group lists from the EazyRF website and open it in the "Devices Group - Update" module:

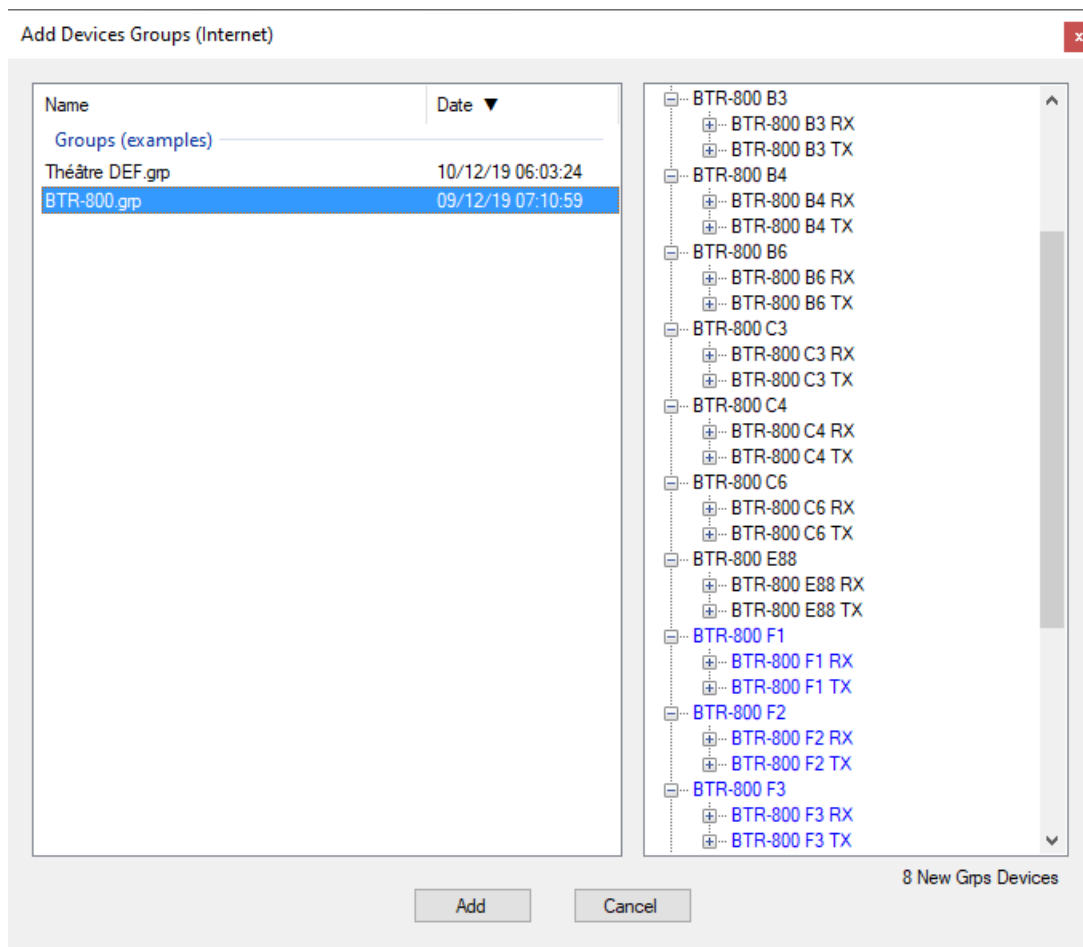

This module works like "Add-On Devices", the "Add" command is the same as opening a file (section 10.8).

10.10 TX Power – Adjust Influence

This option allows to define the influence of the transmit power level:

Options - Adjust Influence of Transmit Power

General
[TV Chnls - NTSC](#)
[Frequencies Type](#)
[Startup / Global](#)

Devices
[Devices list](#)
[Update](#)

Devices Group
[Devices groups](#)
[Update](#)

TX Power
[Adjust Influence](#)

License
[License Management](#)

Define the influence of transmit power on Tolerance of Frequency:

Power	Influence Tolerance 2 TX	Influence Tolerance 3 TX	Influence Tolerance 5 TX
Level 1 Normal (1-50 mw)	0 kHz	0 kHz	0 kHz
Level 2 Medium (51-150 mw)	<input type="text" value="25"/> kHz	<input type="text" value="25"/> kHz	<input type="text" value="0"/> kHz
Level 3 High (151-400 mw)	<input type="text" value="75"/> kHz	<input type="text" value="50"/> kHz	<input type="text" value="25"/> kHz
Level 4 Very high (> 400 mw)	<input type="text" value="125"/> kHz	<input type="text" value="75"/> kHz	<input type="text" value="50"/> kHz

[Values used on new document only](#)

Default
 Save
 Cancel

The power level of a transmitter influences a receiver.

To understand the effects of the power, let us take a small example. If the Tolerance (2 TX, 3 TX or 5th order) of a device is set at 50 kHz, this means that all the intermodulations of 50 kHz and more on both sides of the carrier will be tolerated. If one of the frequencies causing this intermodulation at 50 kHz is due to a carrier of stronger power, its effect on the reception can thus be perceptible.

To take care of these effects, EazyRF allows to add an automatic correction to the calculations of intermodulations if one of the carriers who caused this tolerated intermodulation is of stronger power.


The power was separated in four categories: Normal (1-50 mW), Medium (51-100 mW), High (151-400 mW) and Very High (more than 400 mW).

For each level, simply set a different correction for Tolerance 2 TX, 3 TX and 5 TX (5th order).

The normal level has no correction. The higher the level, the greater the influence will be marked.


Note that this modification in one of the Tolerances has not the same effect as if made directly to a receiver, because at this time it is all the frequencies of the device that will be affected, not only those of higher power level.

Let's take a small example:

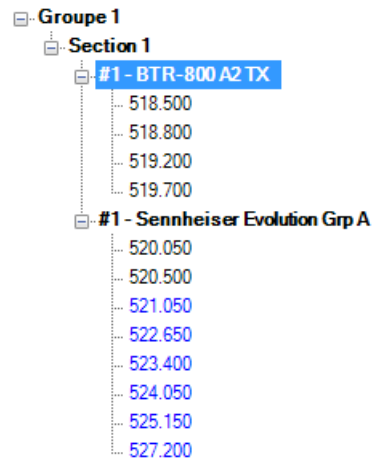


One BTR and one Evolution in the same frequency region.


With the power of TX of BTR set to level 2, the frequencies obtained are:

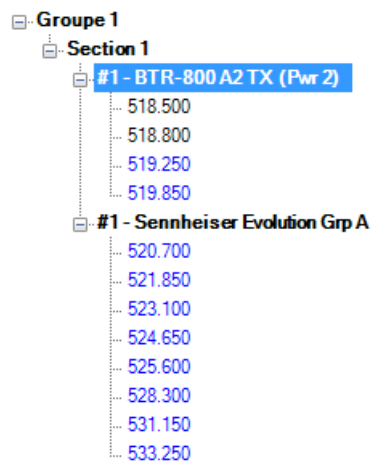

For the BTR-800, the power change gives the same results as if we change the parameters of tolerance for the device. For Evolution, the result is not the same. Before the change, the carriers of the BTR adds 3rd order intermodulation at 50 kHz (default value):

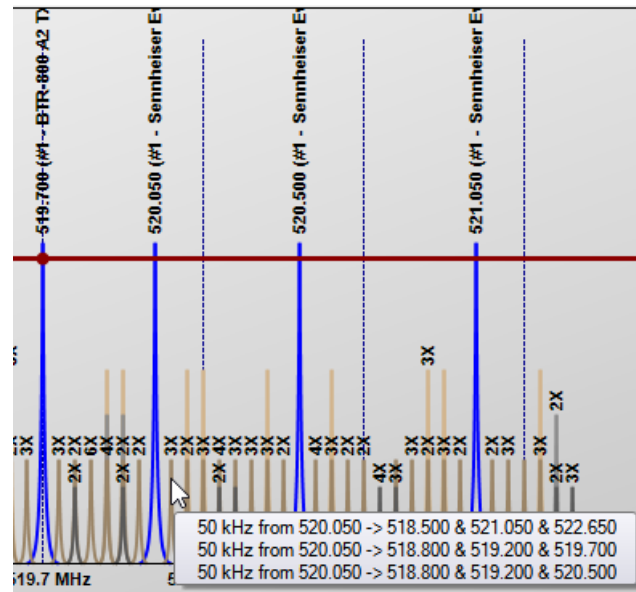


After modification of the power of the BTR we obtain:

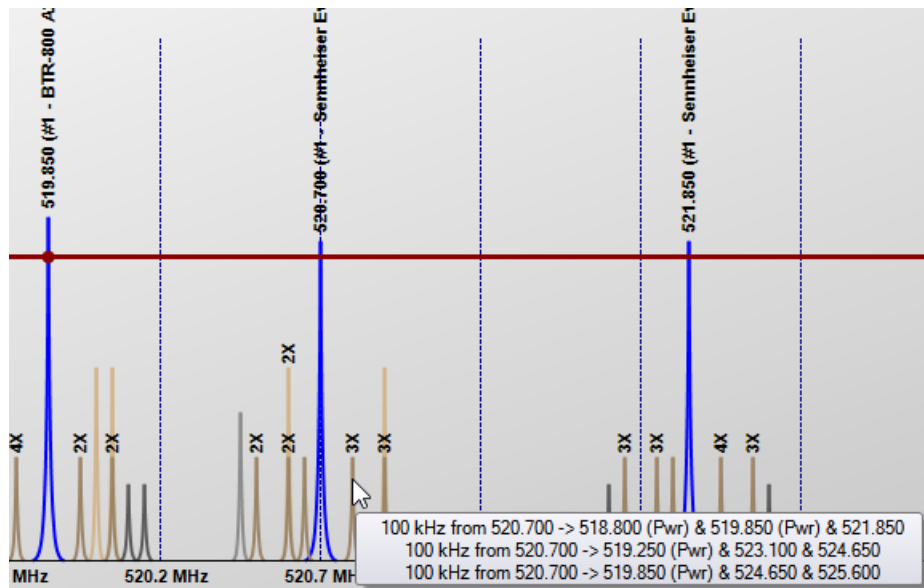

518.500 and 518.800 two frequency of the BTR cannot create any more IM in 50 kHz on the Evolution because the automatic adjustment of its effect of TX power prevents the other devices from being perturbed by those of the BTR WITHOUT CHANGING the Tolerance of the Evolution.

If we look the intermodulations of the Evolution:

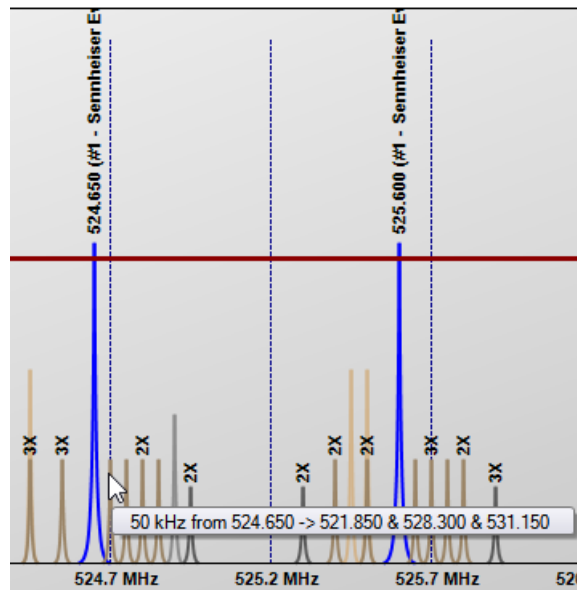


The frequencies of the Evolution (with its Tolerance to 50 kHz) influences it as intended. While the BTR has a superior influence because of its power and the effect of automatic adjustment.

We absolutely cannot recreate this effect by adjusting the tolerance of Evolution.

For each document, the parameters of TX Power can be adjusted separately by the Local Options (section 2.3).

In Global and Detailed Views, if a device has a transmit power level higher than normal, an indicator appears:



Warning: the parameters of influences of tolerance are global to a document, so if you copy a device from one document to another one, the device will take values of the document where it is pasted.

10.11 License Management

This option takes care of the management of a license file. If this menu does not appear in the Options, it is because you have an active license file.

A license file is tied to the hardware configuration (computer components). Thus, a license is valid for one and only one computer.

Using the USB remains the most flexible method, without any hardware limit.

There are two methods of creating a license file: by purchasing a new license on the website or by renewing as needed. Both methods are automated from a server that emails you a license file automatically when requesting a license file.

10.11.1 Purchase of a new license

After purchasing a license on the website eazyrf.com, you will receive an email to confirm your order. With the purchase of a license on USB key, you are entitled to a license file as well.

Remember that the license file is linked to the hardware configuration, so it is compatible with one and only one computer.

So you will receive an email confirming your purchase with the license number assigned to your name and email address, names provided during the PayPal transaction:

EazyRF V4

Frequencies calculation software for RF equipment

Hi Nouveau_client,

Your payment has been received. Thanks.

Here is your license number linked to the email address:

0000-0000-0000-0000-0000-0000

usager@email.com

First, you need to install EazyRF from the installation file: [EazyRF V4](#).

After installation, start EazyRF and accept to do the proposed update, otherwise you will not be able to continue.

If you have purchased more than one license or if your email address is not that one of the user, do not continue the installation and contact me regis@eazyrf.com

To enter your license number and your e-mail address, use the Options/License Management commands and click on "License request".

An email will be sent to the license file creation server. You should receive an email at the address provided with the license file attached.

You just have to copy the EazyRF.license file in the EazyRF installation directory, ie C:\Program Files (x86)\EazyRF V4. Restart EazyRF to activate your license.

If you have purchased a USB key, shipping details will be sent to you as soon as possible.

The invoice will be sent to you by email.

If you have any questions, do not hesitate to contact me regis@eazyrf.com

Best regards.

Regis

PS. This email was sent by an automated system that does not read incoming messages.

Thereafter, you just need to enter the license number in EazyRF, Options / License Management:

Options - Manage License

General
TV Chnls - SECAM
Frequencies Type
Startup / Global

Devices
Devices list
Update

Devices Group
Devices groups
Update

TX Power
Adjust Influence

License
License Management

Your copy of EazyRF can be activated via a license file. To apply, click the Request License button and an email will be sent to eazyrf.com. You will receive a valid license file for a single system configuration.

Hardware ID: A1BE-6BA3-3187-B757-C969 (A1BE-5D40-3187-2919-2CAC)

License No: KR 60

Your Email: regis@eazyrf.com

Username: EazyRF

License Request

After entering the license number, the email address and username will be displayed automatically from the information obtained by PayPal. You can change the username and email address. Click on "Request License". An email will be sent to the entered address with a license file attached:

EazyRF V4

Frequencies calculation software for RF equipment

Hi Nouveau_client,

You will find your license file attached for the serial number:
0000-0000-0000-0000-0000-0000

You just have to copy the EazyRF.license file in the EazyRF installation directory, ie C:\Program Files (x86)\EazyRF V4.
Restart EazyRF to activate your license.

If you have any questions, do not hesitate to contact me regis@eazyrf.com

Best regards.
Regis

PS. This email was sent by an automated system that does not read incoming messages.

10.11.2 Renewal of a license

You can now request a new license file and receive it by email a few seconds later. If you have a USB key or a license file not assigned to the computer used, the license number will be displayed automatically. Your email address will only be displayed for those who have purchased a license via the previous procedure, so during future requests only.

Options - Manage License

General
[TV Chnls - SECAM](#)
[Frequencies Type](#)
[Startup / Global](#)

Devices
[Devices list](#)
[Update](#)

Devices Group
[Devices groups](#)
[Update](#)

TX Power
[Adjust Influence](#)

License
[License Management](#)

Your copy of EazyRF can now be activated via a license file. To apply, click the Request License button and an email will be sent to eazyrf.com. You will receive a valid license file for a single system configuration.

Hardware ID: A1BE-6BA3-3187-B757-C969 (A1BE-5D40-3187-2919-2CAC)

Your Email:

No Licence:

Username:

After installing EazyRF on a new computer, if you don't have a USB key, you must copy your old license file into the EazyRF installation directory (C:\Program Files (x86)\EazyRF V4) to validate your license number and username. The license number can only be validated for new customers. The email address can be changed but not the username.

Warning: This automatic renewal procedure comes with an important restriction; you can only request a new license file on different computers at a minimum interval of 30 days in order to avoid the multiplication of active licenses simultaneously. An old license will be automatically deactivated. On the same computer used for the creation of the last license, there are no renewal restrictions.

10.11.3 Reactivating a license

If your license becomes inactive due to major changes to your system or expired, the license manager displays it to you if this situation arises. Then you have to make a license reactivation request via the manager:

Your EazyRF license file is no longer valid due to a change in your system configuration. To receive an activation code, click the Reactivation Request button and an email will be sent to eazyrf.com. You will receive an email containing an activation code, copy it to the Activation area.

Hardware ID: A681-2F49-88FF-3E74-A6D3

Your Email:

Régis Banville: 2E10-I417-A43J-782Y-305L-400H

Activation Code:

A reactivation code will be sent by email. Just copy it into the activation box and click the "Activate License" button.

Warning: if you use a virtual environment (Parallels Desktop, VMware or VirtualBox), it is easy to change the hardware configuration and thus deactivate your license (pay attention to the CPU and motherboard).

Starting always prioritizes the USB key, then the license. If neither is present, the starting is made in demonstration copy mode with 20 frequencies.

To verify the mode used, check the About window.

Starting up by key:


Licence granted to: Régis Banville
Serial Nb: 2E10-I417-A43J-782Y-305L-400H (USB key)

Starting up by license (hardware ID display):



Licence granted to: Régis Banville
Serial Nb: 2E10-I417-A43J-782Y-305L-400H (A681-2F49-88FF-3E74-A6D3)

11 - Automatic Update EazyRF

At the starting up of EazyRF, if you are connected to internet, EazyRF verify on eazyrf.com site if started version is the last on-line version. If a new version is available, a message asks you if you want to install it:

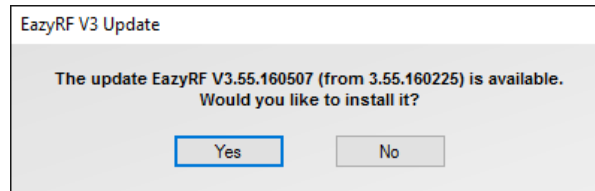


By accepting the update, the EazyRF window closes and the application update starts:

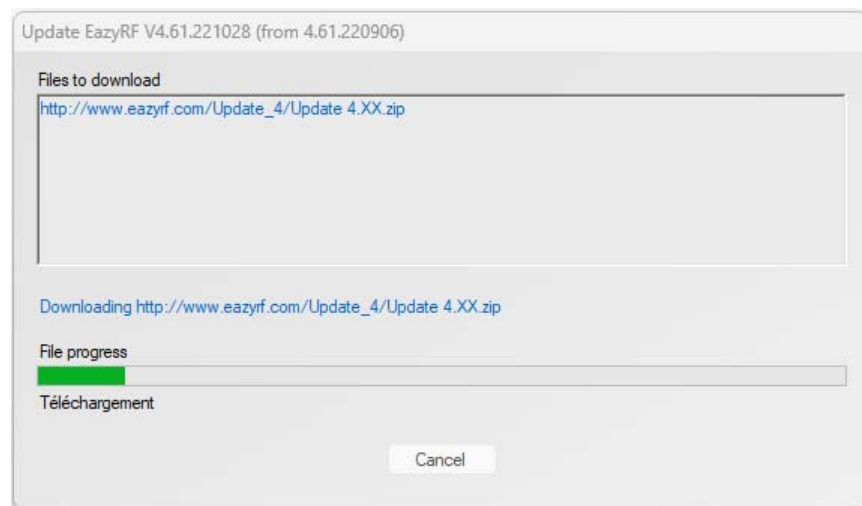

Afterward EazyRF restarts and the update is completed.

The updates sometimes are minor, sometimes more important. If the update is more important, an e-mail is sent to the users to indicate it.

After an uninstallation of EazyRF, followed by a reinstallation from the EazyRF_V4_Setup.exe file (version 4.22 of EazyRF), an option is added during the first installation of the EazyRF update. It is thus permitted to delete the following data:

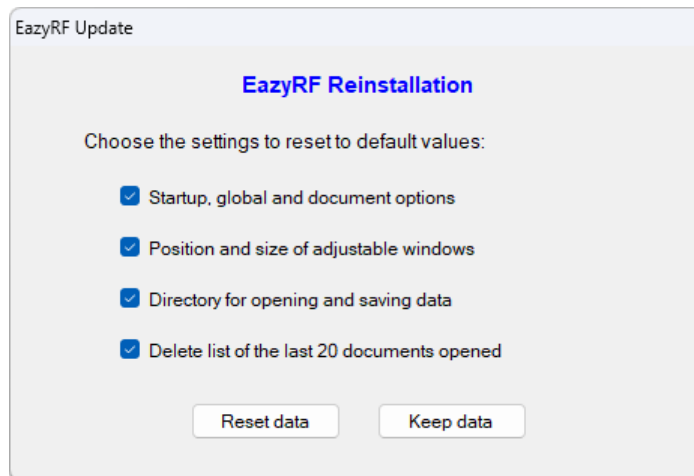

EazyRF offers you the choice of erasing some sections of the data saved during previous executions of EazyRF, i.e. the data of the options at startup (default calculation mode, default tolerance, etc.), the position and size of the windows (the windows containing sample data are all of adjustable sizes), the data directory (document and sample files, TV channels, etc.) and the list of the last 20 documents opened.


Note that the device and device group files, as well as the EazyRF global TV channel selection are never deleted during an uninstallation because this data is precious and has been carefully modified.

11.1 Renewal of Technical support

It is possible to purchase annual technical support renewal from EazyRF. Technical support includes customer support, updates, and automated license file creation.

When purchasing a license, 24 months of technical support are included. Then, the support must be renewed annually.

When there are only 28 days left before technical support expires, a new window will appear on startup:

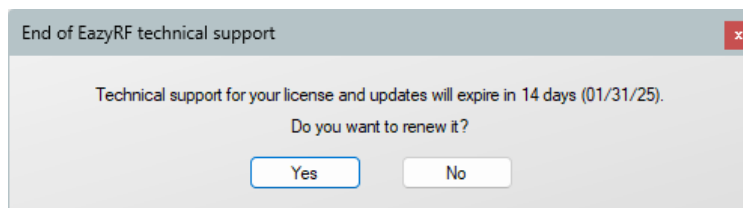

It is displayed during the period of 28 days before the end of support until 28 days after (closes automatically after 15 seconds). By accepting the renewal, the payment module is displayed:

Renewal Technical Support

EazyRF V4

Frequencies calculation software for RF equipment


Annual renewal of technical support


License name: Régis Banville
License no: 2E1 -400H
End of support: 01/31/25


EazyRF license - Quebec (GST and PST)

1 License - \$120

1 License	\$120.00
Subtotal	\$120.00
Taxes	\$17.97
Total	\$137.97



 Debit or Credit Card

Powered by 

EazyRF applies taxes if necessary, depending on the user's place of residence. For residents outside of Canada, no taxes apply.

If a user has more than one license with the same renewal date, a list of license numbers is displayed, and the renewal price is adjusted:

License name: Jacques (3 lic)
KR26-- -3160
KR26-- -3163
KR26-- -3164
End of support: 02/05/25

EazyRF license - Quebec (GST and PST)

3 Licenses and more - \$240


3 Licenses and more	\$240.00
Subtotal	\$240.00
Taxes	\$35.94
Total	\$275.94

Outside the period of plus or minus 28 days from the end of support date, the payment module can be called by double-clicking on the end of support date in the “About” window:



Appendix 1 – Reading IAS files

EazyRF can now read IAS version 5 files. Just open a document as usual:

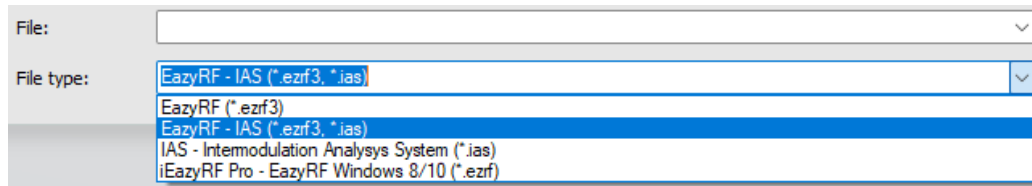


By default EazyRF offers both file types, *.ezrf3 and *.ias. The selection made is saved for future use.

The IAS data read are:

- Zones, which become groups in partial evaluation without intermodulation calculations
- Assignments, which become sections
- Frequencies, which are grouped by device
- TV channels
- Sampling data
- Band 71 frequency exclusion zones only
- The activation of the global 2 TX and 3 TX intermodulations

New parameters are displayed in the global options for an IAS document type only:



Appendix 2 – WMAS Devices

EazyRF now supports devices using WMAS (Wireless Multichannel Audio Systems) mode transmission.

Initially, Shure ADPSM devices will be supported. Subsequently, Sennheiser Spectera devices will follow, when the documentation is published.

Shure ADPSM

The Shure Axient Digital PSM series supports four transmission modes: Wideband multichannel, narrowband, analog FM and standard.

The “Multichannel Wideband” mode is new and uses WMAS, allowing the transmission of four stereo audio channels on the same frequency.

It goes without saying that the bandwidth used is greater than that of a standard device, but less than using four separate frequencies.

Definition of an ADPSM device

The device list editor has been adapted to this new operating mode:

Add Var Add Fix Duplicate Edit Delete

Shure ADTD PSM X57 P2 FM
Shure ADTD PSM X57 P2 NB
Shure ADTD PSM Z16 P1 FM
Shure ADTD PSM Z16 P1 NB
Shure ADTD PSM Z16 P2 FM
Shure ADTD PSM Z16 P2 NB
TV Shure ADTQ PSM G53 FM
TV Shure ADTQ PSM G53 NB
TV Shure ADTQ PSM G54 FM
TV Shure ADTQ PSM G54 NB
TV Shure ADTQ PSM G55 FM
TV Shure ADTQ PSM G55 NB
TV Shure ADTQ PSM G56 4CH
TV Shure ADTQ PSM G56 FM
TV Shure ADTQ PSM G56 NB
TV Shure ADTQ PSM G56J FM
TV Shure ADTQ PSM G56J NB
TV Shure ADTQ PSM G56K FM
TV Shure ADTQ PSM G56K NB
TV Shure ADTQ PSM G57 4CH
TV Shure ADTQ PSM G57 FM
TV Shure ADTQ PSM G57 NB
TV Shure ADTQ PSM G63 4CH
TV Shure ADTQ PSM G63 FM
TV Shure ADTQ PSM G63 NB
TV Shure ADTQ PSM H54 4CH
TV Shure ADTQ PSM H54 FM
TV Shure ADTQ PSM H54 NB
TV Shure ADTQ PSM K54 4CH
TV Shure ADTQ PSM K54 FM
TV Shure ADTQ PSM K54 NB
TV Shure ADTQ PSM K55 4CH
TV Shure ADTQ PSM K55 FM
TV Shure ADTQ PSM K55 NB
TV Shure ADTQ PSM K56 FM
TV Shure ADTQ PSM K56 NB
Shure ADTQ PSM K58 4CH
Shure ADTQ PSM K58 FM
Shure ADTQ PSM K58 NB
TV Shure ADTQ PSM K60 4CH

Model
☒ Source
☐ Based on:

Type:
 In-Ear

Power Level:

Simult Freq Nb:

Start:

Stop:

Increment:

5511 Freq

Tolerance 2 TX:

Tolerance 3 TX:

Separation:

Image Frequency:
 If undefined, none

Filter:

Auto Interference limit:

TV Channels:
 15 (476-482 MHz) CKMI Gl
 17 (488-494 MHz) CJNT Cit
 19 (500-506 MHz) CBFT R-
 21 (512-518 MHz) CBMT CE
 26 (542-548 MHz) CIVM T-4

☒ Active

Operating mode

Channels Nb:

Save Cancel

The operating mode can be defined by:


Operating mode

WMAS ADPSM

Standard

WMAS ADPSM

As well as the number of audio channels in WMAS ADPSM mode:

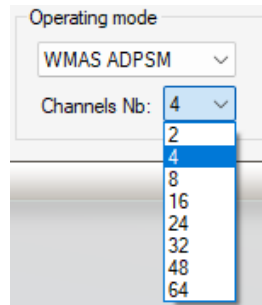


The parameters used are those recommended by Shure in standard mode.

For the moment, Shure uses only two ADPSM models: the 2-channel stereo ADTD and the 4-channel stereo ADTQ.

The frequency bands used are quite like those of standard devices.

Using an ADPSM device


If we add a Shure ADTQ PSM G57 4CH to EazyRF, we get:

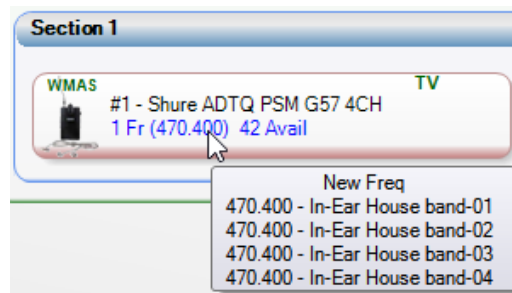

No	Description	1 Freq (4 A)
1.1	In-Ear House band-01	470.400 14
1.2	In-Ear House band-02	470.400 14
1.3	In-Ear House band-03	470.400 14
1.4	In-Ear House band-04	470.400 14

The four audios are on the same frequency, and we see an indicator to illustrate the locking of these, if we change the value of the frequency, it changes for the 4 audios.

The "Intermodulations" module displays a representation of the spectrum occupied by a frequency using WMAS mode compared to a standard frequency.

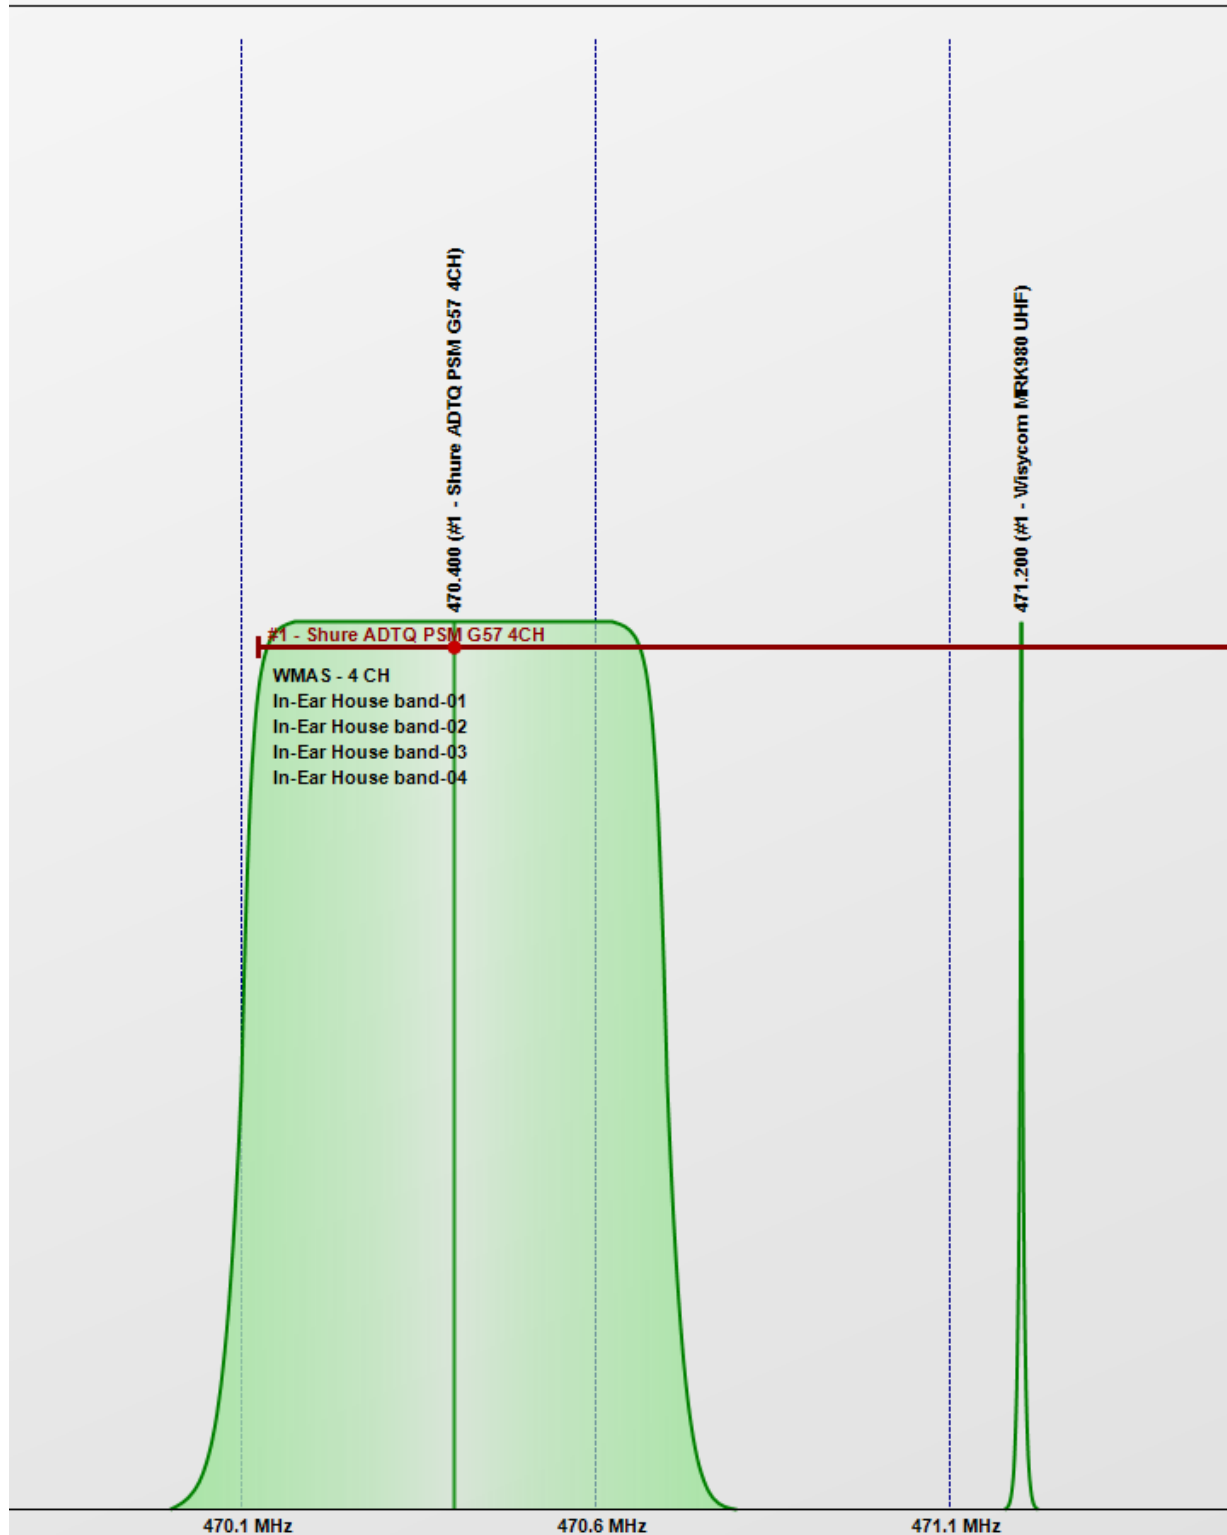

It should be noted that the value of an ADPSM frequency must be aligned with a TV channel. It must start at least 400 kHz from the start frequency of a channel and end at least 400 kHz from the end of the channel. It is not possible to program a frequency that overlaps two channels, EazyRF handles these restrictions.

Equipment Module

The Equipment Module allows you to assign ADPSM equipment to the Shure Wireless Workbench 7.4 and later file:

In Ear (6)								
Model	ID	Band	Channel	Name	Freq	EazyRF devices		EazyRF Freq
ADTD PSM 4CH	ADTD 1	G57 (470.125 - 607.875)	Ch 1	Spare-5	471.200	#1 - Shure ADTD PSM G57 4CH		471.200 - Spare-5
ADTD PSM 4CH	ADTD 1	G57 (470.125 - 607.875)	Ch 2	Spare-6	471.200			471.200 - Spare-6
ADTQ PSM 4CH	ADTQ 1	G57 (470.125 - 607.875)	Ch 1	Band-01	470.400	#1 - Shure ADTQ PSM G57 4CH		470.400 - Band-01
ADTQ PSM 4CH	ADTQ 1	G57 (470.125 - 607.875)	Ch 2	Band-02	470.400			470.400 - Band-02
ADTQ PSM 4CH	ADTQ 1	G57 (470.125 - 607.875)	Ch 3	Band-03	470.400			470.400 - Band-03
ADTQ PSM 4CH	ADTQ 1	G57 (470.125 - 607.875)	Ch 4	Band-04	470.400			470.400 - Band-04

Devices List

The list of Shure ADPSM devices is available on the website. To perform the update, simply use the function: Options / Devices / Update and click on the “Additional Devices” command (bottom left). The new devices are available in the Shure ADPSM file. See user manual section 10.6 for detailed operation.

Sennheiser Spectera

Sennheiser has developed a new WMAS mode device with a capacity of 64 audio channels (32 inputs, 32 outputs) using two wideband RF carriers (6 or 8 MHz) in the UHF or 1G4 band. This device transmits and receives multiple audio signals simultaneously.

Currently there is only one handheld receiver/transmitter available, the Spectera SEK, in the UHF or 1G4 band. This bidirectional bodypack allows audio reception (IEM/IFB) and mic/line audio transmission.

The Spectera base can transmit in both UHF or 1G4 bands, but the transceivers in only one.

The user must have a license for use (included with purchase) and it is only valid in one country.

The Spectera occupies a wide RF bandwidth and does not generate intermodulations like a TV transmitter.

EazyRF supports Spectera in the same way as TV channels, i.e. the user must determine which channels to use. EazyRF allows you to select a channel from a scan file data, which makes it easier to use.

EazyRF's Spectera support is very similar to TV channel management, you don't calculate the frequencies used, you assign them. And EazyRF takes care of not allocating frequencies in these frequency bands.

Definition of a Spectera device

A new operating mode has been added to the equipment list editor:

The screenshot shows the 'Equipment List Editor' window. On the left, a list of devices is shown, with 'Sennheiser Spectera CA UHF' selected. On the right, the configuration panel for this device is displayed. The 'Model' is 'BTR-800'. The 'Type' is 'BTR-800'. The 'Power Level' is '1' and 'Simult Freq Nb' is '2'. The 'Start' frequency is '0.000' and the 'Stop' frequency is '0.000'. The 'Increment' is '0.000'. The 'Image Frequency' is '10.70' and the 'Filter' is '16.00'. The 'Auto Interference limit' is '0.000'. The 'Tolerance 2 TX' is '100' and the 'Tolerance 3 TX' is '50'. The 'Separation' is '300'. The 'Active' checkbox is checked. The 'Operating mode' dropdown menu is open, showing 'Standard', 'WMAS ADPSM', and 'WMAS SPECTERA' (which is highlighted by the mouse cursor). The 'Save' and 'Cancel' buttons are at the bottom right.

After selecting the WMAS SPECTERA operating mode, a region and frequency band selection appears:

Spectera region/band:

- Canada UHF 470-608, 657-663 MHz
- Canada UHF 470-608, 657-663 MHz
- Europe UHF 470-608, 630-698 MHz
- Europe 1G4 1350-1400 MHz
- Europe UHF 470-608, 630-698 MHz;
1G4 1350-1400 MHz
- United States UHF 470-608, 657-663 MHz
- United States 1G4 1435-1525 MHz
- United States UHF 470-608, 657-663 MHz;
1G4 1435-1525 MHz

Sennheiser offers 12 license zones (countries and regions), EazyRF only covers Canada, USA and Europe. Since Sennheiser's SEK transceiver only covers one frequency band (UHF or 1G4), a preselection was chosen by EazyRF. Please note that the 1G4 band is not available in Canada.

All standard device settings are disabled because they do not apply:

Model

☒ Source

☐ Based on:

Type:

Spectera

Power Level: 1

Simult Freq Nb: 1

Start:

Stop:

Increment: 0.025

Spectera region/band:

Canada UHF 470-608, 657-663 MHz

☒ Active

Operating mode

WMAS SPECTERA

Channels Nb:

1-50 mw
2 TX: 0 kHz
3 TX: 0 kHz
5 TX: 0 kHz

Image Frequency:
If undefined,
none

Filter:

Auto Interference limit:

Save

Cancel

Using a Spectera device

The Sennheiser Spectera offers 7 reception modes (mic/line), 4 transmission modes (IEM/IFB) mono and 4 other stereo modes.

When adding a Spectera device, a window allows you to define the desired mode and the number of channels:

#1 - Sennheiser Spectera CA UHF - Canada UHF 470-608, 657-663 MHz

Section 1 - Group 1

Description: Scans

RF1: RF2: Bandwidth: 6 Margins: 0.000 MHz

RF1 and RF2: center frequencies in MHz or channel number

Mic/line: Mono link modes (RX)

Raw Low Latency, Max: 16, 12.5 %, PCM, Latency: 1.0 ms, Range: Reduced	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Raw, Max: 32, 6.25 %, PCM, Latency: 1.6 ms, Range: Reduced	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Live Low Latency, Max: 16, 12.5 %, SeDAC, Latency: 1.0 ms, Range: Extended	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Live, Max: 32, 6.25 %, SeDAC, Latency: 1.6 ms, Range: Extended	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Live Link Density, Max: 64, 3.13 %, SeDAC, Latency: 2.7 ms, Range: Standard	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Max Range, Max: 32, 6.25 %, OPUS, Latency: 9.9 ms, Range: Maximum	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Max Link Density, Max: 128, 0.78 %, OPUS, Latency: 15.2 ms, Range: Reduced	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>

IEM/IFB: Mono link modes (TX)

Live, Max: 32, 6.25 %, SeDAC, Latency: 1.6 ms, Range: Extended	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Live Link Density, Max: 64, 3.13 %, SeDAC, Latency: 2.7 ms, Range: Standard	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Max Range, Max: 32, 6.25 %, OPUS, Latency: 9.9 ms, Range: Maximum	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Max Link Density, Max: 128, 0.78 %, OPUS, Latency: 15.2 ms, Range: Reduced	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>

IEM/IFB: Stereo link modes(TX)

Live Ultra Low Latency, Max: 8, 25 %, SeDAC, Latency: 0.7 ms, Range: Extended	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Live Low Latency, Max: 16, 12.5 %, SeDAC, Latency: 1.1 ms, Range: Extended	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Live, Max: 32, 6.25 %, SeDAC, Latency: 1.6 ms, Range: Standard	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>
Live Link Density, Max: 64, 3.13 %, SeDAC, Latency: 2.7 ms, Range: Reduced	Quantity: 0 <input type="text"/> <input type="button" value="↑"/> <input type="button" value="↓"/>

1 Base
F1: 0.00 %, F2: 0.00 %

OK Cancel

After defining the number of channels, the relevant area opens to allow information to be entered:

Raw, Max: 32, 6.25 %, PCM, Latency: 1.6 ms, Range: Reduced					Quantity: 4
Description: Loud					
1	RF-1	Ch-1	Vocal 1		
2	RF-1	Ch-2	Vocal 2		
3	RF-1	Ch-3	Vocal 3		
4	RF-1	Ch-4	Vocal 4		

You can define the RF frequency used (1 or 2), the channel (1 to 32), the description and a comment.

RF-1 ▾
 RF-1
 RF-2

Ch-1 ▾
 Ch-1
 Ch-2
 Ch-3
 Ch-4
 Ch-5
 Ch-6
 Ch-7
 Ch-8
 Ch-9
 Ch-10
 Ch-11
 Ch-12
 Ch-13
 Ch-14
 Ch-15
 Ch-16
 Ch-17
 Ch-18
 Ch-19
 Ch-20
 Ch-21
 Ch-22
 Ch-23
 Ch-24
 Ch-25
 Ch-26
 Ch-27
 Ch-28
 Ch-29
 Ch-30
 Ch-31
 Ch-32

As with the “Description” column, the ‘RF’ or “CH” column can be duplicated or incremented, with these differences: the left mouse button opens the drop-down selection box, so the right mouse button must be used. In addition, the RF column can only be duplicated, while the Ch column can only be incremented.

To increment, use Ctrl + Alt and to duplicate, Alt only.

Note that each transmission mode has a limited number of usable channels.

Transmit frequencies

The use of a Spectera in the UHF band comes with restrictions depending on the regulations of each country. The main use of the UHF band remains the transmission of television signals. Therefore, it is necessary to follow the rules of the transmission mode of each country.


In Canada and the USA, TV signals occupy a 6 MHz band. In Europe, they are mainly transmitted on 8 MHz channels, with a few exceptions.

Even though the Spectera can transmit on frequencies that vary in increments of 0.025 MHz, Sennheiser has opted to use it consistently with TV channels.

In North America, the maximum bandwidth used by the Spectera is 6 MHz. In Europe, regulations allow the use of a 6 or 8 MHz band.

So, for use in UHF mode, the values of the transmission frequencies (or channels) will be based on the alignment of TV channel frequencies.

Enter F1 and F2 frequencies:

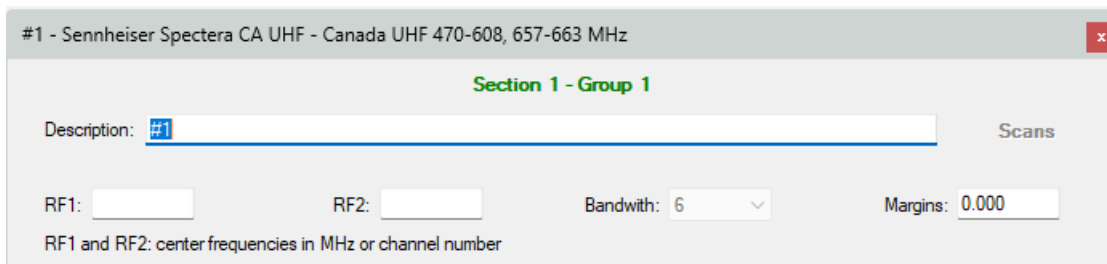

#1 - Sennheiser Spectera CA UHF - Canada UHF 470-608, 657-663 MHz

Section 1 - Group 1

Description: Scans


RF1: RF2: Bandwidth: 6 Margins: 0.000

RF1 and RF2: center frequencies in MHz or channel number

EazyRF uses the median value of a TV channel's bandwidth, so for channel 14 in North America (470-476 MHz), the frequency value is 473 MHz. The entry is simplified, whatever value is entered between 470 and 476, it will be adjusted to 473 MHz. You can also enter a channel number to display its frequency, in this case 14 will give 473 MHz.

In North America, the "Duplex Gap" (657-663 MHz) can also be used.


A value can also be assigned from the document or group scan file:

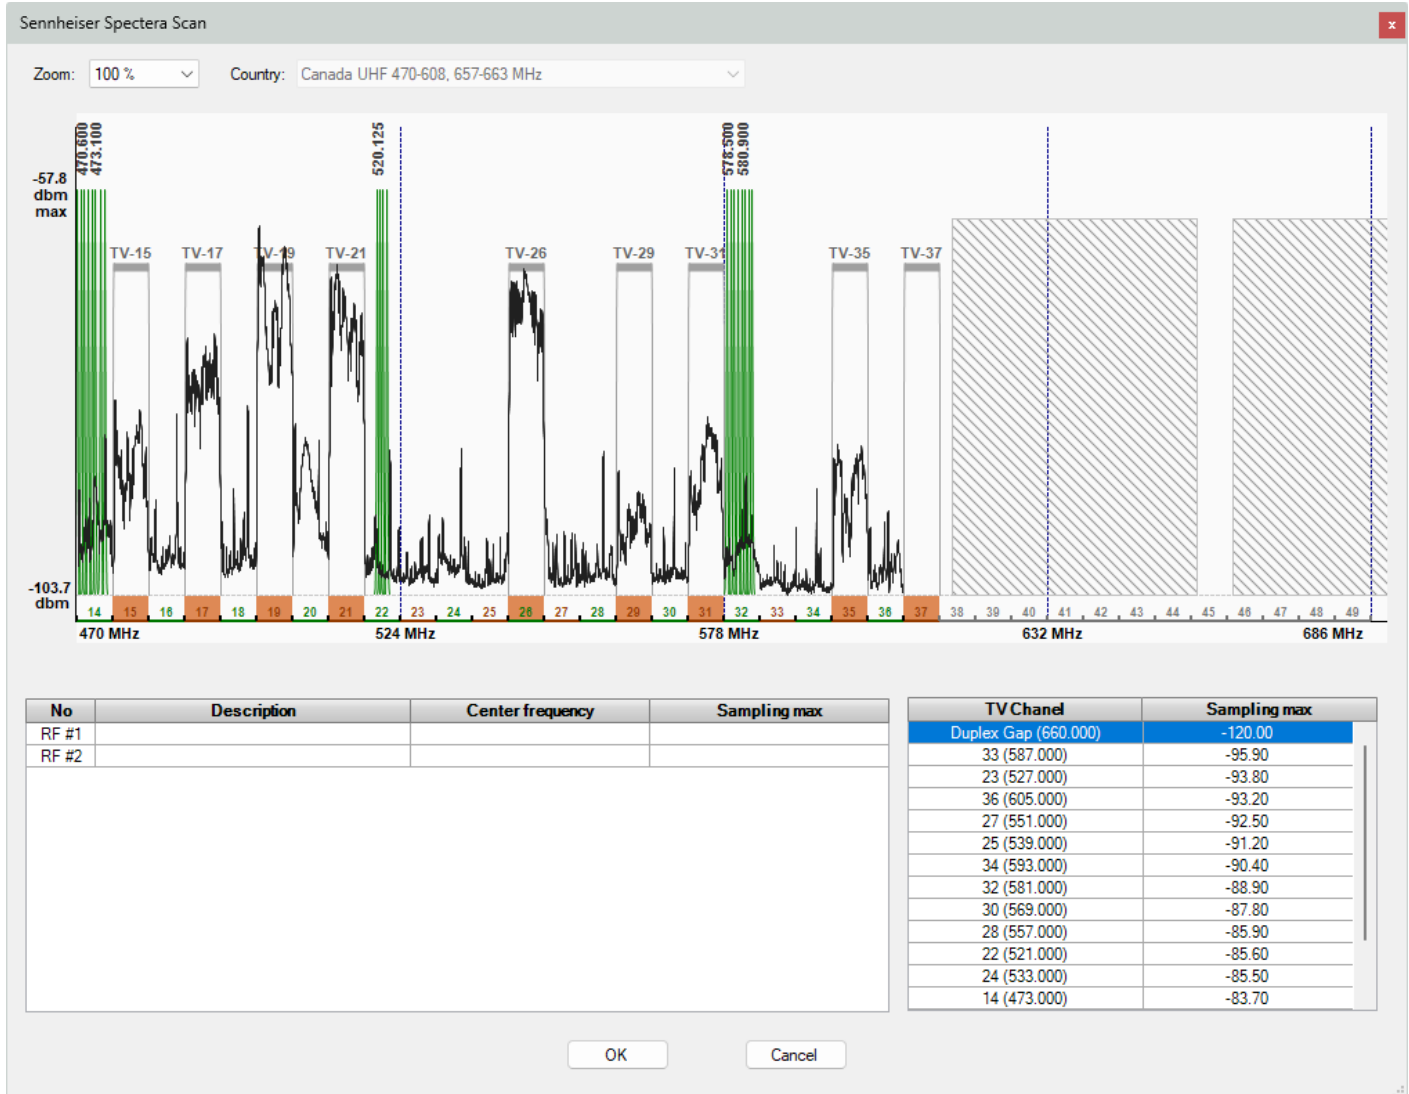

EazyRF makes an evaluation of the sampling level for each unused TV channel and ranks the list in ascending order of the maximum values found. Simply drag a selection onto the F1 or F2 frequency table.

Using a Spectera device

If we add a Sennheiser Spectera Canada UHF, we get this after defining RF1 and RF2 and using a few channels:

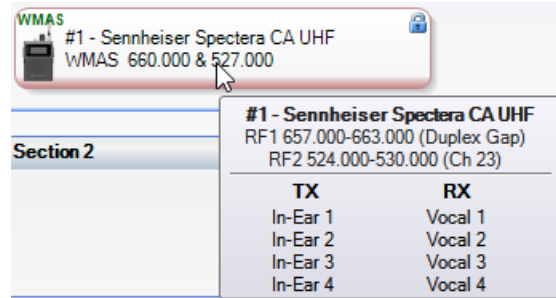

Mic/line: Mono link modes (RX)

Raw Low Latency, Max: 16, 12.5 %, PCM, Latency: 1.0 ms, Range: Reduced Quantity: 0

Raw, Max: 32, 6.25 %, PCM, Latency: 1.6 ms, Range: Reduced Quantity: 4

Description: Loud

1	RF-1	Ch-1	Vocal 1
2	RF-1	Ch-2	Vocal 2
3	RF-1	Ch-3	Vocal 3
4	RF-1	Ch-4	Vocal 4

Live Low Latency, Max: 16, 12.5 %, SeDAC, Latency: 1.0 ms, Range: Extended Quantity: 0

Live, Max: 32, 6.25 %, SeDAC, Latency: 1.6 ms, Range: Extended Quantity: 0

Live Link Density, Max: 64, 3.13 %, SeDAC, Latency: 2.7 ms, Range: Standard Quantity: 0

Max Range, Max: 32, 6.25 %, OPUS, Latency: 9.9 ms, Range: Maximum Quantity: 0

Max Link Density, Max: 128, 0.78 %, OPUS, Latency: 15.2 ms, Range: Reduced Quantity: 0


IEM/IFB: Mono link modes (TX)

Live, Max: 32, 6.25 %, SeDAC, Latency: 1.6 ms, Range: Extended Quantity: 4

Description: Loud

1	RF-1	Ch-11	In-Ear 1
2	RF-1	Ch-12	In-Ear 2
3	RF-1	Ch-13	In-Ear 3
4	RF-1	Ch-14	In-Ear 4

And in the “Intermodulations” view:

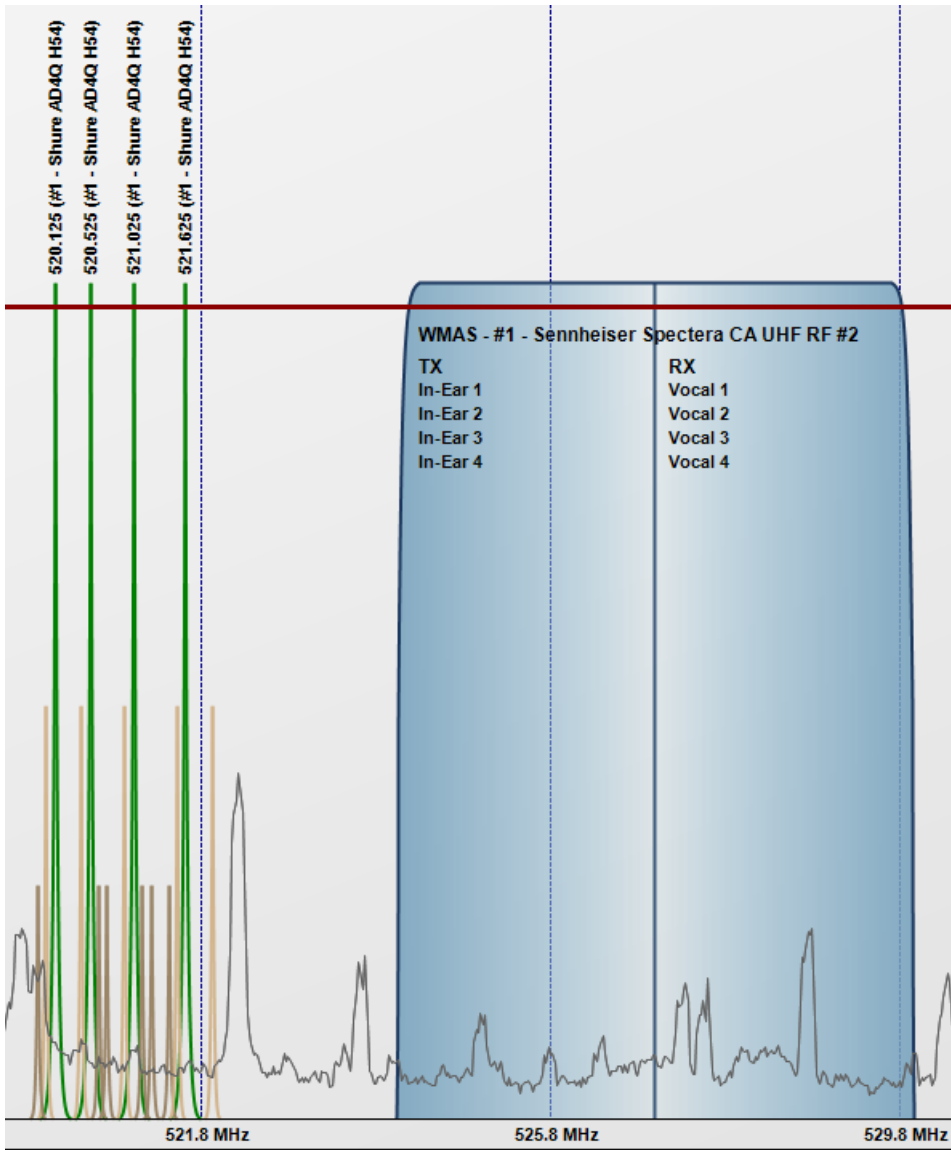

And the report:

Group 1			
Section 1			
#1 - Sennheiser Spectera CA UHF			
RF1 657.000-663.000 (Duplex Gap), RF2 524.000-530.000 (Ch 23)			
RX: Raw Loud			
Vocal 1	RF-1, Ch-1	RF-1, Ch-2	Vocal 2
Vocal 3	RF-1, Ch-3	RF-1, Ch-4	Vocal 4
TX: Live Loud			
In-Ear 1	RF-1, Ch-11	RF-1, Ch-12	In-Ear 2
In-Ear 3	RF-1, Ch-13	RF-1, Ch-14	In-Ear 4

Devices list

The list of devices for Canada UHF, USA UHF, USA 1G4, Europe UHF and Europe 1G4 is available on the website. To update, simply go to Options / Devices / Update and click on the “Additional devices” command (bottom left). The new devices are available in the Sennheiser Spectera file. See section 10.6 of the user guide for detailed instructions.